



DPA-xxxx series
Digital Video Recorder

User Manual

UD.7L0202D1601B01

Thank you for purchasing our product. If there is any question or request, please do not hesitate to contact dealer.

This manual is applicable to:

DPA-0440L, DPA-0848L

DPA-0448M, DPA-16128M

DPA-08200M, DPA-16400L

This manual may contain several technically incorrect places or printing errors, and the content is subject to change without notice. The updates will be added into the new version of this manual. We will readily improve or update the products or procedures described in the manual.

Regulatory information

FCC information

FCC compliance: This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement



This product and – if applicable – the supplied accessories too are marked with “CE” and comply therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2006/95/EC, the EMC Directive 2004/108/EC, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery

to your supplier or to a designated collection point. For more information see:
www.recyclethis.info.

Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:

- Ensure unit is installed in a well-ventilated, dust-free environment.
- Unit is designed for indoor use only.
- Keep all liquids away from the device.
- Ensure environmental conditions meet factory specifications.
- Ensure unit is properly secured to a rack or shelf. Major shocks or jolts to the unit as a result of dropping it may cause damage to the sensitive electronics within the unit.
- Use the device in conjunction with an UPS if possible.
- Power down the unit before connecting and disconnecting accessories and peripherals.
- A factory recommended HDD should be used for this device.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.

Product Key Features

General

- PAL/NTSC adaptive video inputs.
- H.264 video compression with high reliability and superior definition.
- Each channel supports dual-stream.
- Main stream supports encoding at up to WD1 resolution; and sub-stream encoding at CIF/QCIF resolution.
- Independent configuration for each channel, including resolution, frame rate, bit rate, image quality, etc.
- The quality of the input and output video is configurable.
- Normal and event recording parameters configurable for per individual camera.
- Encoding for both audio/video composite stream and video stream; audio and video synchronization during composite stream encoding.
- Watermark technology.

Local Monitoring

- HDMI/VGA output at up to 1920×1080P resolution.
- 1/4/6/8/9/16-division live view is supported, and the display sequence of screens is adjustable.
- Live view screen can be switched in group, and manual switch and automatic cycle view is also provided, the interval of automatic cycle can be adjusted.
- Quick setting menu is provided for live view.
- The selected live view channel can be shielded.
- Motion detection, video tampering detection and video loss alarm functions.
- Privacy mask.

HDD Management

- 1 SATA hard disk can be connected, with a maximum of 4TB storage capacity.
- HDD quota management; different capacity can be assigned to different channels.

Recording and Playback

- Holiday recording schedule configuration.
- Normal and event video encoding parameters.
- Multiple recording types: manual, normal, motion, alarm, motion/alarm and motion & alarm.



The alarm, motion/alarm and motion & alarm recording types can be customized for DS-7200HI-SL model only.

- 8 recording time periods with separated recording types.
- Pre-record and post-record for motion detection for recording, and pre-record time for schedule and manual recording.
- Searching record files by event.
- Customization of tags, searching and playing back by tags.
- Locking and unlocking record files.
- Searching and playing back record files by channel number, recording type, start time, end time, etc.

- Smart search for the selected area in the video.
- Zooming in when playback.
- Playing reversely.
- Supports pause, slow forward, fast forward, skip forward, and skip backward when playback, locating by dragging the mouse.
- Up to 4/8/16-ch synchronous playback.

Backup

- Export video data by USB storage device.
- Export video clips when playback.
- Management and maintenance of backup devices.

Alarm and Exception

- Alarm for video loss, motion detection, tampering, video input/output standard mismatch, illegal login, network disconnected, IP confliction, HDD error, and HDD full, etc.
- Alarm event triggers full screen monitoring, audio alarm, notifying surveillance center and sending email.
- Automatic restore when system is abnormal.

Other Local Functions

- Operable by mouse.
- Three-level user management; admin user is allowed to create many operating accounts and define their operating permission, which includes the limit to access any channel.
- Operation, exceptions and log recording and searching.
- Import and export of device configuration information.

Network Functions

- 1 self-adaptive 10M/100Mbps network interface.
- IPv6 is supported.
- TCP/IP protocol, PPPoE, DHCP, DNS, DDNS, NTP, SADP, SMTP, UPnP™, RTSP are supported.
- Extranet access by HiDDNS.
- Support access by Cloud P2P.
- TCP, UDP and RTP for unicast.
- Remote search, playback, download, locking and unlocking the record files, and downloading files broken transfer resume.
- Remote parameters setup; remote import/export of device parameters.
- Remote viewing of the device status, system logs and alarm status.
- Remote locking and unlocking of control panel and mouse.
- Remote HDD formatting and program upgrading.
- Remote system restart.
- Alarm event and exception information can be sent to the remote host.
- Remotely start/stop recording.
- Upgrade by remote FTP server.
- Two-way audio and voice broadcasting.
- Embedded WEB server.

Development Scalability

- SDK for Windows and Linux system.
- Source code of application software for demo.
- Development support and training for application system.

TABLE OF CONTENTS

Product Key Features	5
CHAPTER 1.....	11
Introduction.....	11
1.1 Front Panel	12
1.2 USB Mouse Operation	12
1.3 Input Method Description	13
1.4 Rear Panel	13
1.5 Starting Up and Shutting Down the Device	16
CHAPTER 2.....	18
Getting Started	18
2.1 Using the Wizard for Basic Configuration	19
2.2 Menu Operation	22
CHAPTER 3.....	23
Live View.....	23
3.1 Introduction of Live View	24
3.2 Operations in Live View Mode	25
3.2.1 Using the Mouse in Live View	25
3.2.2 Using an Auxiliary Monitor	26
3.2.3 Main/Aux Output Switching	26
3.2.4 Quick Setting Toolbar in Live View Mode	27
3.3 Adjusting Live View Settings.....	30
3.4 Channel-zero Encoding	32
3.5 User Logout	33
CHAPTER 4.....	34
PTZ Controls	34
4.1 Configuring PTZ Settings	35
4.2 Setting PTZ Presets, Patrols & Patterns	36
4.2.1 Customizing Presets	36
4.2.2 Calling Presets	37
4.2.3 Customizing Patrols	38
4.2.4 Calling Patrols	39
4.2.5 Customizing Patterns	40
4.2.6 Calling Patterns	41
4.3 Setting PTZ Presets, Patrols & Patterns	41
CHAPTER 5.....	43
Record Settings.....	43
5.1 Configuring Encoding Parameters	44
5.2 Configuring Record Schedule	46
5.3 Configuring Motion Detection Record	50
5.4 Configuring Alarm Triggered Record	53
5.5 Configuring Manual Record	55

5.6 Configuring Holiday Record.....	56
5.7 Files Protection	59
CHAPTER 6.....	61
Playback.....	61
6.1 Playing Back Record Files	62
6.1.1 Playing Back by Channel	62
6.1.2 Playing Back by Time	65
6.1.3 Playing Back by Normal Video Search.....	67
6.1.4 Playing Back by Event Search	69
6.1.5 Playing Back by Tag	72
6.1.6 Playing Back by System Log	76
6.2 Auxiliary Functions of Playback.....	79
6.2.1 Playing Back Frame by Frame	79
6.2.2 Smart Search	79
6.2.3 Digital Zoom	82
CHAPTER 7.....	84
Backup	84
7.1 Backing up Record Files	85
7.1.1 Backing up by Normal Video Search	85
7.1.2 Backing up by Event Search	88
7.1.3 Backing up Video Clips.....	91
7.2 Managing Backup Devices	93
CHAPTER 8.....	97
Alarm Settings.....	97
8.1 Setting Motion Detection	98
8.2 Setting Sensor Alarms	100
8.3 Detecting Video Loss	102
8.4 Detecting Video Tampering.....	103
8.5 Handling Exceptions	104
8.6 Setting Alarm Response Actions	106
8.7 Triggering or Clearing Alarm Output Manually	108
CHAPTER 9.....	109
Network Settings	109
9.1 Configuring General Settings.....	110
9.2 Configuring Advanced Settings	111
9.2.1 Configuring PPPoE Settings	111
9.2.2 Configuring Extranet Access	111
9.2.3 Configuring NTP Server	115
9.2.4 Configuring UPnP™	116
9.2.5 Configuring Remote Alarm Host	118
9.2.6 Configuring Multicast	118
9.2.7 Configuring RTSP	119
9.2.8 Configuring Server and HTTP Ports	119
9.2.9 Configuring Email.....	120

9.3 Checking Network Traffic.....	123
9.4 Network Detection	124
9.4.1 Testing Network Delay and Packet Loss	124
9.4.2 Exporting Network Packet	124
9.4.3 Checking Network Status	126
9.4.4 Checking Network Statistics	127
CHAPTER 10.....	128
HDD Management	128
10.1 Initializing HDDs.....	129
10.2 Configuring Quota Mode	130
10.3 Checking HDD Status	131
10.4 Checking S.M.A.R.T. Information.....	132
10.5 Detecting Bad Sector	133
10.6 Configuring HDD Error Alarms.....	134
CHAPTER 11.....	135
Camera Settings	135
11.1 Configuring OSD Settings	136
11.2 Configuring Privacy Mask.....	137
11.3 Configuring Video Parameters.....	138
CHAPTER 12.....	139
Device Management and Maintenance	139
12.1 Viewing System Information	140
12.1.1 Viewing Device Information.....	140
12.1.2 Viewing Camera Information.....	140
12.1.3 Viewing Record Information.....	140
12.1.4 Viewing Alarm Information.....	141
12.1.5 Viewing Network Information	141
12.1.6 Viewing HDD Information.....	142
12.2 Searching & Exporting Log Files	143
12.3 Importing/Exporting Configuration Files	145
12.4 Upgrading System.....	147
12.4.1 Upgrading by Local Backup Device	147
12.4.2 Upgrading by FTP	147
12.5 Restoring Default Settings	149
CHAPTER 13.....	150
Others.....	150
13.1 Configuring General Settings.....	151
13.2 Configuring DST Settings.....	152
13.3 Configuring More Settings.....	153
13.4 Managing User Accounts	154
13.4.1 Adding a User	154
13.4.2 Deleting a User.....	156
13.4.3 Editing a User.....	156
13.4.4 Changing Password of Admin.....	157

13.5 Logging out/Shutting down/Rebooting Device	159
CHAPTER 14.....	160
Appendix.....	160
Glossary	161
FAQ.....	162

C H A P T E R 1

Introduction

1.1 Front Panel

The front panel of DS-7100HWI/HVI-SL and DS-7100HWI/HVI-SH series DVR is shown in Figure 1.1:

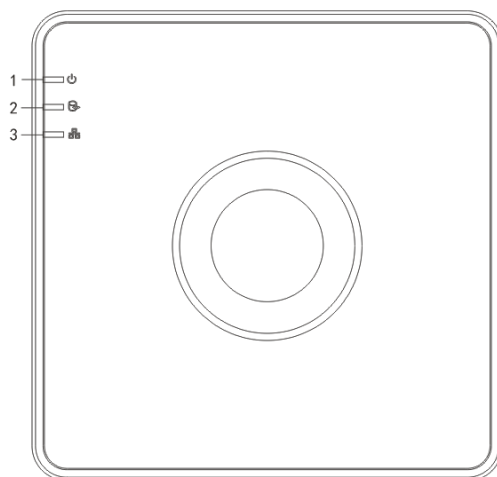


Figure 1.1 Front Panel of DPA-0440L/0848L/08200M/16400L

Table 1.1 Description of Indicators

No.	Icon	Description
1		Indicator turns red when DVR is powered up.
2		Indicator lights in red when data is being read from or written to HDD.
3		Indicator blinks blue when network connection is functioning properly.

1.2 USB Mouse Operation

A regular 3-button (Left/Right/Scroll-wheel) USB mouse can also be used with this device. To use a USB mouse:

1. Plug USB mouse into one of the USB interfaces on the rear panel of the device.
2. The mouse should automatically be detected. If in a rare case that the mouse is not detected, the possible reason may be that the two devices are not compatible, please refer to the recommended device list from your provider.

The operation of the mouse:

Table 1.2 Description of the Mouse Control

Name	Action	Description
Left-Click	Single-Click	Live view: Select channel and show the quick set menu. Menu: Select and enter a menu.
	Double-Click	Live view: Switch single-screen and multi-screen.
	Click and Drag	Tamper-proof, privacy mask and motion detection: Select target area. Digital zoom-in: Drag and select target area.

		Live view: Drag channel/time bar.
Right-Click	Single-Click	Live view: Show menu. Menu: Exit current menu to upper level menu.
Scroll-Wheel	Scrolling up	Live view: Previous screen. Right-click Menu: Previous item.
	Scrolling down	Live view: Next screen. Right-click Menu: Next item.

1.3 Input Method Description



Figure 1.2 Soft Keyboard

Description of the buttons on the soft keyboard:

Table 1.3 Description of the Soft Keyboard Icons

Icon	Description	Icon	Description
	Number		English letter
	Lowercase/Uppercase		Symbols
	Backspace		Space
	Enter		Exit
	English input method		

1.4 Rear Panel

DPA-0440L/0848L/08200M/16400L

The rear panel of DPA-0848L is shown below:

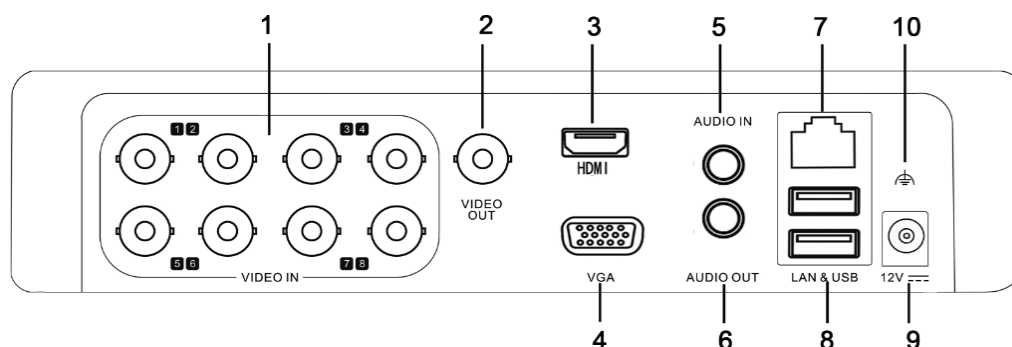


Figure 1.3 Rear Panel of DPA-0848L/08200M



- The DPA-0440L provides 4 video input interfaces and the DPA-16400L provides 16 video input interfaces on the rear panel.

Table 1.4 Description of Rear Panel

No.	Item	Description
1	VIDEO IN	BNC connector for analog video input.
2	VIDEO OUT	BNC connector for video output.
3	HDMI	HDMI video output.
4	VGA	DB15 connector for VGA output. Display local video output and menu.
5	AUDIO IN	RCA connector for audio input.
6	AUDIO OUT	RCA connector for audio output.
7	LAN Interface	RJ45 10M / 100M Ethernet interface.
8	USB Interface	Connects USB mouse or USB flash memory devices.
9	12V	12VDC power supply.
10	GND	Ground (needs to be connected when DVR starts up)

DPA-16128M

The rear panel of DPA-16128M is shown below:

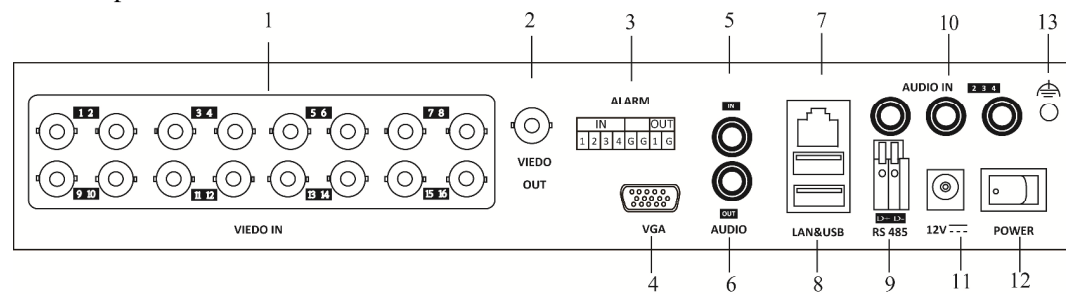


Figure 1.4 Rear Panel of DPA-16128M



The DPA-0448M provides 4 video input interfaces

Table 1.5 Description of Rear Panel

No.	Item	Description
1	VIDEO IN	BNC connector for analog video input.
2	VIDEO OUT	BNC connector for video output.
3	ALARM IN/OUT	Alarm input and output.
4	VGA	DB15 connector for VGA output. Display local video output and menu.
5	AUDIO IN	NO.1 RCA connector for audio input.
6	AUDIO OUT	RCA connector for audio output.
7	LAN Interface	RJ45 10M / 100M Ethernet interface.
8	USB Interface	Connects USB mouse or USB flash memory devices.
9	RS-485 Interface	Connector for RS-485 devices. Connect the D+ and D- terminals to R+ and R- terminals of PTZ receiver respectively.
10	AUDIO IN	RCA connector for audio output.
11	12V	12VDC power supply.
12	POWER	Switch for turning on/off the device.
13	GND	Ground (needs to be connected when DVR starts up)

1.5 Starting Up and Shutting Down the Device

Purpose:

Proper startup and shutdown procedures are crucial to expanding the life of the device.

Before you start:

Check that the voltage of the extra power supply is the same with the device's requirement, and the ground connection is working properly.

Starting up the device:

Check the power supply is plugged into an electrical outlet. It is **HIGHLY** recommended that an Uninterruptible Power Supply (UPS) be used in conjunction with the device.

For DPA-0440L/0848L/08200M/16400L series DVR, insert the power supply plug into the power connector on the rear panel and the device will start up; and for the DPA-0448M/16128M series DVR, turn on the power switch button on the rear panel after the power supply is connected. The Power indicator LED should turn red indicating that the device begins to start up.

Shutting down the device:

Steps:

1. Enter the Shutdown menu.

Menu > Shutdown

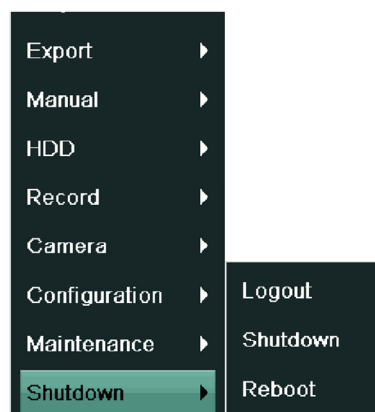


Figure 1.5 Shutdown Menu

2. Click the **Shutdown** button to enter the following dialog box:

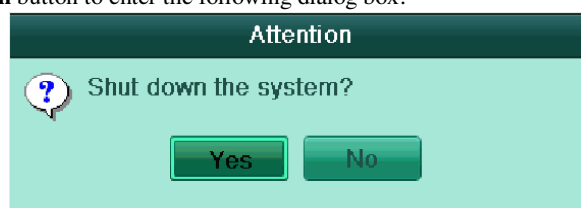


Figure 1.6 Dialog Box for Shutdown

3. Click the **Yes** button. The following message box pops up:

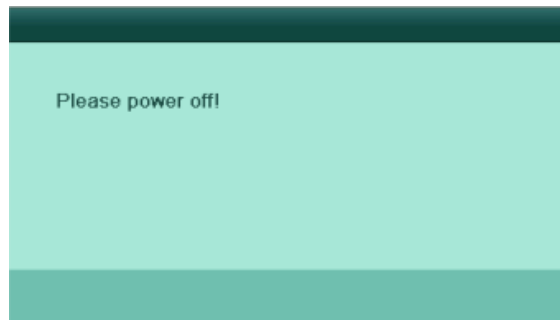


Figure 1.7 Message Box for Power Off

4. Disconnect the power supply of the device.

Rebooting the device

In the Shutdown menu (Figure 1.7), you can also click **Reboot** to reboot the device.

C H A P T E R 2

Getting Started

2.1 Using the Wizard for Basic Configuration

The Setup Wizard can walk you through some important settings of the device. By default, the Setup Wizard starts once the device has loaded.

Operating the Setup Wizard:

Steps:

1. You can set the system language after the device is started. Click **Apply** to save the language settings.

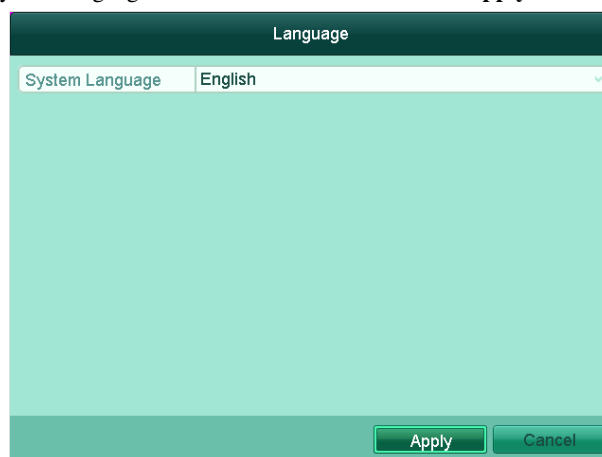


Figure 2.1 Select Language

2. The Setup Wizard will start after the language settings are configured. Check the checkbox to enable Setup Wizard when device starts. Click **Next** to continue the setup wizard.

You can also click **Cancel** to exit the Setup Wizard, or use the Setup Wizard next time by leaving the "Start wizard when device starts?" checkbox checked and exit.

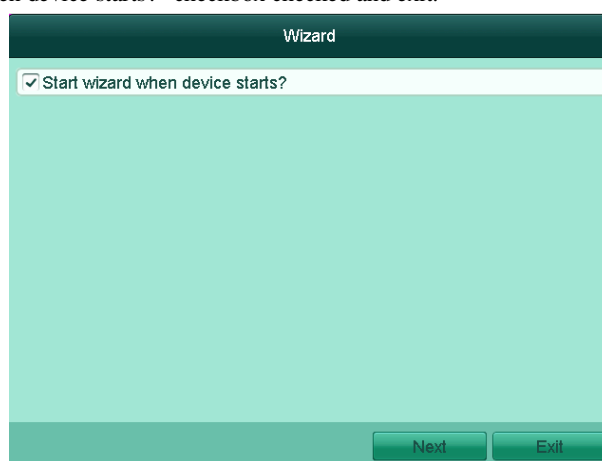


Figure 2.2 Start Wizard Interface

3. Click **Next** button on the Wizard window to enter the **Login** window, as shown in Figure 2.3.
 - 1) Enter the admin password. By default, the password is 12345.
 - 2) To change the admin password, check the **New Admin Password** checkbox. Enter the new password and confirm the password in the given fields.

Wizard	
Admin Password	
New Admin Password	☐
New Password	
Confirm	

Previous Next Exit

Figure 2.3 Login Window

4. Click the **Next** button to enter the **Date and Time** settings window, as shown in Figure 2.4. Set the time zone, date format, system date and system time.

Wizard	
Time Zone	(GMT+08:00) Beijing, Urumqi, Singapore
Date Format	DD-MM-YYYY
System Date	08-08-2013
System Time	08:52:28

Previous Next Exit

Figure 2.4 Date and Time Settings

5. Click **Next** button which takes you back to the **Network** Setup Wizard window, as shown in Figure 2.5. Set the network parameters, including the NIC type, IPv4 address, IPv4 subnet mask, default gateway, etc. You can enable the DHCP to automatically obtain an IP address and other network settings from that server.

Wizard	
NIC Type	10M/100M Self-adaptive
Enable DHCP	☐
IPv4 Address	172 .6 .21 .71
IPv4 Subnet Mask	255 .255 .255 .0
IPv4 Default Gateway	172 .6 .21 .1
Preferred DNS Server	
Alternate DNS Server	

Previous Next Cancel

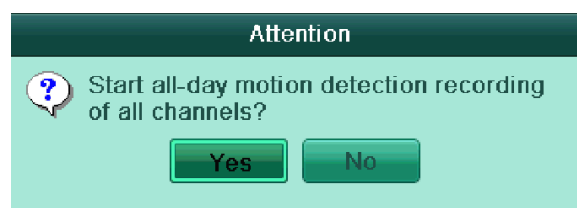


Figure 2.5 Network Configuration

6. Click **Next** button to enter the **HDD Management** window, shown in Figure 2.6.
To initialize the HDD, click the **Init** button. Initialization removes all the data saved in the HDD.



Figure 2.6 HDD Management

7. Click **Next** button to enter the **Record Settings** window, as shown in Figure 2.7.
 - 1) Select the camera to configure.
 - 2) Check the checkbox to enable **Start Recording**.
 - 3) Select the recording mode to Normal or Motion Detection.

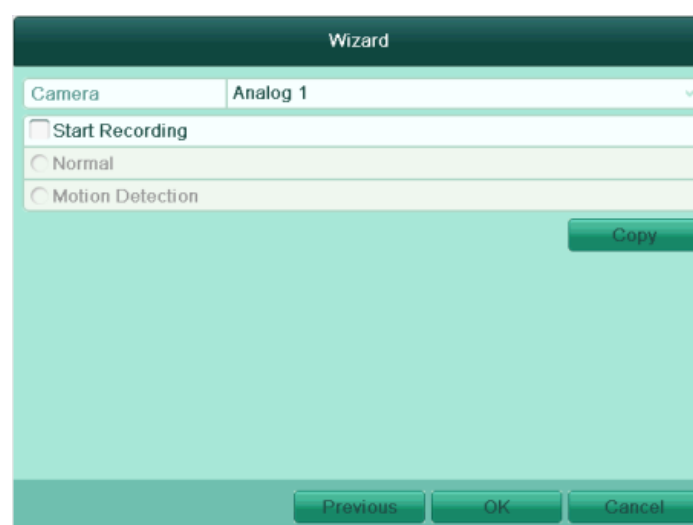


Figure 2.7 Record Settings

- 4) Click **Copy** to copy the record settings of the current camera to other camera (s) if needed, as

shown in Figure 2.8.



Figure 2.8 Copy Record Settings

- 5) Click **OK** to return to the **Record Settings** window.
8. Click **OK** to complete the startup Setup Wizard.

2.2 Menu Operation

After entering the local operation interface of the device, the main menu bar will be displayed on the top of the screen. You can click the icons to enter the corresponding submenus and perform the operations.

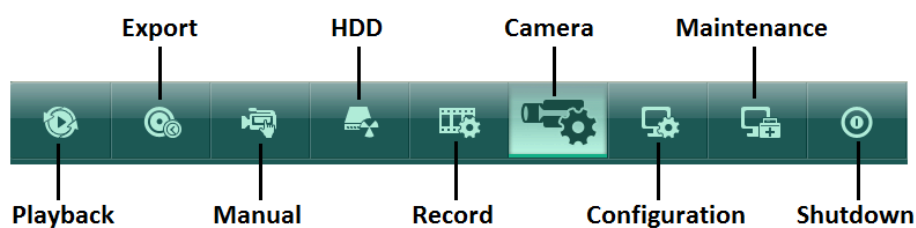


Figure 2.9 Main Menu Bar

The icon of the current submenu is marked in light green.

To exit from the main menu bar, right-click on the screen and you will go back to the live view interface.

C H A P T E R 3

Live View

3.1 Introduction of Live View

Live view shows you the video image getting from each camera in real time. The device automatically enters Live View mode when powered on. It is also at the very top of the menu hierarchy, thus pressing the ESC many times (depending on which menu you're on) brings you to the Live View mode.

Live View Icons

In the live view mode, there are icons at the right top of the screen for each channel, showing the status of the record and alarm in the channel, so that you can know whether the channel is recorded, or whether there are alarms occur as soon as possible.

Table 3.1 Description of Live View Icons

Icons	Description
	Alarm (video loss, tampering, motion detection alarm or sensor alarm)
	Record (manual record, schedule record , motion detection record or alarm triggered record)
	Alarm & Record

3.2 Operations in Live View Mode

In live view mode, the following functions can be realized:

- **Single Screen:** showing only one screen on the monitor.
- **Multi-screen:** showing multiple screens on the monitor simultaneously.
- **Auto-switch:** the screen is auto switched to the next one. And you must set the dwell time for each screen on the configuration menu before enabling the auto-switch.
Menu>Configuration>Live View>Dwell Time.
- **All-day Playback:** play back the recorded videos for current day.
- **Start Recording:** start all-day normal recording or motion detection recording for all channels.
- **Aux/Main Monitor switch:** the DVR will check the connection of the output interfaces to define the main and auxiliary output interfaces. When both HDMI and VGA are connected, , or either one is connected, the CVBS is used as the auxiliary video output for live view, recording and PTZ controls; When both HDMI and VGA are not connected, the CVBS is used as the main video output for live view playback, recording, PTZ control and menu operations.

When the aux output is enabled, you can do some basic operation on the live view mode for the Aux output, while no operation is allowed for the main output.

3.2.1 Using the Mouse in Live View

In the live view mode, right click on the screen or move the mouse to the bottom of the screen, the main menu button and the live view toolbar appears:




Figure 3.1 Menu under Live View Mode

Table 3.2 Mouse Operation in Live View

Icon	Name	Description
	Main Menu	Enter the main menu of the system.
	Single Screen	Switch to the single full screen live view mode.
	Multi-screen	Switch to multi-screen live view mode. The multi-screen icon varies according to the device models.
	Normal Record	Start all-day normal recording for all channels.
	Motion Detection Record	Start motion detection recording for all channels.

	All-day Playback	Play back the record video.
	Aux Monitor	Switch to the auxiliary output mode and the operation for the main output is disabled. If you enter Aux monitor mode and the Aux monitor is not connected, the mouse operation is disabled. You can use the mouse wheel to double-click for three times to switch back to the main video output.
	Output Mode	Set the video output mode to Standard, Bright, Gentle or Vivid.
	Previous Screen	Switch to the previous screen.
	Next Screen	Switch to the next screen.
	Start/Stop Auto-switch	Enable/disable the auto-switch of the screens. The dwell time of the live view configuration must be set before using Start Auto-switch.
	Lock/Unlock	Lock/unlock the toolbar.



If the corresponding camera supports intelligent function, the Reboot Intelligence option is included when right-clicking mouse on this camera.

3.2.2 Using an Auxiliary Monitor

Certain features of the Live View are also available while in an Aux monitor. These features include:

- **Single Screen:** Switch to the single full screen by choosing channel number from the dropdown list.
- **Multi-screen:** Adjust the screen layout by choosing from the dropdown list.
- **Previous Screen:** Switch to the previous screen.
- **Next Screen:** Switch to the next screen.
- **Menu Output Mode:** Set the video output mode to Standard, Bright, Gentle or Vivid.
- **Main Monitor:** Switch to the Main Output mode and the operation for the auxiliary output is disabled.



In the live view mode of the main output monitor, the menu operation is not available while Aux output mode is enabled.

3.2.3 Main/Aux Output Switching

When the HDMI/VGA output is configured as the main output, you can select **Aux Monitor** option from the right-click menu or perform the following way to switch to CVBS output as the main output.

Steps:

1. Use the mouse wheel to double-click on the HDMI/VGA output screen, and the following message box pops up:

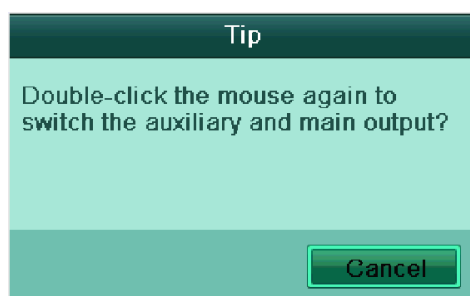


Figure 3.2 Switch Main and Aux Output

2. Use the mouse wheel to double-click on the screen again to switch to the Aux output, or click **Cancel** to cancel the operation.
3. On the aux output monitor, you can do some basic operation on the live view mode for the Aux output, including recording, live view, image settings, switch to main monitor, and no operation is allowed for the main output.
4. To switch to the main vide output, click the **Main Monitor** icon on the toolbar or use the mouse wheel to double-click on the screen and then click **Yes** on the pop-up message box.



You can select the Menu Output Mode under Menu > Configuration > General > More Settings to Auto or HDMI/VGA and then restart the device to switch the main output back to VGA output.

3.2.4 Quick Setting Toolbar in Live View Mode

On the screen of each channel, there is a quick setting toolbar which shows when you left-click mouse on the camera.



Figure 3.3 Quick Settings Toolbar

Table 3.3 Description of Quick Setting Toolbar Icons

Icons	Description	Icons	Description	Icons	Description
	Enable Manual Record		Instant Playback		Mute/Audio on
	PTZ Control		Digital Zoom		Image Settings
	Close				

Instant Playback



Instant Playback only shows the record in last five minutes. If no record is found, it means there is no record during the last five minutes.

Digital Zoom



Digital Zoom can zoom in the selected area to the full screen. You can left-click and draw to select the area for zooming in, as shown in Figure 3.4.



Figure 3.4 Digital Zoom

Image Settings



Image Settings icon can be selected to enter the Image Settings menu.

Steps:

1. Set the period of a day for configuring independent image parameters so as to satisfy different light conditions, e.g., daylight and night time. Two periods can be configured. When you have configured Period 1, the Period 2 is remained as the *Other Time*.
2. Select the mode from the drop-down menu according to different light conditions.
Four modes are selectable:
 - **Standard:** in general lighting conditions (default).
 - **Indoor:** the image is relatively smoother.
 - **Dim Light:** the image is smoother than the other three modes.
 - **Outdoor:** the image is relatively clearer and sharper. The degree of contrast and saturation is high.

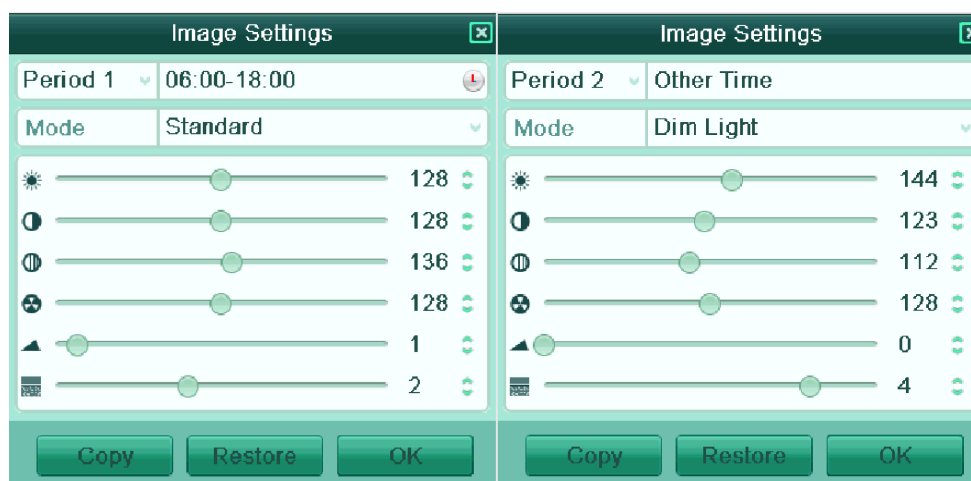


Figure 3.5 Image Settings

3. Adjust the image parameters including the brightness, contrast, saturation, hue, sharpness level and denoising level by moving the sliding bar or increasing/decreasing the value.



The adjustable value range is 0~255 for the brightness, contrast, saturation and hue, 0~15 for the sharpness level and 0~5 for the denoising level.

4. Copy image parameters.
 - 1) If you want to copy the image parameters of the current camera to other camera (s), click the **Copy** button to enter the **Copy to** interface:

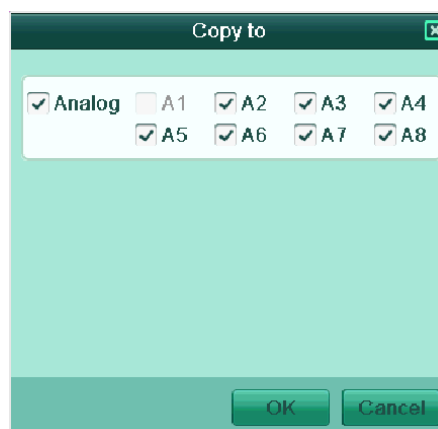


Figure 3.6 Copy Image Settings to Other Camera (s)

- 2) Select the camera (s) to be configured with the image settings. You can also click the checkbox of Analog to select all cameras.
- 3) Click the **OK** button to finish the Copy settings.



You can click the **Restore** button to restore the current image settings to default parameters.

3.3 Adjusting Live View Settings

Purpose:

Live View settings can be customized according to different needs. You can configure the output interface, dwell time for screen to be shown, mute or turning on the audio, the screen number for each channel, etc.

Steps:

1. Enter the Live View Settings interface.

Menu> Configuration> Live View

General View Channel-Zero Encoding	
Video Output Interface	VGA/HDMI
Live View Mode	1 + 7
Dwell Time	No Switch
Enable Audio Output	☐
Event Output	VGA/HDMI
Full Screen Monitoring Dwell Time	10s

Figure 3.7 Live View-General

The settings available in this menu include:

- **Video Output Interface:** Select the output to configure the settings for. Two output interfaces are selectable: VGA/HDMI and Main CVBS.
- **Live View Mode:** Select different window-division mode from the drop-down list.
- **Dwell Time:** The time in seconds to *dwell* between switching of channels when enabling auto-switch in Live View.
- **Enable Audio Output:** Enable/disable audio output for the selected video output.



- When the HDMI/VGA output interface is used as the main video output and the **Audio Output** for the HDMI/VGA output interface is enabled, the VGA audio and AUDIO OUT can be used for live view, playback and two-way audio.
- When the HDMI/VGA output is used as the main video output and the **Audio Output** for the HDMI/VGA output interface is disabled, the VGA output provides no audio and the AUDIO OUT is used for two-way audio.
- When the CVBS output is used as the main video output, the HDMI/VGA audio is provided for Aux video output in live view, and the AUDIO OUT is used as the main video output (for live view, playback or two-way audio).
- **Event Output:** Select the output to show event video.
- **Full Screen Monitoring Dwell Time:** The time in seconds to show alarm event screen.

2. Setting Camera Order

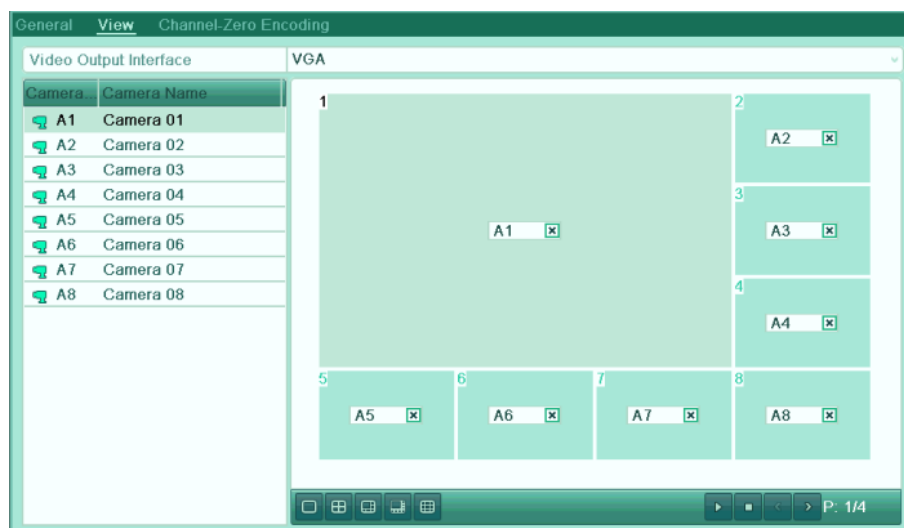


Figure 3.8 Live View- Camera Order

To set the camera order:

- 1) Click the **View** tab to enter the camera order settings interface.
- 2) Select an output interface and select a screen layout.
- 3) Click to select a screen in the right region and double-click to select a channel in the left region.
Thus the selected channel will be displayed in the corresponding screen.
- 4) You can click  to start live view of all channels and click  to stop live view of all channels. Click  or  to go to the previous or next page.
- 5) Click the **Apply** button to save the setting.

3.4 Channel-zero Encoding

Purpose:

Sometimes you need to get a remote view of many channels in real time from web browser or CMS (Client Management System) software, in order to decrease the bandwidth requirement without affecting the image quality, channel-zero encoding is supported as an option for you.

Steps:

1. Enter the **Live View** Settings interface.

Menu> Configuration> Live View

2. Select the **Channel-Zero Encoding** tab.

General	View	Channel-Zero Encoding
Enable Channel-Zero Encoding ☐		
Frame Rate		12fps ▾
Max. Bitrate Mode		General ▾
Max. Bitrate(Kbps)		1024 ▾

Figure 3.9 Live View- Channel-Zero Encoding

3. Check the checkbox after **Enable Channel-Zero Encoding**.

4. Configure the Frame Rate, Max. Bitrate Mode and Max. Bitrate.

After you set the Channel-Zero encoding, you can get a view in the remote client or Web browser of all the channels in one screen.

3.5 User Logout

Purpose:

After logging out, the monitor turns to the live view mode and if you want to do some operation, you need to enter user name and password to log in again.

Steps:

1. Enter the menu.
Menu>Shutdown

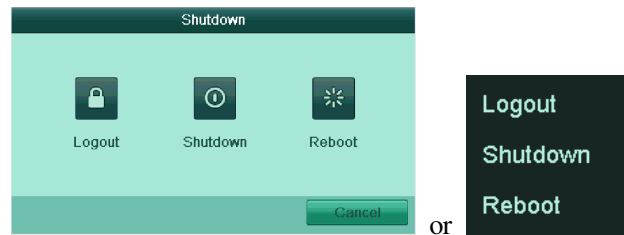


Figure 3.10 Shutdown

2. Click **Logout**.



After you have logged out the system, menu operation on the screen is invalid. It is required a user name and password to login the system.

C H A P T E R 4

PTZ Controls

4.1 Configuring PTZ Settings



The PTZ function is provided by the DPA-0448M/16128M model only.

Purpose:

Follow the procedure to set the parameters for PTZ. The configuring of the PTZ parameters should be done before you control the PTZ camera.

Before you start:

Check that the PTZ and the device are connected properly through RS-485 interface.

Steps:

1. Enter the PTZ Settings interface.

Menu>Camera>PTZ>General

General More Settings	
Camera	Analog 1 ▼
Baud Rate	9600 ▼
Data Bit	8 ▼
Stop Bit	1 ▼
Parity	None ▼
Flow Ctrl	None ▼
PTZ Protocol	HIKVISION ▼
Address	0
Address range: 0~255	

Figure 4.1 PTZ- General

2. Choose the camera for PTZ setting in the **Camera** dropdown list.
3. Enter the parameters of the PTZ camera.



All the parameters should be exactly the same as the PTZ camera parameters. Only PTZ Protocol can be set for network cameras.

Example: If the PTZ camera has a Baud rate as 115200, you should input 115200 in the Baud rate field.

4. Click **Copy** if you want to configure same settings to other PTZ cameras.
5. Click **Apply** button to save the settings.

4.2 Setting PTZ Presets, Patrols & Patterns

Before you start:

Please make sure that the presets, patrols and patterns should be supported by PTZ protocols.

4.2.1 Customizing Presets

Purpose:

Follow the steps to set the Preset location which you want the PTZ camera to point to when an event takes place.

Steps:

1. Enter the PTZ Control interface.

Menu>Camera>PTZ>More Settings



Figure 4.2 PTZ- More Settings

2. Use the directional button to wheel the camera to the location where you want to set preset.
3. Check the checkbox of **Save Preset**.
4. Click the preset number to save the preset.

Repeat the steps2-4 to save more presets. If the number of the presets you want to save is more than 17, you can click [...] and choose the available numbers.

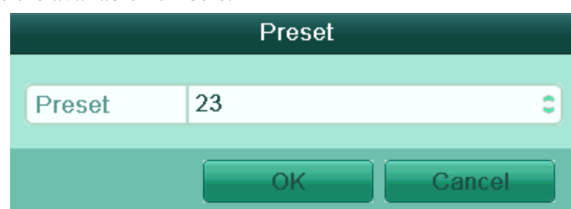


Figure 4.3 More Presets

4.2.2 Calling Presets

Purpose:

The view angle of the PTZ camera will be moved to the predefined position when you call a preset.

Call a preset on the PTZ setting interface:

Steps:

1. Enter the PTZ Control interface.
Menu> Camera> PTZ> More Settings
2. Check the checkbox of **Call Preset**.



Figure 4.4 PTZ- Call Preset

3. Choose the preset number.

Call a preset in live view mode:

Steps:

1. Click the PTZ Control icon  in the quick setting toolbar in the live view process, to open the PTZ control panel in live view mode.

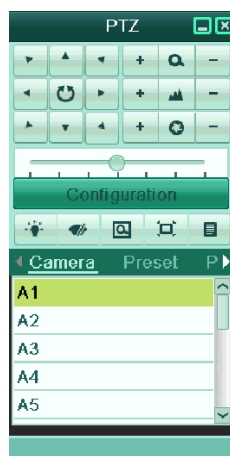


Figure 4.5 PTZ Toolbar

2. Click the **Camera** tab on the panel, and select the channel for control on the camera list.
3. Click the **Preset** tab on the panel, and double-click the preset you want to call on the preset list.

4.2.3 Customizing Patrols

Purpose:

A patrol is a scanning track specified by a group of user-defined key points, with the scanning speed between two key points and the duration time at each key point separately programmable. The key points are corresponding to the presets.

Steps:

1. Enter the PTZ Control interface.
Menu>Camera>PTZ>More Settings
2. Select patrol number.
3. Click  under Patrol option box to add key points for the patrol.

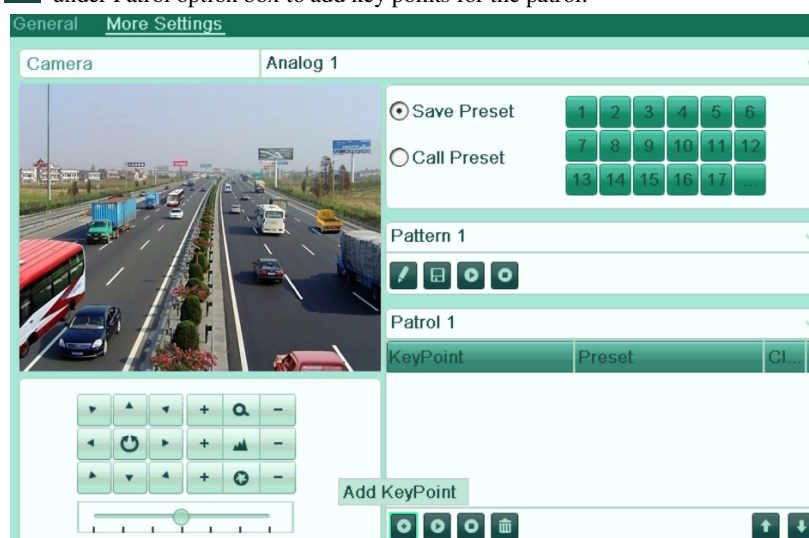


Figure 4.6 PTZ- Add Key Point

4. Configure key point parameters, such as the preset No., duration of staying for one key point and speed of patrol. The key point is corresponding to the preset. The **Preset** determines the order at which the PTZ will follow while cycling through the patrol. The **Duration** refers to the time span to stay at the corresponding key point. The **Speed** defines the speed at which the PTZ will move from one key point to the next.



Figure 4.7 Key point Configuration

5. Click **OK** to save the key point to the patrol.

Repeat the above steps to add more key points.

You can also click  to delete the corresponding key point and click  to delete all the key points.



Figure 4.8 KeyPoints Deletion

4.2.4 Calling Patrols

Purpose:

The PTZ camera will move according to the predefined patrol path when you call a patrol.

Call a patrol in the PTZ setting interface:

Steps:

1. In the PTZ setting interface.
Menu> Camera> PTZ> More Settings
2. Select the patrol number, and then click  to call the patrol.
3. Click  to stop it.



Figure 4.9 Calling Patrol

Call a patrol in live view mode:

Steps:

1. Press PTZ control on the IR remote, or click PTZ Control icon  on the quick setting toolbar, to show the PTZ control toolbar.
2. Choose **Patrol** on the control bar.
3. Click the patrol you want to call.



Figure 4.10 PTZ Panel- Patrol

4.2.5 Customizing Patterns

Purpose:

A pattern is a memorized, repeating series of pan, tilt, zoom, and preset functions.

Steps:

1. Enter the PTZ Control interface.
Menu>Camera>PTZ>More Settings
2. Choose pattern number in the option box.



Figure 4.11 PTZ- Pattern

3. Click , and use your mouse to drag the image or click the eight directional buttons in the control box under the image to move the PTZ camera. The movement of the PTZ is recorded as the pattern.
4. Click  to save the pattern.

Repeat the above steps to save more patterns.

4.2.6 Calling Patterns

Purpose:

The PTZ camera will move according to the predefined pattern path when you call a pattern.

Call a pattern in the PTZ setting interface

Steps:

1. Enter the PTZ Control interface.
Menu> Camera> PTZ> More Settings
2. Select the pattern number.
3. Click , then the PTZ moves according to the pattern. Click  to stop it.



Figure 4.12 PTZ- Calling Pattern

Call a pattern in live view mode.

Steps:

1. In the live view mode, press PTZ control on the IR remote control, or click PTZ Control icon  on the quick setting toolbar.
2. Choose **Pattern** on the control bar.
3. Double click the pattern number you want to call, or you can select the pattern number and click  to call the pattern.

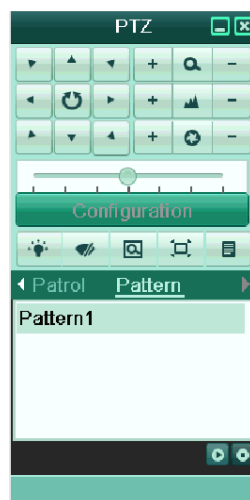


Figure 4.13 PTZ Panel- Pattern

4.3 Setting PTZ Presets, Patrols & Patterns

In the Live View mode, you can press the PTZ Control button on the IR remote control, or choose the PTZ

Control icon  to enter the PTZ toolbar.

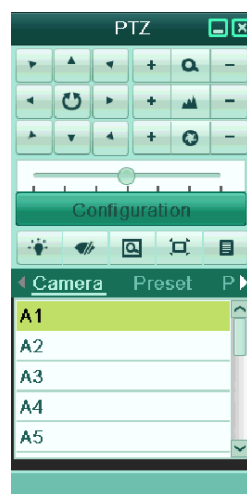


Figure 4.14 PTZ Toolbar

Table 4.1 Description of the PTZ toolbar icons

Icon	Description	Icon	Description	Icon	Description
	Direction button and auto-cycle button		Zoom+, Focus+, Iris+		Zoom-, Focus-, Iris-
	Speed bar of PTZ movement		Light on/off		Wiper on/off
	3D-zoom		Image Centralization		Menu
	Previous item		Next item		Start the pattern/patrol
	Stop patrol or pattern		Minimize PTZ panel		Exit
	Enter the PTZ settings menu				



You can click the Configuration button to enter the PTZ settings menu. Please refer to *Chapter 4.1 Configuring PTZ Settings* for details.

C H A P T E R 5

Record Settings

5.1 Configuring Encoding Parameters

Purpose:

By configuring the encoding parameters you can define the transmission stream type, the resolution and so on.

Before you start:

1. Make sure that the HDD has already been installed. If not, please install a HDD and initialize it.
(Menu>HDD>General)

HDD Information						
☐ Label	Capacity	Status	Property	Type	Free Space	Delete
☐ 1	931.51GB	Normal	R/W	Local	897GB	

Figure 5.1 HDD- General

2. Check the storage mode of the HDD.
 - 1) Click **Advanced** to check the storage mode of the HDD.
 - 2) For *Quota* storage mode, please set the maximum record capacity. For detailed information, see *Chapter 10.2 Configuring Quota Mode*.

Storage Mode	
Mode	Quota
Camera	Analog 1
Used Record Capacity	7,168MB
HDD Capacity (GB)	931
Max. Record Capacity (GB)	0
Free Quota Space 931 GB	

Figure 5.2 HDD- Advanced

Steps:

1. Enter the Record settings interface to configure the encoding parameters:

Menu>Record>Encoding

Record Substream		
Camera	Analog 1	
Encoding Parameters	Main Stream(Normal)	Main Stream(Event)
Stream Type	Video & Audio	Video & Audio
Resolution	4CIF	4CIF
Bitrate Type	Variable	Variable
Video Quality	Medium	Medium
Frame Rate	Full Frame	Full Frame
Max. Bitrate Mode	General	General
Max. Bitrate(Kbps)	1792	1792
Max. Bitrate Range Recommended	1344~2240(Kbps)	1344~2240(Kbps)
Pre-record	5s	
Post-record	5s	
Expired Time (day)	0	
Record Audio	☒	
Enable 960Mode	☒	

Figure 5.3 Encoding Parameters-Main Stream

2. Set encoding parameters for main stream
 - 1) Select **Record** to enter the main stream settings interface.

- 2) Select the camera for configuration.
- 3) Configure the following parameters for the Main Stream (Normal) and the Main Stream (Event):
 - **Stream Type:** Set the stream type to be Video or Video & Audio.
 - **Resolution:** Set recording at resolution of WD1, 4CIF, 2CIF, CIF or QCIF.
 - **Bitrate Type:** Set the bitrate type to be Variable or Constant.
 - **Video Quality:** Set the video quality of recording, with 6 levels configurable.
 - **Frame Rate:** Set the frame rate of recording.
 - **Max. Bitrate Mode:** Set the mode to General or Customize (32-3072Kbps).
 - **Max Bitrate (Kbps):** Select or customize the maximum bitrate for recording.
 - **Max. Bitrate Range Recommended:** A recommended Max. bitrate range is provided for reference.
- 4) Configure the pre-record, post-record time and expired time.
 - **Pre-record:** The time you set to record before the scheduled time or event. For example, when an alarm triggered the recording at 10:00, if you set the pre-record time as 5 seconds, the camera records it at 9:59:55.
 - **Post-record:** The time you set to record after the event or the scheduled time. For example, when an alarm triggered the recording ends at 11:00, if you set the post-record time as 5 seconds, it records till 11:00:05.
 - **Expired Time (day):** The expired time is the longest time for a record file to be kept in the HDD, if the deadline is reached, the file will be deleted. You can set the expired time to 0, and then the file will not be deleted. The actual keeping time for the file should be determined by the capacity of the HDD.
 - **Record Audio:** Check the checkbox to record the sound, or uncheck to record the image without sound.
 - **Enable 960 Mode:** Enable the encoding at WD1 (PAL: 960×576, NTSC: 960×480) resolution. You can also uncheck the checkbox to disable it.
- 5) If you want to copy the current main stream settings to other camera (s), click **Copy** to enter the Copy Camera interface. Select the camera (s) and click **OK** to finish the copy settings.



Figure 5.4 Copy Camera Settings

- 6) On the Record settings interface, click **Apply** to save the settings.



You can click the **Restore** button to restore the current main stream settings to the default parameters.

3. Set encoding parameters for sub-stream

- 1) Click the **Substream** tab to enter the Substream settings interface.

Record	Substream
Camera	Analog 1
Stream Type	Video & Audio
Resolution	QCIF
Bitrate Type	Variable
Video Quality	Medium
Frame Rate	Full Frame
Max. Bitrate Mode	General
Max. Bitrate(Kbps)	128
Max. Bitrate Range Recommended	192~320(Kbps)

Figure 5.5 Encoding Parameters-Sub-stream

- 2) Configure the parameters for the sub-stream. Refer to the steps of main stream settings.
- 3) Click **Apply** to save the settings.



You can click the **Restore** button to restore the current sub-stream settings to the default parameters.

- 4) If you want to copy the current sub-stream settings to other camera (s), click **Copy** to enter the Copy Camera interface. Select the camera (s) and click **OK** to finish the copy settings.

5.2 Configuring Record Schedule

Purpose:

Set the record schedule, and then the camera automatically starts/stops recording according to the configured schedule.

Steps:

1. Enter the Record Schedule interface.
Menu>Record>Schedule
2. Configure Record Schedule
 - 1) Click **Schedule** to enter the record schedule settings interface.

The screenshot shows the 'Record' settings window with the 'Substream' dropdown set to 'Analog 1'. The 'Enable Schedule' checkbox is checked. Below this is a 7x24 grid for configuring the recording schedule by day (Mon-Sun) and time (0-24 hours). To the right of the grid is an 'Edit' button and a legend for recording events: Normal (blue), Motion (yellow), Alarm (red), M | A (orange), M & A (light blue), and None (white).

Figure 5.6 Record Schedule

- 2) Choose the camera you want to configure.
- 3) Check the check box after the **Enable Schedule** item.

There are two ways to configure the record schedule.

Task 1: Edit the Schedule

Steps:

- 1) Click **Edit**.
- 2) In the message box, you can choose the day which you want to set schedule.
- 3) To schedule an all-day recording, check ☒ checkbox to enable all-day recording.
- 4) Set the Type in the dropdown list. Different recording types are available for different models.

DPA-0440L/0848L/08200M/16400L: Normal and Motion.

DPA-0448M/16128M: Normal, Motion, Alarm, Motion/Alarm and Motion & Alarm.



To enable Motion triggered recording, you must configure the motion detection settings as well. For detailed information, refer to *Chapter 8.1* and *Chapter 8.2*.

Edit			
Schedule		Mon	
All Day	☐	Type	Normal
Start/End Time	06:00-14:00	Type	Normal
Start/End Time	16:00-18:00	Type	Motion
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal

Copy Apply OK Cancel

Figure 5.7 Edit Schedule

- 5) To arrange other schedule, leave the **All Day** checkbox blank and set the Start/End time and Type.



Up to 8 periods can be configured for each day. And the time periods can't be overlapped each other. Repeat the above steps 2)-5) to schedule recording for other days in the week. If the schedule can also be set to other days, click **Copy**.

Copy to

☒ All ☐ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5 ☐ 6 ☐ 7 ☐ Holiday

Figure 5.8 Copy Schedule to Other Days



The **Holiday** option is available in the Schedule dropdown list when you have enabled holiday schedule in **Holiday Settings**. Refer to *Chapter 5.5 Configuring Holiday Record*.

Edit			
Holiday Name	Holiday1		
Enable	☒		
Mode	By Month		
Start Date	Jun	1	
End Date	Aug	1	

Figure 5.9 Holiday Settings

- 6) Click **OK** to save setting and back to upper level menu.

Task 2: Draw the Schedule

Steps:

- 1) Click the icon on the right to select a record type. Set the Type in the dropdown list. Different recording types are available for different models.

DPA-0440L/0848L/08200M/16400L: Normal and Motion.

DPA-0448M/16128M: Normal, Motion, Alarm, Motion/Alarm and Motion & Alarm.



To enable Motion triggered recording, you must configure the motion detection settings. For detailed information, refer to *Chapter 8.1* and *Chapter 8.2*.

- 2) Use the mouse to drag and draw time periods.



Up to 8 periods can be configured for each day.

Record																																																																																																																	
Camera	Analog 1																																																																																																																
Enable Schedule	☒																																																																																																																
<table border="1"> <thead> <tr> <th></th> <th>0</th><th>2</th><th>4</th><th>6</th><th>8</th><th>10</th><th>12</th><th>14</th><th>16</th><th>18</th><th>20</th><th>22</th><th>24</th> </tr> </thead> <tbody> <tr> <td>Mon</td> <td colspan="12">[Schedule Bar]</td> <td>1</td> </tr> <tr> <td>Tue</td> <td colspan="12">[Schedule Bar]</td> <td>2</td> </tr> <tr> <td>Wed</td> <td colspan="12">[Schedule Bar]</td> <td>3</td> </tr> <tr> <td>Thu</td> <td colspan="12">[Schedule Bar]</td> <td>4</td> </tr> <tr> <td>Fri</td> <td colspan="12">[Schedule Bar]</td> <td>5</td> </tr> <tr> <td>Sat</td> <td colspan="12">[Schedule Bar]</td> <td>6</td> </tr> <tr> <td>Sun</td> <td colspan="12">[Schedule Bar]</td> <td>7</td> </tr> </tbody> </table>		0	2	4	6	8	10	12	14	16	18	20	22	24	Mon	[Schedule Bar]												1	Tue	[Schedule Bar]												2	Wed	[Schedule Bar]												3	Thu	[Schedule Bar]												4	Fri	[Schedule Bar]												5	Sat	[Schedule Bar]												6	Sun	[Schedule Bar]												7	Edit Normal Motion Alarm M A M & A None
	0	2	4	6	8	10	12	14	16	18	20	22	24																																																																																																				
Mon	[Schedule Bar]												1																																																																																																				
Tue	[Schedule Bar]												2																																																																																																				
Wed	[Schedule Bar]												3																																																																																																				
Thu	[Schedule Bar]												4																																																																																																				
Fri	[Schedule Bar]												5																																																																																																				
Sat	[Schedule Bar]												6																																																																																																				
Sun	[Schedule Bar]												7																																																																																																				

*Note: Operation is invalid when the number of time segments exceeds the l...

Figure 5.10 Draw the Schedule

- 3) You can repeat the above steps to set schedule for other channels. If the settings can also be used to other channels, click **Copy** to enter the Copy Camera interface and then choose the channel to which you want to copy.



The screenshot shows a web interface titled "Copy to" in a dark green header. Below the header is a light green box containing a list of channels with checkboxes. The channels are: Analog (checked), A1 (unchecked), A2 (checked), A3 (checked), A4 (checked), A5 (checked), A6 (checked), A7 (checked), and A8 (checked).

Channel	Checked
Analog	✓
A1	
A2	✓
A3	✓
A4	✓
A5	✓
A6	✓
A7	✓
A8	✓

Figure 5.11 Copy Schedule to Other Channels

- 4) Click **Apply** in the Record Schedule interface to save the settings.

5.3 Configuring Motion Detection Record

Purpose:

Follow the steps to set the motion detection parameters. In the live view mode, once a motion detection event takes place, the device can analyze it and perform some response actions to handle it. Enabling motion detection function can trigger certain channels to start recording, or trigger full screen monitoring, audio warning, notify the surveillance center and so on. In this chapter, you can follow the steps to schedule a record which triggered by the detected motion.

Steps:

1. Enter the Motion Detection interface.

Menu>Camera>Motion



Figure 5.12 Motion Detection

2. Configure Motion Detection:
 - 1) Choose camera you want to configure.
 - 2) Check the checkbox after **Enable Motion Detection**.
 - 3) Drag and draw the area for motion detection by mouse. If you want to set the motion detection for all the area shot by the camera, click **Full Screen**. To clear the motion detection area, click **Clear**.



By default, the motion detection is configured in full screen.

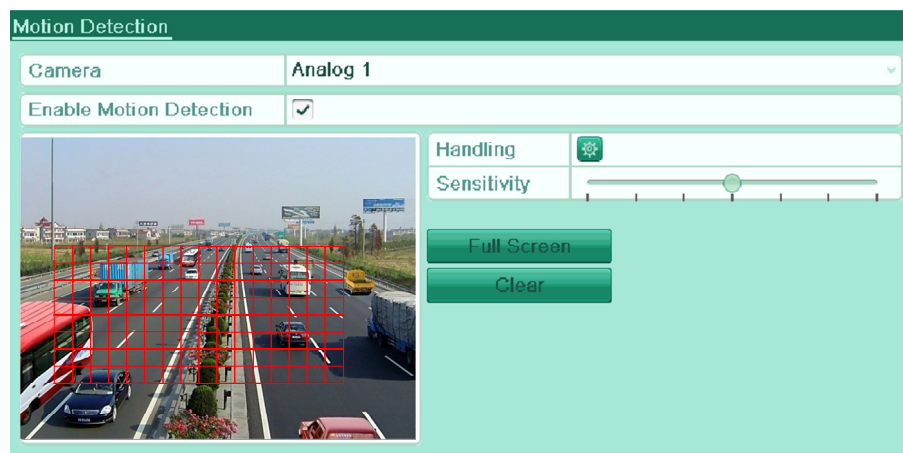


Figure 5.13 Motion Detection- Area Settings

- 4) Click **Handling**, and the message box for channel information will pop up.

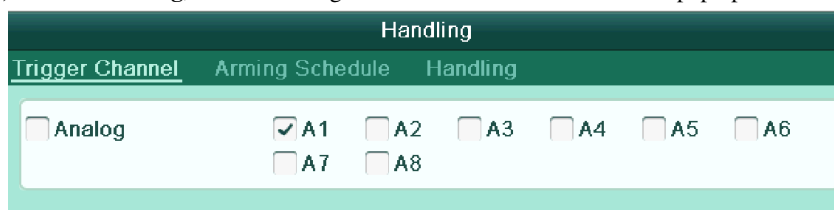


Figure 5.14 Motion Detection Handling

- 5) Select the channels which you want the motion detection event to trigger recording.
 - 6) Click **Apply** to save the settings.
 - 7) Click OK to back to the upper level menu.
 - 8) Exit the Motion Detection menu.
3. Enter Schedule settings interface.
 4. Menu> Record> Schedule>Record Schedule

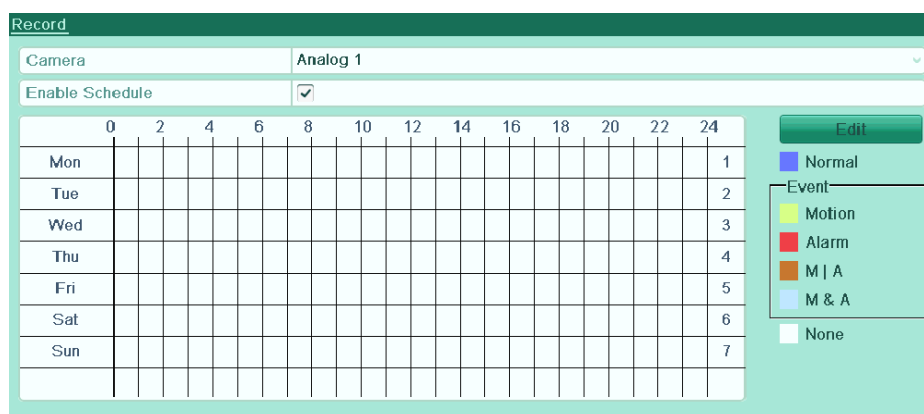


Figure 5.15 Record Schedule

- 1) Check the checkbox after the **Enable Schedule** item.
- 2) Click **Edit**.
- 3) In the message box, you can choose the day to which you want to set schedule.
- 4) Set the **Type** as **Motion**.
- 5) To schedule an all-day recording, check the checkbox after the **All Day** item.

Edit			
Schedule		Mon	
All Day	☐	Type	Normal
Start/End Time	06:00-14:00	Type	Normal
Start/End Time	16:00-18:00	Type	Motion
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal

Copy Apply OK Cancel

Figure 5.16 Edit Schedule

To arrange other schedule, leave the **All Day** checkbox blank and set the Start/End time.



Up to 8 periods can be configured for each day. And the time periods can't be overlapped each other.

Repeat the above steps3)-6) to schedule motion detection triggered recording for all the week. If the schedule can also be set to other days, click **Copy**.

Copy to

☒ All ☐ 1 ☒ 2 ☒ 3 ☒ 4 ☒ 5 ☒ 6 ☒ 7

Figure 5.17 Copy Schedule to Other Days

6) Click **OK** to back to upper level menu.

If you can to copy the same schedule settings to other camera (s), click **Copy** to enter the Copy Camera interface, and then select the camera (s) you want to copy.

Copy to

☒ Analog ☐ A1 ☒ A2 ☒ A3 ☒ A4 ☒ A5 ☒ A6 ☒ A7 ☒ A8

Figure 5.18 Copy Schedule to Other Channels

5.4 Configuring Alarm Triggered Record



This section is available for DPA-0448M/16128M model (customizable with alarm interface) only.

Purpose:

Follow the procedure to configure alarm triggered recording or capture.

Steps:

1. Enter the Alarm setting interface.

Menu> Configuration> Alarm

The screenshot shows the 'Alarm Settings' interface with three tabs: 'Alarm Status', 'Alarm Input', and 'Alarm Output'. The 'Alarm Input' tab is selected, displaying a table with columns: No., Alarm Name, IP Camera Address, and Alarm Type. Below this is the 'Alarm Output List' section with columns: No., Alarm Name, IP Camera Address, and Dwell Time.

No.	Alarm Name	IP Camera Address	Alarm Type
A<-1		Local	N.O
A<-2		Local	N.O
A<-3		Local	N.O
A<-4		Local	N.O
A<-5		Local	N.O
A<-6		Local	N.O
A<-7		Local	N.O

No.	Alarm Name	IP Camera Address	Dwell Time
A->1		Local	5s
A->2		Local	5s
A->3		Local	5s
A->4		Local	5s

Figure 5.19 Alarm Settings

2. Click **Alarm Input** tab.


The screenshot shows the 'Alarm Settings- Alarm Input' interface with three tabs: 'Alarm Status', 'Alarm Input', and 'Alarm Output'. The 'Alarm Input' tab is selected, displaying a form with fields for 'Alarm Input No.', 'Alarm Name', 'Type', 'Setting', and 'Handling'.

Alarm Input No.	A<-1
Alarm Name	
Type	N.O
Setting	☐
Handling	

Figure 5.20 Alarm Settings- Alarm Input

- 1) Select Alarm Input No. and configure alarm parameters.
- 2) Choose N.O (normally open) or N.C (normally closed) for alarm type.
- 3) Check ☒ checkbox to enable the alarm input.

- 4) Click  to set the handling method.

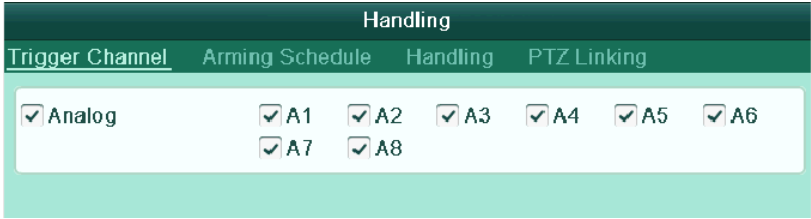

The interface shows the 'Handling' tab selected. It contains a table with checkboxes for 'Analog' and alarm channels A1 through A8.


Trigger Channel	Arming Schedule	Handling	PTZ Linking
☒ Analog		☒ A1 ☒ A2 ☒ A3 ☒ A4 ☒ A5 ☒ A6 ☒ A7 ☒ A8	

Figure 5.21 Alarm Handling

- 5) Choose the alarm triggered recording/capture channel.
- 6) Check the checkbox ☒ to select channel.
- 7) Click **Apply** to save settings.
- 8) Click **OK** to back to the upper level menu.
- 9) Click **Apply** in the Alarm Input interface to save the settings.

Repeat the above steps to configure other alarm input parameters.

If the setting can also be applied to other alarm inputs, click **Copy** and choose the alarm input number.

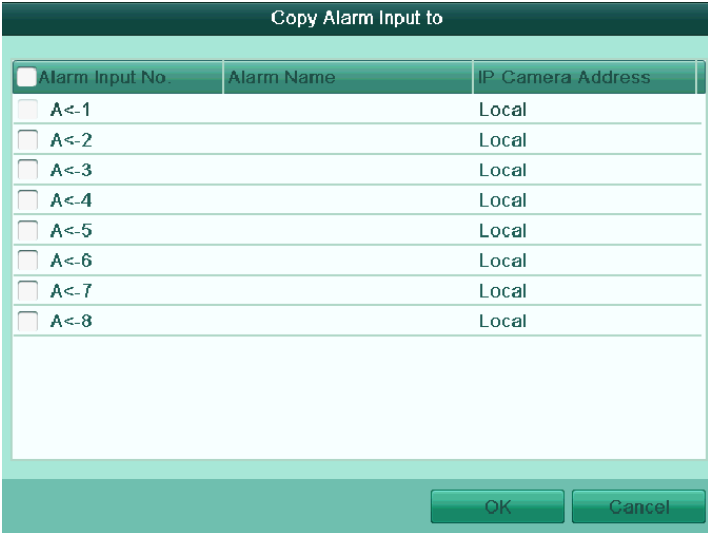

The interface is titled 'Copy Alarm Input to'. It contains a table with columns for 'Alarm Input No.', 'Alarm Name', and 'IP Camera Address'. There are checkboxes for each alarm input number from 1 to 8. At the bottom, there are 'OK' and 'Cancel' buttons.

Alarm Input No.	Alarm Name	IP Camera Address
☐ A<-1		Local
☐ A<-2		Local
☐ A<-3		Local
☐ A<-4		Local
☐ A<-5		Local
☐ A<-6		Local
☐ A<-7		Local
☐ A<-8		Local

Figure 5.22 Copy Alarm Input

3. Enter Record/Capture Schedule settings interface (Menu> Record> Schedule>Record Schedule). For detailed information about record schedule settings, refer to step 2 in *Chapter 5.2 Configuring Record/Capture Schedule*.



You need to select the **Type** as Alarm record schedule settings.

Figure 5.23 Record Schedule

5.5 Configuring Manual Record

Purpose:

Follow the steps to set parameters for the manual record. When using manual record, you need to manually cancel the record. The manual recording is prior to the scheduled recording.

Steps:

1. Enter the Manual settings interface.

Menu> Manual

Figure 5.24 Manual Record

2. Enable recording for camera (s).

Click the status button beside each camera number to change to , or you can enable recording for all cameras by clicking the status bar before **Analog** to change it to .

3. Set recording mode to manual.

By default, the camera is enabled with recording by schedule (). Click the status bar to change it to and click again to enable the recording to manual (.

: Recording by schedule.

: recording by manual operation.



After rebooting, all the manual records enabled are canceled.

4. Start all-day normal recording or all-day motion detection recording of all channels.

1) Click for Normal or Motion Detection.



Figure 5.25 Start Normal or Motion Detection Recording

- 2) Click **Yes** to enable all-day normal recording or all-day motion detection recording of all channels.

5.6 Configuring Holiday Record

Purpose:

You may want to have different plan for recording on holiday. Follow the steps to configure the record schedule on holiday.

Steps:

1. Enter the Record setting interface.
Menu>Record
2. Choose **Holiday** on the left bar.

Holiday Settings					
No.	Holiday Name	Status	Start Date	End Date	Edit
1	Holiday1	Disabled	1.Jan	1.Jan	
2	Holiday2	Disabled	1.Jan	1.Jan	
3	Holiday3	Disabled	1.Jan	1.Jan	
4	Holiday4	Disabled	1.Jan	1.Jan	
5	Holiday5	Disabled	1.Jan	1.Jan	
6	Holiday6	Disabled	1.Jan	1.Jan	
7	Holiday7	Disabled	1.Jan	1.Jan	
8	Holiday8	Disabled	1.Jan	1.Jan	
9	Holiday9	Disabled	1.Jan	1.Jan	
10	Holiday10	Disabled	1.Jan	1.Jan	
11	Holiday11	Disabled	1.Jan	1.Jan	

Figure 5.26 Holiday Settings

3. Enable Edit Holiday schedule.
 - 1) Click to enter the Edit interface.

Edit	
Holiday Name	Holiday1
Enable	☒
Mode	By Date
Start Date	2013-08-15
End Date	2013-08-15
Apply OK Cancel	

Figure 5.27 Edit Holiday Settings

- 2) Check the checkbox after **Enable**.
 - 3) Select Mode from the dropdown list.
There are three different modes for the date format to configure holiday schedule.
 - 4) Set the start and end date.
 - 5) Click **Apply** to save settings.
 - 6) Click **OK** to exit the Edit interface.
4. Enter Record Schedule settings interface.

Menu> Record> Schedule

- 1) Select **Record**.
- 2) Check the checkbox after **Enable Schedule**.
- 3) Click **Edit**.
- 4) Select **Holiday** from the **Schedule** dropdown list.

Edit			
Schedule		Holiday	
All Day	☒	Type	Motion
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Start/End Time	00:00-00:00	Type	Normal
Copy Apply OK Cancel			

Figure 5.28 Edit Schedule- Holiday

- 5) Select **Motion** or **Normal** from the **Type** dropdown list.
- 6) If you need all day recording, check the **All Day** checkbox. Otherwise leave it blank.

- 7) Set start/end time for holiday schedule.



Up to 8 periods can be configured for each day. And the time periods can't be overlapped each other.
In the time table of the channel, both holiday schedule and normal day schedule are displayed.
Repeat the above steps 4)-7) to set Holiday schedule for other channel. If the holiday schedule can also be used to other channels, click **Copy** and choose the channel you want to apply the settings.

5.7 Files Protection

Purpose:

You can lock the recorded files or set the HDD property to Read-only to protect the record files from being overwritten.

Protect file by locking the record files:

Steps:

1. Enter Playback setting interface.

Menu> Playback

Figure 5.29 Playback

2. Select the channels by checking the checkbox to ☒.
3. Configure the record type, file type and start/end time.
4. Click **Search** to show the results.

Figure 5.30 Playback- Search Result

5. Protect the record files.

- 1) Find the record files you want to protect, and then click the  icon which will turn to , indicating that the file is locked.



The record files of which the recording is still not completed can't be locked.

- 2) Click  to change it to  to unlock the file and the file is not protected.

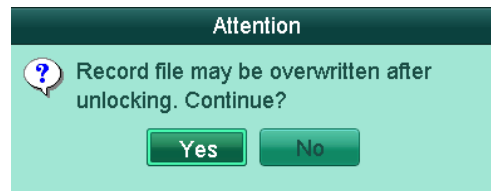


Figure 5.31 Unlocking Attention

C H A P T E R 6

Playback

6.1 Playing Back Record Files

6.1.1 Playing Back by Channel

Purpose:

Play back the recorded video files of a specific channel in the live view mode. Channel switch is supported.

Instant playback by channel:

Steps:

Choose a channel in live view mode using the mouse and click the  button in the quick setting toolbar.



Only record files recorded during the last five minutes on this channel will be played back.



Figure 6.1 Instant Playback Interface

All-day Playback by channel

1. Enter the All-day Playback interface.

Right-click on the live view window and the live view toolbar appears at the bottom of the screen.

Then click the icon  on the live view toolbar to enter the Playback interface, as shown in Figure

6.2.

Under multi-screen live view, record files of the selected channel will be played back.



Figure 6.2 All-day Playback Interface

2. Playback management.

The toolbar in the bottom part of Playback interface can be used to control playing progress, as shown in Figure 6.4.

The channel and time selection menu displays by moving the mouse to the right of the playback interface.

Click the channel(s) if you want to switch playback to another channel or execute simultaneous playback of multiple channels, as shown in Figure 6.3.



Figure 6.3 All-day Playback Interface with Channel List

Dates marked in different colors:



Figure 6.4 Toolbar of All-day Playback

Table 6.1 Detailed Explanation of All-day-playback Toolbar

Button	Operation	Button	Operation	Button	Operation	Button	Operation
	Audio on /Mute		Start/Stop clipping		30s forward		30s reverse
	Add default tag		Add customized tag		Tag management		Slow forward
	Pause reverse play/ Reverse play/ Single-frame reverse play		Pause play/ Play/ Single-frame play		Stop		Fast forward
	Previous day		Next day		Hide		Exit
	Process bar		Video type bar		Scaling up/down time bar		



- Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate special frames.
- About video type bar: ■ represents normal recording (manual or schedule); ■ represents event recording (motion); ■ represents smart search recording.

6.1.2 Playing Back by Time

Purpose:

Play back video files recorded in specified time duration. Multi-channel simultaneous playback and channel switch are supported.

Steps:

1. Enter playback interface.
Menu>Playback
2. Check the checkbox before the channel to select channel(s) and click the **Detail** button to view the record information of the channel(s). You can click **Previous** or **Next** to select the day for viewing the record information.

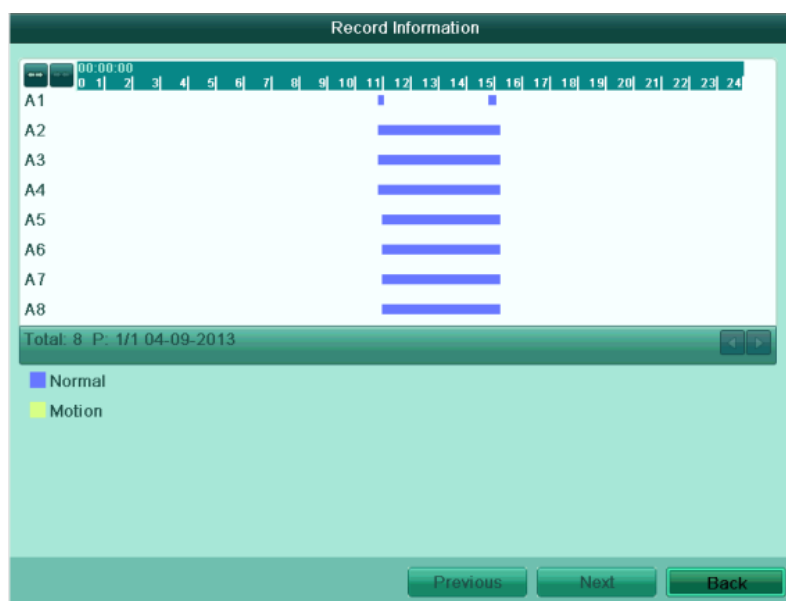


Figure 6.5 Record Information

3. Click **Back** to return to the playback interface.
4. Set search conditions and click the **Playback** button to enter Playback interface.

Normal	
☐ Analog	☒ A1 ☒ A2 ☒ A3 ☒ A4 ☒ A5 ☒ A6 ☒ A7 ☒ A8
Start/End time of record	08-14-2013 17:17:06 -- 09-02-2013 11:45:36
Record Type	All
File Type	All
Start Time	09-03-2013 00:00:00
End Time	09-03-2013 23:59:59

Figure 6.6 Video Search by Time

In the Playback interface:

The toolbar in the bottom part of Playback interface can be used to control playing process, as shown in Figure 6.8.



Figure 6.7 Interface of Playback by Time



Figure 6.8 Toolbar of Playback by Time

Table 6.2 Detailed Explanation of Playback-by-time Toolbar

Button	Operation	Button	Operation	Button	Operation	Button	Operation
	Audio on/Mute		Start/Stop clipping		30s forward		30s reverse
	Add default tag		Add customized tag		Tag management		Slow forward
	Pause reverse play/Reverse play/Single-frame reverse play		Pause play/Play/Single-frame play		Stop		Fast forward
	Video search		Exit		Hide		Progress bar
	Video type bar						



- Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate special frames.
- About video type bar: ■ represents normal recording (manual or schedule); ■ represents event recording (motion); ■ represents smart search recording.

6.1.3 Playing Back by Normal Video Search

Purpose:

Play back video files searched out by restricting recording type and recording time. The video files in the result list are played back sequentially and channel switch is supported. Recording types contain Normal, Motion and Manual.

Steps:

1. Enter Record File Search interface.
Menu>Playback
Set search condition and click **Search** button to enter the Search Result interface.

The screenshot shows the 'Normal' search interface. It includes a header bar with 'Normal' and a row of checkboxes for channels A1 through A8, all of which are checked. Below this is a table with search criteria:

Start/End time of record	08-14-2013 17:17:06 -- 09-02-2013 11:45:36	
Record Type	All	
File Type	All	
Start Time	09-03-2013	00:00:00
End Time	09-03-2013	23:59:59

Figure 6.9 Normal Video Search

2. Choose a record file you want to play back.

If there is only one channel in the search result, clicking button takes you to Full-screen Playback interface of this channel.

If more than one channel is optional, clicking button takes you to step 3 and step 4.

The screenshot shows the 'Search result' interface. It features a table with search results and a video preview window.

Channe	Start/End Time	Size	Play	Lock
A1	09-02-2013 08:39:37--09:02:08	23,256KB		
A2	09-02-2013 08:39:37--09:51:36	38,693KB		
A3	09-02-2013 08:39:37--09:51:36	38,616KB		
A4	09-02-2013 08:39:37--09:51:36	38,585KB		
A5	09-02-2013 08:39:38--09:51:36	38,603KB		
A6	09-02-2013 08:39:37--09:51:36	38,641KB		
A7	09-02-2013 08:39:37--09:51:36	38,499KB		
A8	09-02-2013 08:39:37--09:51:35	38,649KB		

Below the table, it says 'Total: 8 P: 1/1'. To the right of the table is a video preview window showing a road scene. Below the preview, it displays 'HDD: 1', 'Start time: 09-02-2013 08:39:37', and 'End time: 09-02-2013 09:02:08'. At the bottom, there are 'Detail' and 'Cancel' buttons.

Figure 6.10 Result of Normal Video Search

3. Choose channels for simultaneous playback.



Optional channels for simultaneous playback are the same as the channels chosen to search record files in step 1. And the channel with the recorded file selected in step 2 is the main channel during multi-channel playback and it is displayed at the upper left corner.

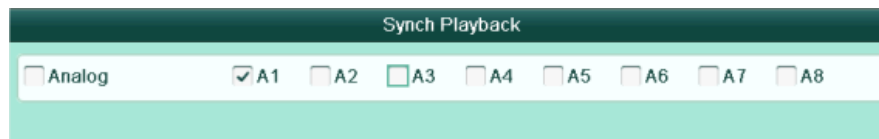


Figure 6.11 Select Channels for Synchronous Playback

4. Synchronous Playback interface.

The toolbar in the bottom part of Playback interface can be used to control playing process.



Figure 6.12 4-ch Synchronous Playback Interface

The hidden list of recorded files displays by moving the mouse to the right of the playback interface.



Figure 6.13 Toolbar of Normal Playback

Table 6.3 Detailed Explanation of Normal Playback Toolbar

Button	Operation	Button	Operation	Button	Operation	Button	Operation
	Audio on/Mute		Start/Stop clipping		30s forward		30s reverse
	Add default tag		Add customized tag		Tag management		Slow forward

	Pause reverse play/Reverse play/Single-frame reverse play		Pause play/Play/Single-frame play		Stop		Fast forward
	Video search		Exit		Hide		Progress bar
	Video type bar						



- Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate special frames.
- About video type bar:  represents normal recording (manual or schedule);  represents event recording (motion);  represents smart search recording.

6.1.4 Playing Back by Event Search

Purpose:

Play back record files on one or several channels searched out by restricting event type (motion detection or alarm input). Channel switch is supported.



Playback by alarm input search is supported by DS-7200HI-SL model (customizable with alarm interface) only.

Steps:

1. Enter the playback interface.
Menu>Playback
2. Select **Event** tab to enter the Event Playback interface.
3. Select **Motion** or **Alarm Input** as the event type.
4. Set the start time and end time of the record files.
5. Select the camera (s) for searching.

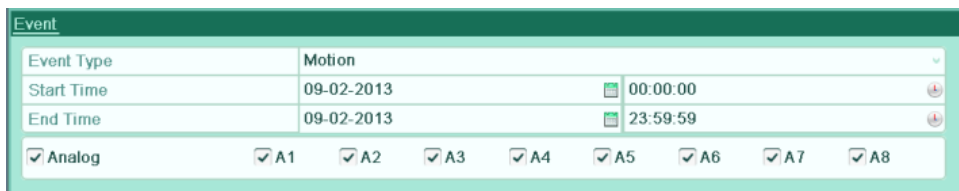


Figure 6.14 Video Search by Motion

6. Click **Search** button to enter the Search Result interface.

The Pre-play and post-play can be configured. The **Pre-play** refers to the time configured before the defined start time of event search, and the **Post-play** refers to the time configured after the defined end time of event search. For example, when the start time and end time of event search are set to 12:00:00 -

13:00:00, and the pre-play and post-play time is set to 30s and 20s respectively, then the actual playback of event video file is 11:59:30 ~ 13:00:20.



Figure 6.15 Video Search Result by Motion

7. You can select an item from the list and click **Details** to view detailed information of the record file, e.g., start time, end time, file size, etc.

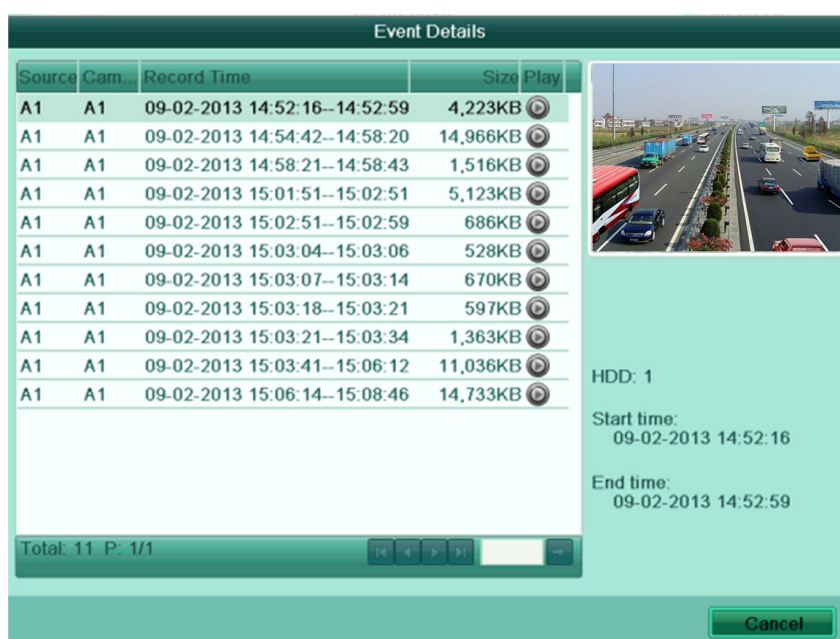


Figure 6.16 Event Details

8. Or you can directly click the  button of each file item to enter its playback interface. The toolbar in the bottom part of Playback interface can be used to control playing process.



Figure 6.17 Interface of Playback by Event (1)

The hidden list of events will be displayed by moving the mouse to the right of the playback interface.



Figure 6.18 Interface of Playback by Event (2)




Figure 6.19 Toolbar of Playback by Event

Table 6.4 Detailed Explanation of Playback-by-event Toolbar

Button	Operation	Button	Operation	Button	Operation	Button	Operation
	Audio on/Mute		Start/Stop clipping		30s forward		30s reverse
	Add default tag		Add customized tag		Tag management		Slow forward
	Pause reverse play/Reverse play/Single-frame reverse play		Pause play/Play/Single-frame play		Stop		Fast forward
	Video search		Exit		Hide		Progress bar
	Video type bar						



- Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate special frames.
- About video type bar:  represents normal recording (manual or schedule);  represents event recording (motion);  represents smart search recording.

6.1.5 Playing Back by Tag

Purpose:

Video tag allows you to record related information like people and location of a certain time point during playback. You are also allowed to use video tag(s) to search for record files and position time point.

Before playing back by tag:

1. Enter Playback interface.



Figure 6.20 Interface of Playback by Event

Click  button to add default tag.

Click  button to add customized tag and input tag name.



Max. 64 tags can be added to a single video file.

2. Tag management.

Click  button to check, edit and delete tag(s).



Figure 6.21 Tag Management Interface

To play back by tag:

Steps:

1. Enter Playback interface.

Menu>Playback

Click **Tag** tab to enter Playback by Tag interface.

Choose channels, tag type and time, and click **Search** to enter Search Result interface.



Two tag types are selectable: *All* and *Tag Keyword*. Input keyword if you choose *Tag Keyword*.

Tag			
☒ Analog	☒ A1	☒ A2	☒ A3
☒ A4	☒ A5	☒ A6	☒ A7
☒ A8			
Tag Type	All		
Tag Keyword			
Start Time	01-09-2013	00:00:00	
End Time	10-09-2013	23:59:59	

Figure 6.22 Video Search by Tag

2. Set playback conditions and tag management.

Choose the tag name of the recorded file you want to play back; it can be edited or deleted.

Pre-play and post-play time can be set according to actual needs.



Pre-play time and post-play time is added to the time point of the tag.

Cam	H.	Tag Name	Tag Time	Edit	D.	Play
A1	1	TAG	2013-09-04 10:52:37			
A1	1	1111111	2013-09-04 10:52:39			
A1	1	TAG	2013-09-04 10:52:39			
A1	1	TAG	2013-09-04 10:52:46			
A1	1	tag1	2013-09-04 10:52:48			
A1	1	tag1	2013-09-04 10:52:50			
A1	1	TAG	2013-09-04 10:52:52			
A1	1	TAG	2013-09-04 10:52:53			
A1	1	tag2	2013-09-04 10:52:54			
A1	1	tag2	2013-09-04 10:52:56			

Total: 10 P: 1/1

Pre-play: 30s

Post-play: 30s

Cancel

Figure 6.23 Result of Video Search by Tag

3. Playback by tag.

Choose a tag and click button to play back the related record file.

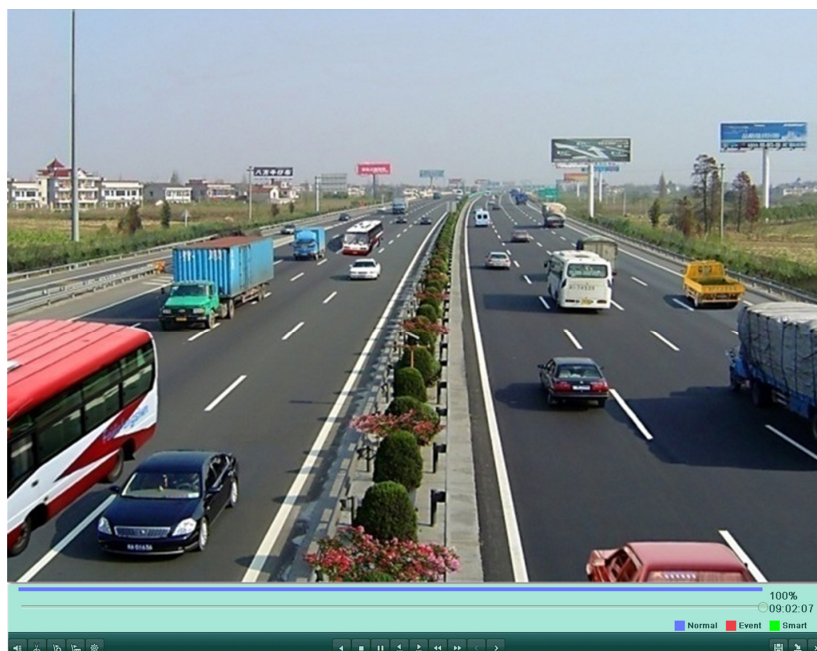


Figure 6.24 Interface of Playback by Tag

The hidden list of tags will be displayed by moving the mouse to the right of the playback interface.



Figure 6.25 Interface of Playback by Tag with Video List




Figure 6.26 Toolbar of Playback by Tag

Table 6.5 Detailed Explanation of Playback-by-tag Toolbar

Button	Operation	Button	Operation	Button	Operation	Button	Operation
	Audio on/Mute		Start/Stop clipping		30s forward		30s reverse
	Add default tag		Add customized tag		Tag management		Slow forward
	Pause reverse play/Reverse play/Single-frame reverse play		Pause play/Play/Single-frame play		Stop		Fast forward
	Video search		Exit		Hide		Progress bar
	Video type bar						



- Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate special frames.
- About video type bar:  represents normal recording (manual or schedule);  represents event recording (motion);  represents smart search recording.

6.1.6 Playing Back by System Log

Purpose:

Play back record file(s) associated with channels after searching system logs.

Steps:

1. Enter Log Search interface.
Menu>Maintenance>Log Information

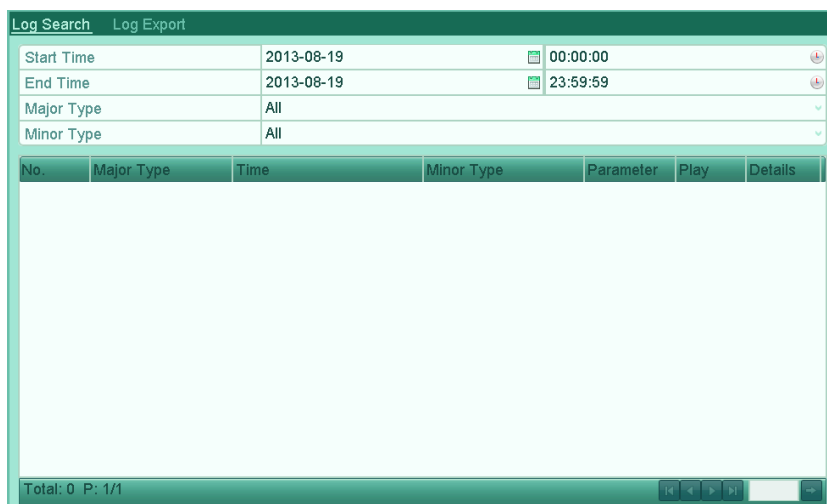


Figure 6.27 System Log Search Interface

- Set search time and type and click **Search** button.

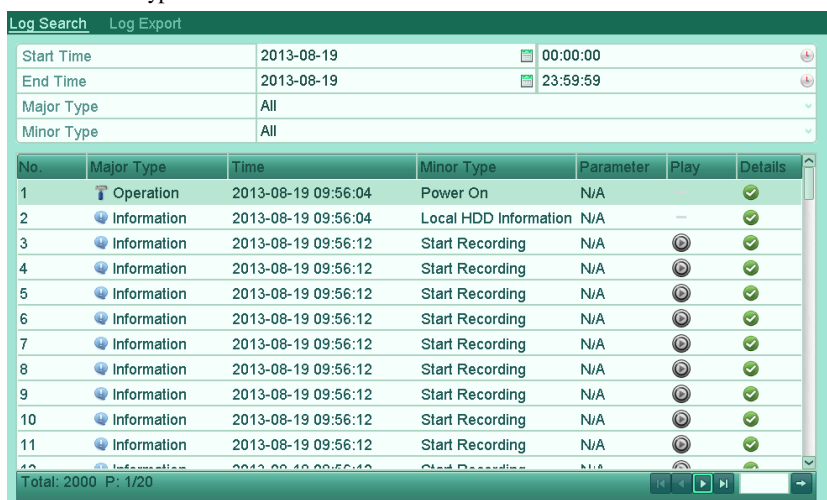


Figure 6.28 Result of System Log Search

- Choose a log with record file and click  button to enter Playback interface.



If there is no record file at the time point of the log, the message box “No result found” will pop up. The toolbar in the bottom part of Playback interface can be used to control playing process.



Figure 6.29 Interface of Playback by Log

6.2 Auxiliary Functions of Playback

6.2.1 Playing Back Frame by Frame

Purpose:

Play video files frame by frame, in order to check image details of the video when abnormal events happen.

Steps:

Go to Playback interface. If you choose playback of the record file: click button  and  until the speed changes to *Single* frame and one click on the playback screen represents playback of one frame. If you choose adverse playback of the record file: click button  and  until the speed changes to *Single* frame and one click on the playback screen represents adverse playback of one frame. It is also feasible to use button  in toolbar.

6.2.2 Smart Search

Purpose:

In order to locate motion detection event easily and accurately in the playback progress bar, you are allowed to analyze a certain area (scene) dynamically, and to get all of the related motion detection events that occurred in this area.

Steps:

1. Go to normal playback or all-day playback interface.



The smart search function is available for single-channel playback only.



Figure 6.30 Playback Interface

2. Right-click mouse and select **Smart Search** to go to analysis area selection interface.

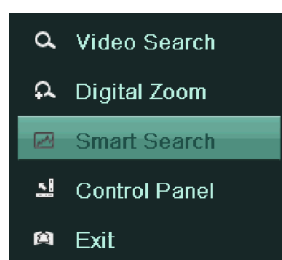


Figure 6.31 Right-click Menu in All-day Playback and Normal Playback Interface

3. You can click button  to set the full screen as target searching area. After drawing area(s), click button  to execute smart search in this area.



Multi-area and full-screen searching modes are supported.



Figure 6.32 Draw Area of Smart Search

Results of intelligent analysis:

Video type bar:

: Normal record file;

: Event record file;

: Dynamic record file.

The hidden list of record files display when moving the mouse to the right of the playback interface.

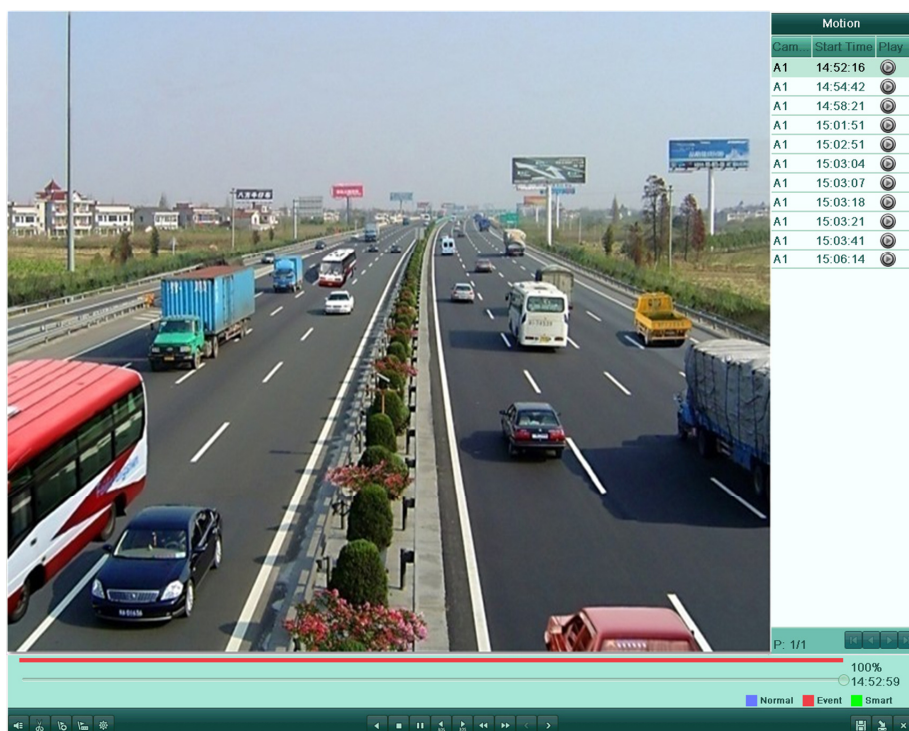


Figure 6.33 Smart Search Result with Video List




Figure 6.34 Toolbar of Smart Search Playback

Table 6.6 Detailed Explanation of Smart-search-playback Toolbar

Button	Operation	Button	Operation	Button	Operation	Button	Operation
	Audio on/Mute		Start/Stop clipping		30s forward		30s reverse
	Add default tag		Add customized tag		Tag management		Slow forward
	Pause reverse play/Reverse play/Single-frame reverse play		Pause play/Play/Single-frame play		Stop		Fast forward
	Video search		Exit		Hide		Progress bar
	Video type bar						



- Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate special frames.
- About video type bar: ■ represents normal recording (manual or schedule); ■ represents event recording (motion); ■ represents smart search recording.

6.2.3 Digital Zoom

Steps:

1. Right click the mouse on a channel under playback and choose Digital Zoom to enter Digital Zoom interface.
2. Use the mouse to draw a red rectangle and the image within it will be enlarged up to 16 times.



Figure 6.35 Draw Area for Digital Zoom

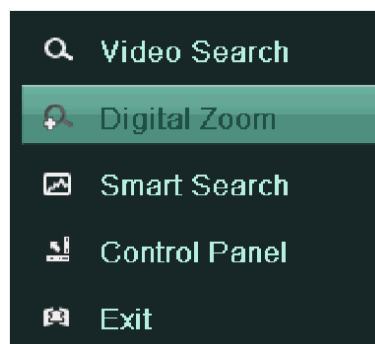


Figure 6.36 Right-click Menu in Playback Mode

Right-click menu:



This menu differs slightly from one playback interface to another.

Table 6.7 Detailed Explanation of Right-click Menu under Playback

Button	Function
	Return to Playback interface
	Enter Digital Zoom interface
	Smart Search against a specified area
	Show & hide control interface
	Exit the video playback interface

CHAPTER 7

Backup

7.1 Backing up Record Files

Before you start:

Please insert the backup device(s) into the device.

7.1.1 Backing up by Normal Video Search

Purpose:

The record files can be backed up to USB devices (USB flash drives, USB HDDs, USB writer).

Backup using USB flash drives, USB HDDs and USB writer.

Steps:

1. Enter Export interface.

Menu>Export>Normal

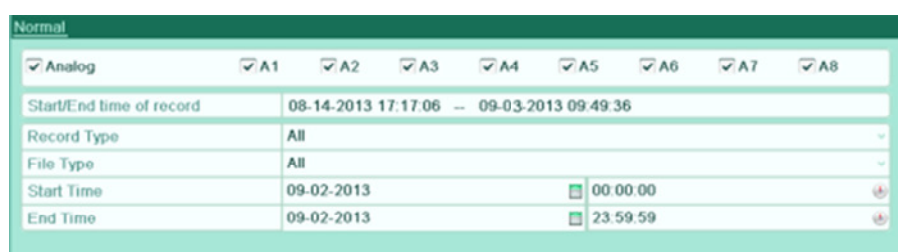


Figure 7.1 Normal Video Search for Backup

2. Set search conditions and click **Search** button to enter the search result interface.
3. Select record files you want to back up.

Click button  to play the record file if you want to check it.

Check the checkbox before the record files you want to back up.



The size of the currently selected files is displayed in the lower-left corner of the window.

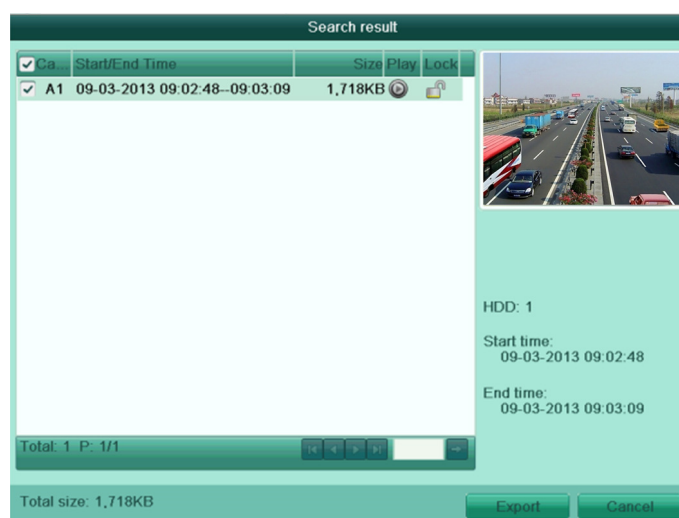


Figure 7.2 Result of Normal Video Search for Backup

4. Export the record files.

Click **Export** button and start backup.



If the inserted device is not recognized:

- Click the **Refresh** button.
- Reconnect device.
- Check for compatibility from vendor.

You can also format USB flash drives or USB HDDs via the device. USB writer and SATA writer cannot be formatted.

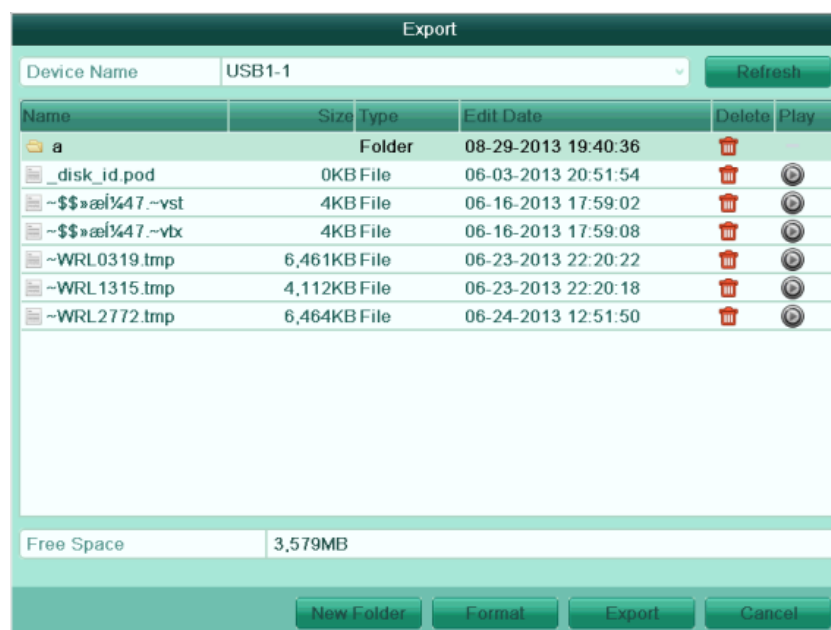


Figure 7.3 Export by Normal Video Search using USB Flash Drive



Figure 7.4 Export by Normal Video Search using USB Writer

Stay in the Exporting interface until all record files are exported with pop-up message box “Export finished”.

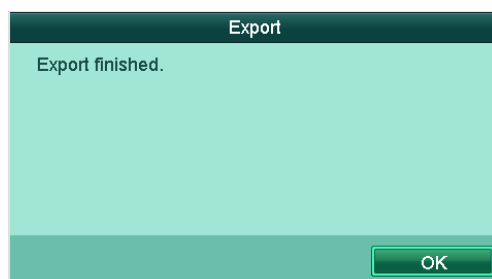


Figure 7.5 Export Finished

5. Check backup result.

Choose the record file in Export interface and click button  to check it.

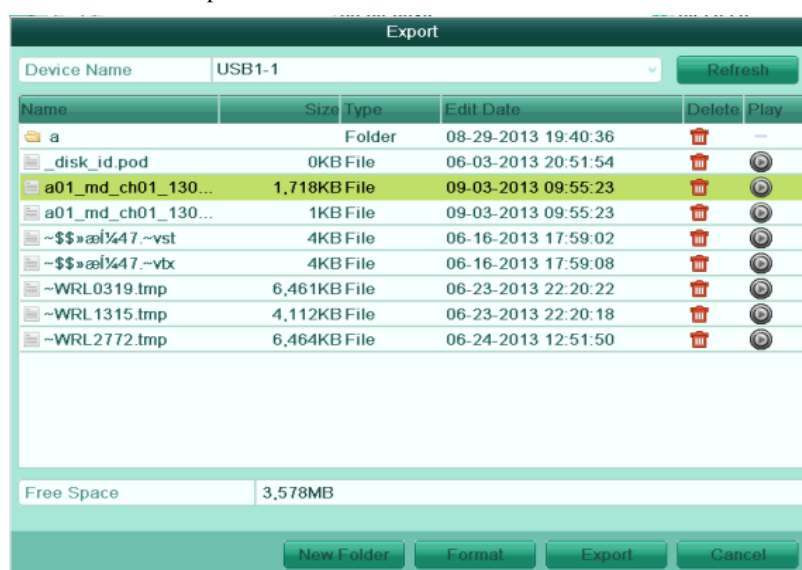


Figure 7.6 Checkup of Export Result using USB Flash Drive

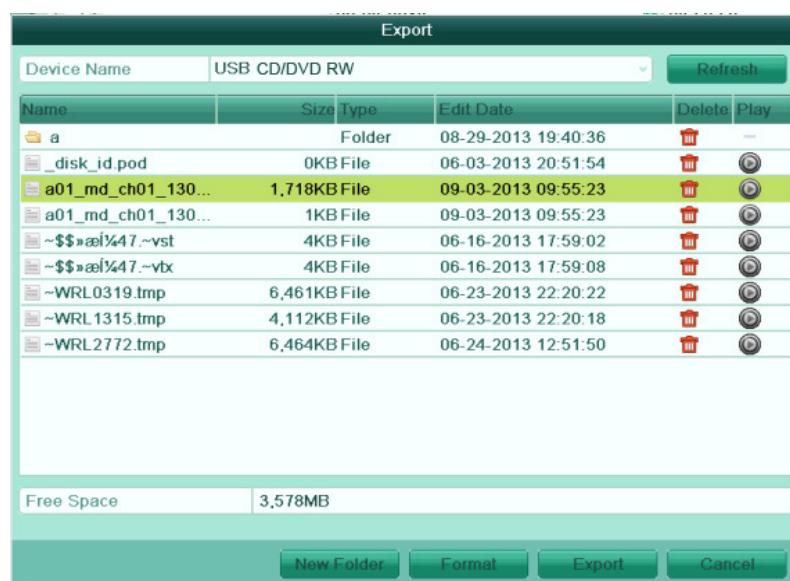


Figure 7.7 Checkup of Export Result using USB Writer

7.1.2 Backing up by Event Search

Purpose:

Back up event-related record files using USB devices (USB flash drives, USB HDDs, USB writer), or SATA writer.



Backup by alarm input search is supported by DS-7200HI-SL model (customizable with alarm interface) only.

Steps:

1. Enter Export interface.
Menu>Export>Event
2. Select **Motion or Alarm Input** as the event type.
3. Set the start time and end time of the record files.
4. Select the camera (s) for searching.

Figure 7.8 Event Search for Backup

5. Click **Search** button to enter the Search Result interface.

Source	Start Time	End Time
☐ A1	09-02-2013 14:51:04	09-02-2013 15:08:16
☐ A1	09-02-2013 15:08:17	09-02-2013 15:08:17
☐ A1	09-03-2013 09:02:42	09-03-2013 09:02:42

Total: 3 P: 1/1

Pre-play: 30s
Post-play: 30s

Quick Export Details Cancel

Figure 7.9 Result of Event Search

6. Select record files to export.
You can enter the Export interface by the following two ways:
 - Select motion detection event (s) from the list and click **Quick Export** button to enter the Export interface, as shown in Figure 7.9.
 - (1) Click the **Details** button to enter the interface with detailed information of the record file, e.g.,

start time, end time, file size, etc. The size of the currently selected files is displayed in the lower-left corner of the window.

(2) Select record file (s) from the list and click Export button to enter the Export interface, as shown in Figure 7.10.

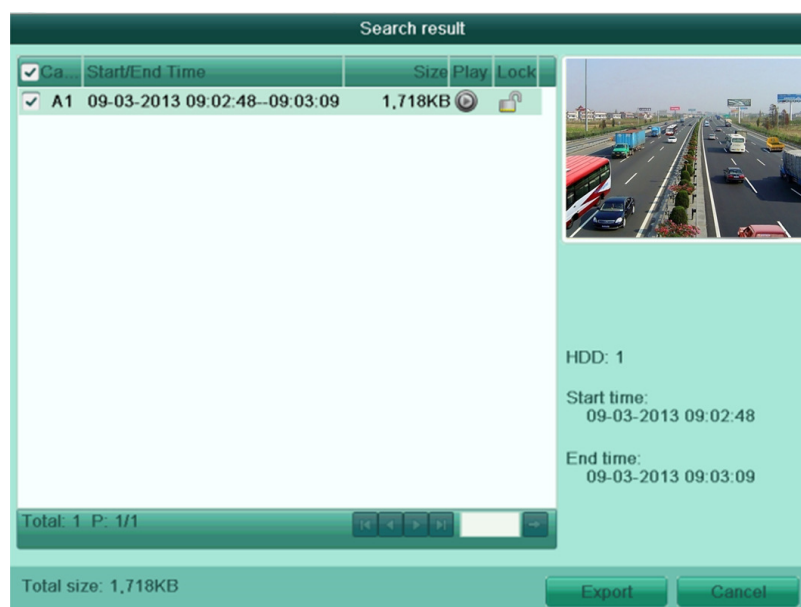


Figure 7.10 Event Details Interface

7. Export the selected record files.

Click the **Export** button and start backing up.



If the inserted USB device is not recognized:

- Click the Refresh button.
- Reconnect device.
- Check for compatibility from vendor.

You can also format USB flash drive or USB HDDs via the device.

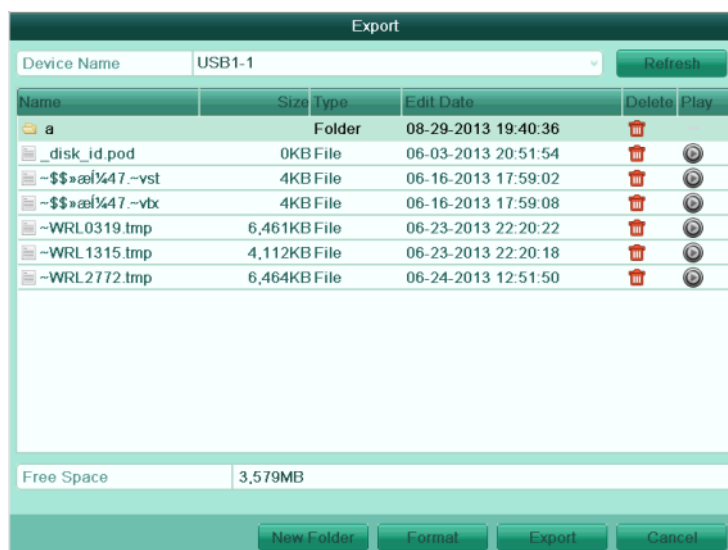


Figure 7.11 Export by Event Using USB Flash Drive

Stay in the Exporting interface until all record files are exported with pop-up message "Export finished".

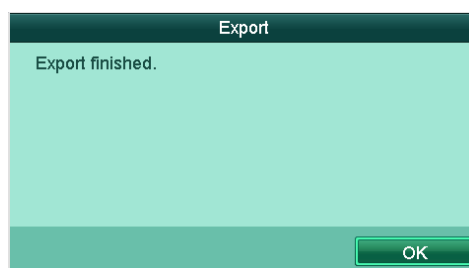


Figure 7.12 Export Finished

8. Check backup result.

Choose the record file in Export interface and click button  to check it.

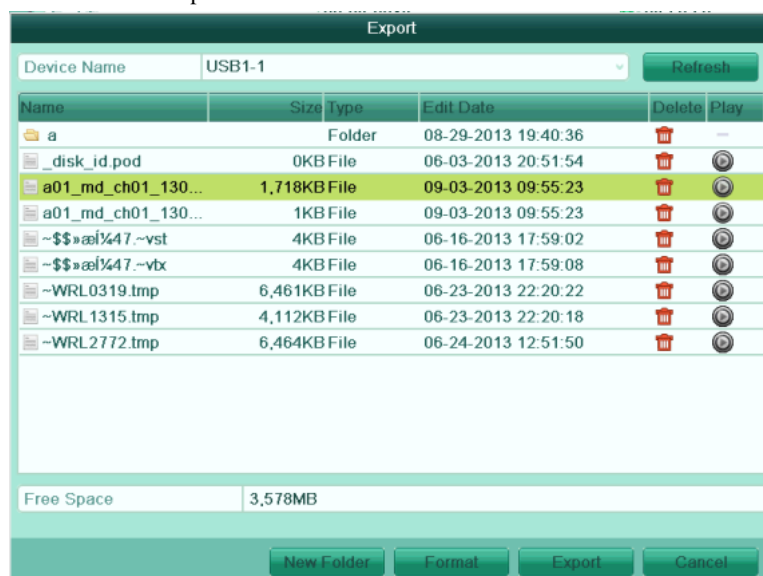


Figure 7.13 Checkup of Event Export Result Using USB Flash Drive

7.1.3 Backing up Video Clips

Purpose:

You may also select video clips to export directly during Playback, using USB devices (USB flash drives, USB HDDs, USB writer).

Steps:

1. Enter Playback interface.
Please refer to *Chapter 6*.
2. During playback, use buttons  and  in the playback toolbar to start or stop clipping record file(s).
3. Exit Playback interface after finishing clipping and you will then be prompted to save the clips.



A maximum of 30 clips can be selected for each channel.



Figure 7.14 Interface of Playback by Time

4. Click **Yes** to save video clips and enter Export interface, or click **No** to quit and do not save video clips.

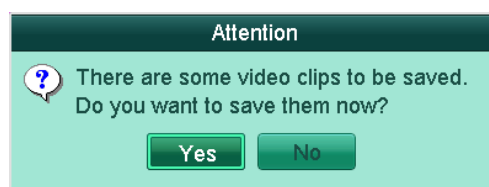


Figure 7.15 Attention to Video Clip Saving

5. Export the video clips.
Click **Export** button and start backing up.



If the inserted USB device is not recognized:

- Click the **Refresh** button.
- Reconnect device.
- Check for compatibility from vendor.

You can also format USB flash drive or USB HDDs via the device.



Figure 7.16 Export Video Clips Using USB Flash Drive

Stay in the Exporting interface until all record files are exported with pop-up message “Export finished”.

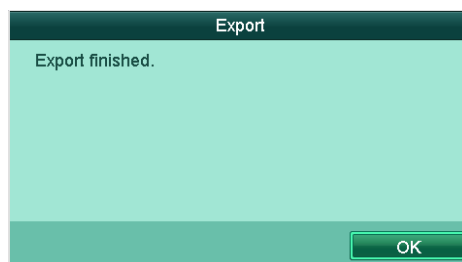


Figure 7.17 Export Finished

6. Check backup result.

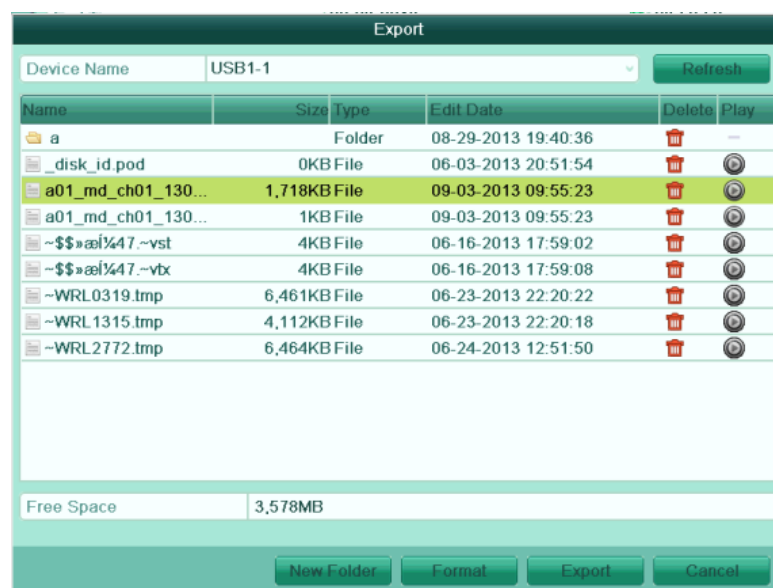


Figure 7.18 Checkup of Video Clips Export Result Using USB Flash Drive

7.2 Managing Backup Devices

Management of USB flash drives, and USB HDDs.

1. Enter Search Result interface of record files.

Menu>Export>Normal

Set search condition and click **Search** button to enter Search Result interface.



At least one channel shall be selected.

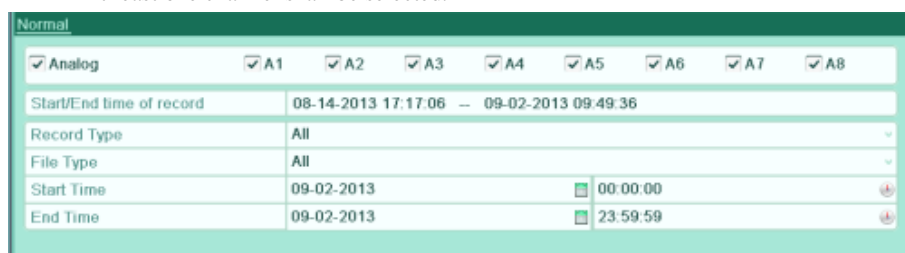


Figure 7.19 Normal Video Search

2. Select record files you want to back up.

Click **Export** button to enter Export interface.



At least one record file shall be selected.

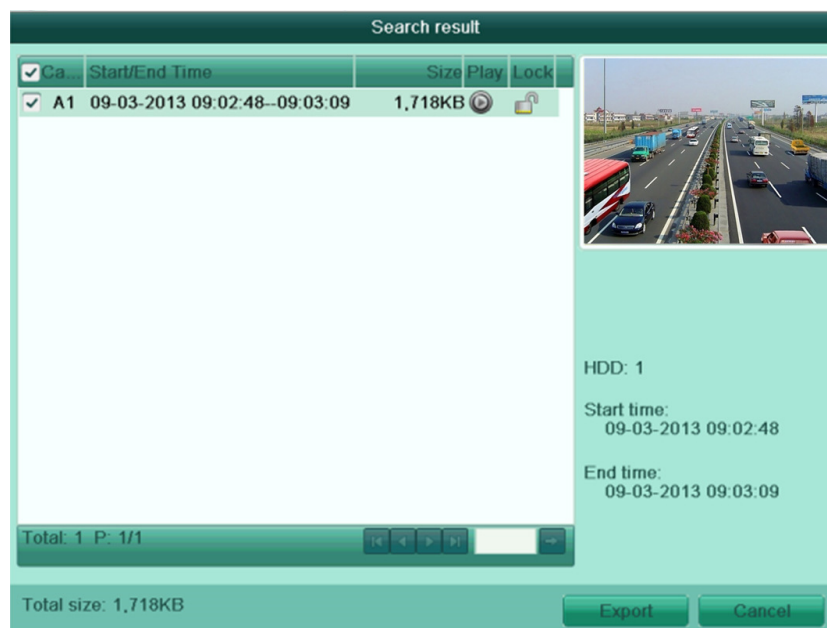


Figure 7.20 Result of Normal Video Search for Backup

3. Backup device management.

Click **New Folder** button if you want to create a new folder in the backup device.

Select a record file or folder in the backup device and click button  if you want to delete it.

Select a record file in the backup device and click button  to play it.

Click **Format** button to format the backup device.



If the inserted USB device is not recognized:

- Click the **Refresh** button.
- Reconnect device.
- Check for compatibility from vendor.

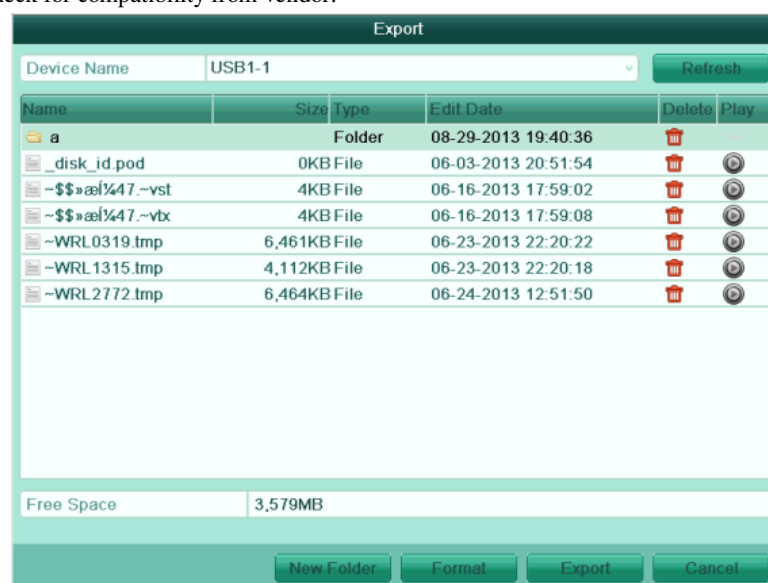


Figure 7.21 USB Flash Drive Management

Management of USB writers

1. Enter Search Result interface of record files.

Menu>Export>Normal

Set search condition and click **Search** button to enter Search Result interface.



At least one channel shall be selected.

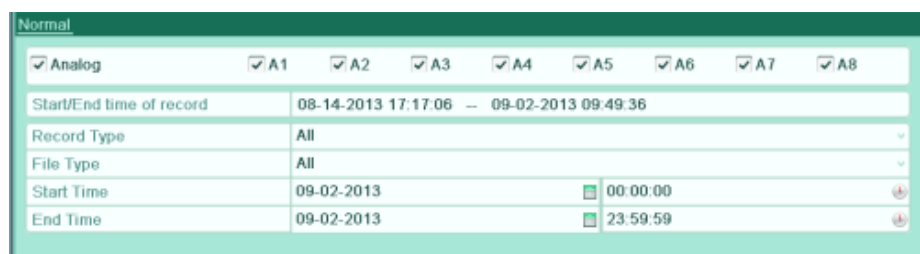


Figure 7.22 Normal Video Search for Backup

2. Select record files you want to back up.

Click **Export** button to enter Export interface.



At least one record file shall be selected.

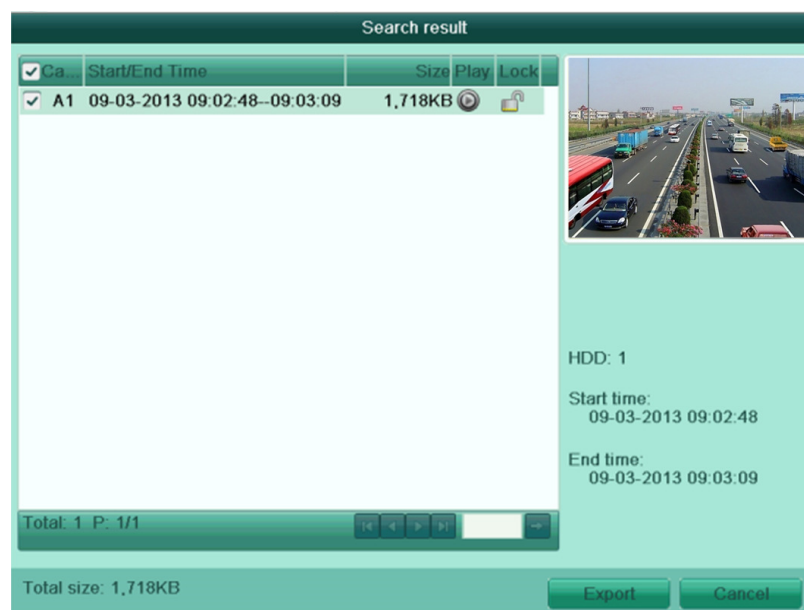


Figure 7.23 Result of Normal Video Search for Backup

3. Backup device management.

Click **Erase** button if you want to erase the files from a re-writable CD.



There must be a re-writable CD when you make this operation.

If the inserted USB writer is not recognized:

- Click the **Refresh** button.
- Reconnect device.
- Check for compatibility from vendor.



Figure 7.24 USB Writer Management

C H A P T E R 8

Alarm Settings

8.1 Setting Motion Detection

Steps:

1. Enter Motion Detection interface and choose a camera you want to set motion detection.

Menu> Camera> Motion



Figure 8.1 Motion Detection Setup Interface

2. Set motion detection area and sensitivity.

- 1) Check the checkbox of **Enable Motion Detection** to enable motion detection, use the mouse to draw detection area(s) and drag the sensitivity bar to set sensitivity.
- 2) Click the  icon of **Handling** to set alarm response actions.

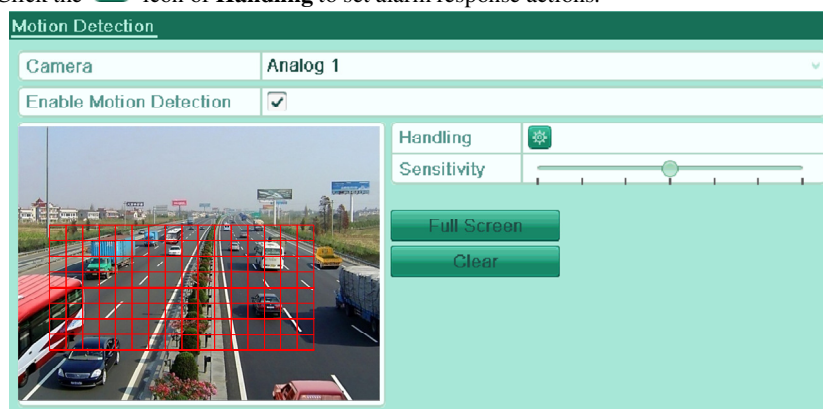


Figure 8.2 Set Detection Area and Sensitivity

3. Click **Trigger Channel** tab and select one or more channels which will start to record or become full-screen monitoring when motion alarm is triggered.

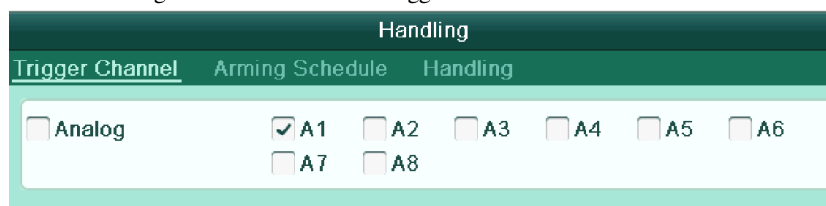


Figure 8.3 Set Trigger Camera of Motion Detection

4. Set up arming schedule of the channel.

- 1) Select **Arming Schedule** tab to set the channel's arming schedule.
- 2) Choose one day of a week and up to eight time periods can be set within each day.



Time periods shall not be repeated or overlapped.

Week	Mon
1	00:00-18:00
2	19:00-21:00
3	00:00-00:00
4	00:00-00:00
5	00:00-00:00
6	00:00-00:00
7	00:00-00:00
8	00:00-00:00

Figure 8.4 Set Arming Schedule of Motion Detection

5. Click **Handling** tab to set up alarm response actions of motion alarm (please refer to *Chapter 8.5*).

Figure 8.5 Set Alarm Response Actions of Motion Detection



The Trigger Alarm Output option is available for DS-7200HI-SL model (customizable with alarm interface) only.

6. Click **OK** to complete the motion detection settings of the channel.
7. If you want to set up motion detection for another channel (s), repeat the above steps or copy the above settings to the channel (s).



You are not allowed to copy the **Trigger Channel** action.

Copy to						
☐ Analog	☐ A1	☐ A2	☐ A3	☐ A4	☐ A5	☐ A6
	☐ A7	☐ A8	☐ A9	☐ A10	☐ A11	☐ A12
	☐ A13	☐ A14	☐ A15	☐ A16		

OK Cancel

Figure 8.6 Copy Settings of Motion Detection

8.2 Setting Sensor Alarms



This section is available for DS-7200HI-SL model (customizable with alarm interface) only.

Purpose:

You can set handling method of an external sensor alarm.

Steps:

1. Enter Alarm Settings interface and select an alarm input.

Menu> Configuration> Alarm

Alarm Status Alarm Input Alarm Output			
Alarm Input List			
No.	Alarm Name	IP Camera Address	Alarm Type
A<-1		Local	N.O
A<-2		Local	N.O
A<-3		Local	N.O
A<-4		Local	N.O
A<-5		Local	N.O
A<-6		Local	N.O
A<-7		Local	N.O
Alarm Output List			
No.	Alarm Name	IP Camera Address	Dwell Time
A->1		Local	5s
A->2		Local	5s
A->3		Local	5s
A->4		Local	5s

Figure 8.7 Alarm Status Interface

2. Select **Alarm Input** tab to enter Alarm Input Settings interface and set the handling method of the selected alarm input.

Check ☒ checkbox to enable the alarm input and click  to set up its alarm response actions.

Alarm Status	Alarm Input	Alarm Output
Alarm Input No.	A<-1	
Alarm Name		
Type	N.O	
Setting	☒	
Handling		

Figure 8.8 Alarm Input Settings Interface

3. Select **Trigger Channel** tab and select one or more channels which will start to record/capture or become full-screen monitoring when an external alarm is input. Click **Apply** to save the settings.
4. Select **Arming Schedule** tab to set the channel's arming schedule.
Choose one day of a week and up to eight time periods can be set within each day. Set up arming schedule of other days of a week. You can also use **Copy** to copy an arming schedule to other days.
Click **Apply** to save the settings.



Time periods shall not be repeated or overlapped.

5. Select **Handling** tab to set alarm response actions of the alarm input (please refer to *Chapter 8.6*).

Handling		
Trigger Channel	Arming Schedule	PTZ Linking
Week	Mon	
1	00:00-16:00	
2	18:00-20:00	
3	00:00-00:00	
4	00:00-00:00	
5	00:00-00:00	
6	00:00-00:00	
7	00:00-00:00	
8	00:00-00:00	

Copy Apply OK Cancel

Figure 8.9 Set Arming Schedule of Alarm Input

6. If necessary, select **PTZ Linking** tab and set PTZ linkage of the alarm input.
Set PTZ linking parameters and click **Apply** to save the settings. Click **OK** to complete the settings of the alarm input.



Please check whether the PTZ or speed dome supports PTZ linkage.

One alarm input can trigger presets, patrol or pattern of more than one channel. But presets, patrols and patterns are exclusive.

Handling	
Trigger Channel	Arming Schedule
PTZ Linking	Analog 1
Call Preset	☐
Preset	1
Call Patrol	☐
Patrol	1
Call Pattern	☐
Pattern	1

Apply OK Cancel

Figure 8.10 Set PTZ Linking of Alarm Input

7. If you want to set handling method of another alarm input, repeat the above steps or just copy the above settings to it by clicking **Copy** in Alarm Input Settings interface.

Alarm Input No.	Alarm Name	IP Camera Address
☐ A<-1		Local
☒ A<-2		Local
☒ A<-3		Local
☒ A<-4		Local
☒ A<-5		Local
☒ A<-6		Local
☒ A<-7		Local
☒ A<-8		Local

OK Cancel

Figure 8.11 Copy Settings of Alarm Input

8.3 Detecting Video Loss

Purpose:

Detect video loss of a channel and take alarm response action(s).

Steps:

1. Enter Video Loss interface of Camera Management.
Menu> Camera> Video Loss



Figure 8.12 Video Loss Setup Interface

2. Select a channel you want to detect.
3. Check the checkbox of **Enable Video Loss Alarm**.
4. Click the  icon of **Handling** to enter the Handling interface.
5. Set the arming schedule and alarm response actions. Please refer to Step4 and Step5 of *Chapter 8.1 Setting Motion Detection*.



Figure 8.13 Set Arming Schedule of Video Loss

6. Click **Apply** to save the video loss alarm settings.

8.4 Detecting Video Tampering

Purpose:

Trigger alarm when the lens is covered and take alarm response action(s).

Steps:

1. Enter Video Tampering interface of Camera Management.
Menu> Camera> Video Tampering Detection

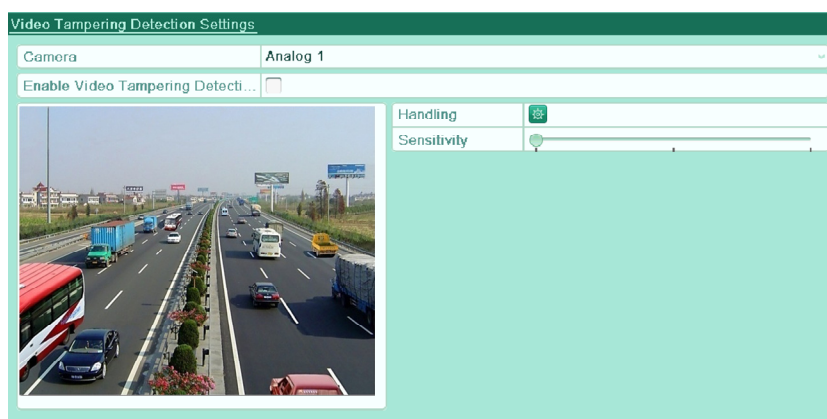


Figure 8.14 Video Tampering Detection Setup Interface

2. Select a channel you want to detect video tampering.
3. Check the checkbox of **Enable Video Tampering Detection**.



By default, the video tampering detection is configured in full screen.

4. Move the sensitivity bar and choose a proper sensitivity level.
5. Click the  icon of **Handling** to enter the Handling interface.
6. Set the arming schedule and alarm response actions. Please refer to Step4 and Step5 of *Chapter 8.1 Setting Motion Detection*.
7. If you want to set video tampering detection handling method for another channel, repeat above steps or click **Copy** to copy the above settings to it.



Figure 8.15 Copy Settings of Video Tampering

8.5 Handling Exceptions

Purpose:

Exception settings refer to the handling method of various exceptions, including:

- **HDD Full:** The HDD is full.
- **HDD Error:** Writing HDD error, unformatted HDD, etc.
- **Network Disconnected:** Disconnected network cable.
- **IP Conflicted:** Duplicated IP address.
- **Illegal Login:** Incorrect user ID or password.
- **Input / Output Video Standard Mismatch:** I/O video standards do not match.
- **Record Exception:** No space for saving recorded file.

Steps:

Enter **Exceptions** interface of System Configuration and handle various exceptions.

Menu> Configuration> Exceptions

Please refer to *Chapter 8.5* for detailed alarm response actions.

Exception	
Exception Type	HDD Full
Audible Warning	☐
Notify Surveillance Center	☐
Send Email	☐

Figure 8.16 Exceptions Setup Interface

8.6 Setting Alarm Response Actions

Purpose:

The alarm response actions will be activated when an exception occurs, including Full Screen Monitoring, Audible Warning, Notify Surveillance Center, and Send Email.

Full Screen Monitoring

When an alarm event (motion detection/video tampering detection/video loss detection) is triggered, the local monitor (VGA or BNC monitor) display in full screen the video image from the alarming channel configured for full screen monitoring.

If alarms are triggered simultaneously in several channels, their full-screen images will be switched at an interval of 10 seconds (default dwell time). A different dwell time can be set by going to Menu> Configuration>Live View>Full Screen Monitoring Dwell Time.

Auto-switch will terminate once the alarm stops and you will be taken back to the Live View interface.



For motion detection alarm, you must select the channel(s) you want to make full screen monitoring (Menu>Camera>Motion>Handling>Trigger Channel).

Audible Warning

Trigger an audible *beep* when an alarm is detected.

Notify Surveillance Center

Sends an exception or alarm signal to remote alarm host when an event occurs. The alarm host refers to the PC installed with Remote Client.



The alarm signal will be transmitted automatically at detection mode when remote alarm host is configured. Please refer to *Chapter 9.2.5* for details of alarm host configuration.

Send Email

Send an email with alarm information to a user or users when an alarm event is detected.

Please refer to *Chapter 9.2.9* for details of Email configuration.

Trigger Alarm Output



This feature is available for DPA-0448M/16128M model (customizable with alarm interface) only.
Trigger an alarm output when an alarm is triggered.

Steps:

1. Enter Alarm Output interface.
Menu> Configuration> Alarm> Alarm Output
Select an alarm output and set alarm name and dwell time.



If “Manually Clear” is selected in the dropdown list of Dwell Time, you can clear it only by going to Menu> Manual> Alarm and clicking **Clear All**.

Alarm Status	Alarm Input	Alarm Output
Alarm Output No.	A<- 1	
Alarm Name		
Dwell Time	5s	
Handling		

Figure 8.17 Alarm Output Settings Interface

2. Set arming schedule of the alarm output.

Click to set the arming schedule of alarm output. Choose one day of a week and up to 8 time periods can be set within each day.



Time periods shall not be repeated or overlapped.

Handling	
Arming Schedule	
Week	Mon
1	00:00-24:00
2	00:00-00:00
3	00:00-00:00
4	00:00-00:00
5	00:00-00:00
6	00:00-00:00
7	00:00-00:00
8	00:00-00:00

Copy Apply OK Cancel

Figure 8.18 Set Arming Schedule of Alarm Output

- Repeat the above steps to set up arming schedule of other days of a week. You can also click **Copy** to copy an arming schedule to other days. Click **OK** to complete the settings of the alarm output.
- You can also click **Copy** in Alarm Output interface to copy the above settings to another channel.

Copy Alarm Output to	
Alarm Output No.	Alarm Name
☐ Local->1	alarm1
☐ Local->2	
☐ Local->3	
☐ Local->4	

OK Cancel

Figure 8.19 Copy Settings of Alarm Output

8.7 Triggering or Clearing Alarm Output Manually



This section is available for DPA-0448M/16128M model (customizable with alarm interface) only.

Purpose:

Sensor alarm can be triggered or cleared manually. If **Manually Clear** is selected in the dropdown list of dwell time of an alarm output, the alarm can be cleared only by clicking **Clear** button in the following interface.

Steps:

Select the alarm output you want to trigger or clear and make related operations.

Menu> Manual> Alarm

Click **Trigger** / **Clear** button if you want to trigger or clear an alarm output.

Click **Trigger All** button if you want to trigger all alarm outputs.

Click **Clear All** button if you want to clear all alarm output.

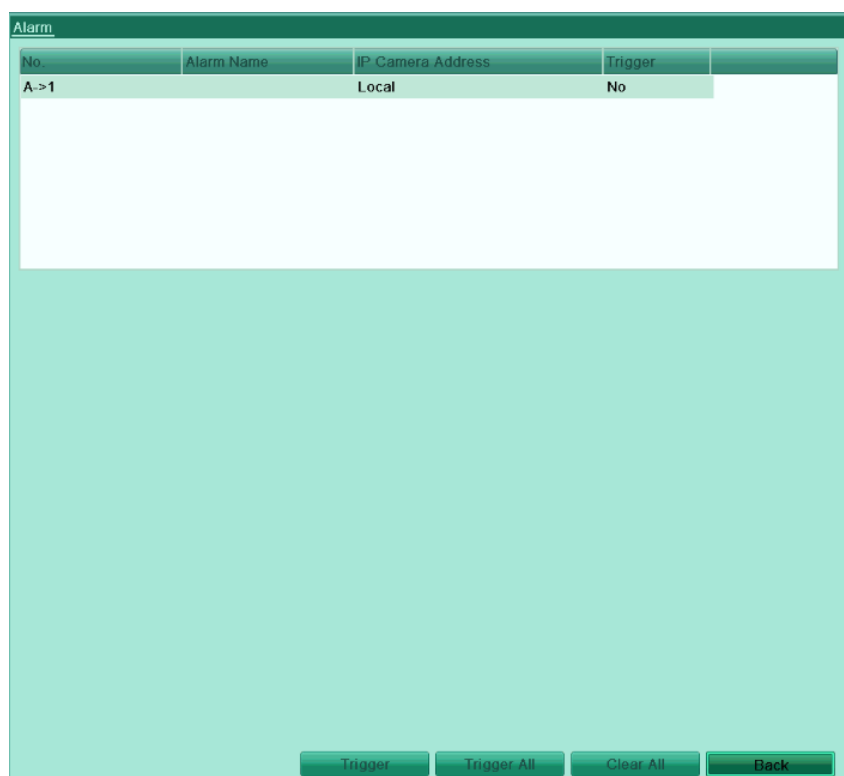


Figure 8.20 Clear or Trigger Alarm Output Manually

C H A P T E R 9

Network Settings

9.1 Configuring General Settings

Purpose:

Network settings must be properly configured before you operate device over network.

Steps:

1. Enter the Network Settings interface.

Menu > Configuration > Network

General	PPPOE	DDNS	NTP	Email	UPnP	More Settings
NIC Type	10M/100M Self-adaptive					
Enable DHCP	☐					
IPv4 Address	172 .6 .21 .71					
IPv4 Subnet Mask	255 .255 .255 .0					
IPv4 Default Gateway	172 .6 .21 .1					
IPv6 Address 1	fe80::264:64ff:fe19:7524/64					
IPv6 Address 2						
IPv6 Default Gateway						
MAC Address	00:64:64:19:75:24					
MTU(Bytes)	1500					
Preferred DNS Server						
Alternate DNS Server						

Figure 9.1 General Network Settings Interface

2. Select the **General** tab.
3. In the **General Settings** interface:

You can configure the following settings: NIC Type, IPv4 Address, IPv4 Gateway, MTU and DNS Server.

If the DHCP server is available, you can click the checkbox of **DHCP** to automatically obtain an IP address and other network settings from that server.



The valid value range of MTU is 1280 ~ 1500.

4. After having configured the general settings, click the **Apply** button to save the settings.

9.2 Configuring Advanced Settings

9.2.1 Configuring PPPoE Settings

Purpose:

Your device also allows access by Point-to-Point Protocol over Ethernet (PPPoE).

Steps:

1. Enter the **Network Settings** interface.
Menu > Configuration > Network
2. Select the **PPPoE** tab to enter the PPPoE Settings interface.

General	PPPOE	DDNS	NTP	Email	UPnP	More Settings
Enable PPPOE	☐					
User Name						
Password						

Figure 9.2 PPPoE Settings Interface

3. Check the **PPPoE** checkbox to enable this feature.
4. Enter **User Name** and **Password** for PPPoE access.



The User Name and Password should be assigned by your ISP.

General	PPPOE	DDNS	NTP	Email	SNMP	UPnP	More Settings
Enable PPPOE	☒						
User Name	test						
Password	*****						123

Figure 9.3 PPPoE Settings Interface

5. Click the **Apply** button to save and exit the interface.
6. After successful settings, the system asks you to reboot the device to enable the new settings, and the PPPoE dial-up is automatically connected after reboot.
You can go to Menu>Maintenance>System Info>Network interface to view the status of PPPoE connection. Please refer to *Chapter 11. Viewing System Information* for PPPoE status.

9.2.2 Configuring Extranet Access

You can choose the access to the DVR by Cloud P2P or by DDNS through the settings on the Extranet Access menu.



By default, the Cloud P2P is enabled.

Configuring Cloud P2P

Purpose:

Cloud P2P provides the mobile phone application and as well the service platform page to access and manage your connected DVR, which enables you to get a convenient remotely access to the surveillance system.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **Extranet Access** tab to enter the Cloud P2P Settings interface.
3. Check the **Enable Cloud P2P** checkbox to activate this feature.
4. If required, check the **Enable Stream Encryption** checkbox to encrypt the video stream.



When the stream encryption is enabled, the correct stream key must be used before you view the live video via Web browser or iVMS-4200 client software.

5. Enter the verification code of the device.



- The verification code consists of 6 capital letters and is located at the bottom of the DVR.
- The device at the version 2.2.13 or above has its verification code automatically available in the filed by default; for device of older version, you need to input any 6 capital letters in the text filed.

Enable Cloud P2P	☒
Enable Stream Encryption	☐
Verification Code	ABCDEF
Enable DDNS	☐
DDNS Type	HIDDNS
Server Address	www.hiddns.com
Device Domain Name	
User Name	
Password	

Figure 9.4 Cloud P2P Settings Interface

6. Click the **Apply** button to save and exit the interface.

After configuration, you can access and manage the DVR by your mobile phone on which the Cloud P2P application is installed or by the Cloud P2P website (www.hicloudcam.com).



For more operation instructions, please refer to the help file on the Cloud P2P website (www.hicloudcam.com).

Configuring DDNS

Purpose:

If your device is set to use PPPoE as its default network connection, you may set Dynamic DNS (DDNS) to be used for network access.

Prior registration with your ISP is required before configuring the system to use DDNS.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **DDNS** tab to enter the DDNS Settings interface.

General PPPOE <u>DDNS</u> NTP Email SNMP UPnP More Settings	
Enable DDNS	☒
DDNS Type	IPServer
Server Address	
Device Domain Name	
User Name	
Password	

Figure 9.5 DDNS Settings Interface

3. Check the **DDNS** checkbox to enable this feature.
4. Select **DDNS Type**. Five different DDNS types are selectable: IPSEver, DynDNS, PeanutHull, NO-IP and HiDDNS.

- **IPSEver:** Enter **Server Address** for IPSEver.



The **Server Address** should be the IP address of the PC that runs IPSEver.

General PPPOE <u>DDNS</u> NTP Email SNMP UPnP More Settings	
Enable DDNS	☒
DDNS Type	IPSEver
Server Address	173,200,91,74
Device Domain Name	
User Name	
Password	

Figure 9.6 IPSEver Settings Interface

- **DynDNS:**
 - 1) Enter **Server Address** for DynDNS (e.g. members.dyndns.org).
 - 2) In the **Device Domain Name** text field, enter the domain obtained from the DynDNS website.
 - 3) Enter the **User Name** and **Password** registered in the DynDNS website.

General PPPOE <u>DDNS</u> NTP Email SNMP UPnP More Settings	
Enable DDNS	☒
DDNS Type	DynDNS
Server Address	members.dyndns.org
Device Domain Name	123.dyndns.com
User Name	test
Password	***** 123

Figure 9.7 DynDNS Settings Interface

- **PeanutHull:** Enter User Name and Password obtained from the PeanutHull website.

General PPPOE <u>DDNS</u> NTP Email SNMP UPnP More Settings	
Enable DDNS	☒
DDNS Type	PeanutHull
Server Address	
Device Domain Name	
User Name	123,gicp,net
Password	*****

Figure 9.8 Peanut Hull Settings Interface

- **NO-IP:**

Enter the account information in the corresponding fields. Refer to the DynDNS settings.

- 1) Enter **Server Address** for NO-IP.
- 2) In the **Device Domain Name** text field, enter the domain obtained from the NO-IP website (www.no-ip.com).
- 3) Enter the **User Name** and **Password** registered in the NO-IP website.

General PPPOE <u>DDNS</u> NTP Email SNMP UPnP More Settings	
Enable DDNS	☒
DDNS Type	NO-IP
Server Address	no-ip.org
Device Domain Name	123,no-ip.org
User Name	test
Password	*****

Figure 9.9 NO-IP Settings Interface

- **HiDDNS:** You need to enter the **Server Address** and **Device Domain Name** for HiDDNS, and other fields are read only.

- 1) Enter the **Server Address** of the HiDDNS server: www.hiddns.com.
- 2) Enter the **Device Domain Name**. You can register the alias of the device domain name in the HiDDNS server first and then enter the alias to the **Device Domain Name** in the DVR; you can also enter the domain name directly on the DVR to create a new one.



If a new alias of the device domain name is defined in the DVR, it will replace the old one registered on the server.

General PPPOE <u>DDNS</u> NTP Email UPnP More Settings	
Enable DDNS	☒
DDNS Type	HiDDNS
Server Address	www.hiddns.com
Device Domain Name	
User Name	
Password	

Figure 9.10 HiDDNS Settings Interface

Register the device on the HiDDNS server.

- 1) Go to the HiDDNS website: www.hiddns.com.
- 2) Click **Register new user** to register a user account if you do not have one.
- 3) After registration is successful, use the account and password to log in.

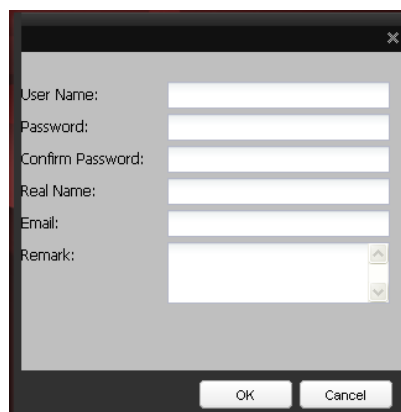


Figure 9.11 Register an Account

- 4) In the DDNS Management System interface, click the **Device Management** tab on the left menu bar and then click  to register the device.

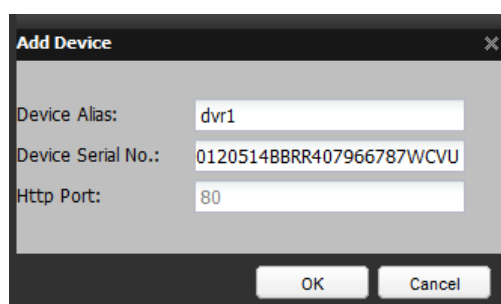


Figure 9.12 Register the Device



Only lower-case English alphabet, numeric and '-' can be used in the alias of the device and the alias must be started with letters of the lower-case English alphabet.

5. Click the **Apply** button to save and exit the interface.

9.2.3 Configuring NTP Server

Purpose:

A Network Time Protocol (NTP) Server can be configured on your device to ensure the accuracy of system date/time.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **NTP** tab to enter the NTP Settings interface.

General	PPPOE	DDNS	<u>NTP</u>	Email	SNMP	UPnP	More Settings
Enable NTP	☒						
Interval (min)	60						
NTP Server	210.72.145.44						
NTP Port	123						

Figure 9.13 NTP Settings Interface

3. Check the **Enable NTP** checkbox to enable this feature.
4. Configure the following NTP settings:
 - **Interval:** Time interval between the two synchronizing actions with NTP server. The unit is minute.
 - **NTP Server:** IP address of NTP server.
 - **NTP Port:** Port of NTP server.
5. Click the **Apply** button to save and exit the interface.



The time synchronization interval can be set from 1 to 10080min, and the default value is 60min. If the device is connected to a public network, you should use a NTP server that has a time synchronization function, such as the server at the National Time Center (IP Address: 210.72.145.44). If the device is setup in a more customized network, NTP software can be used to establish a NTP server used for time synchronization.

9.2.4 Configuring UPnP™

Purpose:


UPnP™ can permits the device seamlessly discover the presence of other network devices on the network and establish functional network services for data sharing, communications, etc. If you want to use the UPnP™ function to enable the fast connection of the device to the WAN via a router, you should configure the UPnP™ parameters of the device.

Before you start:

If you want to enable the UPnP™ function of the device, you must enable the UPnP™ function of the router to which your device is connected. When the network working mode of the device is set as multi-address, the Default Route of the device should be in the same network segment as that of the LAN IP address of the router.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **UPnP** tab to enter the UPnP™ interface.

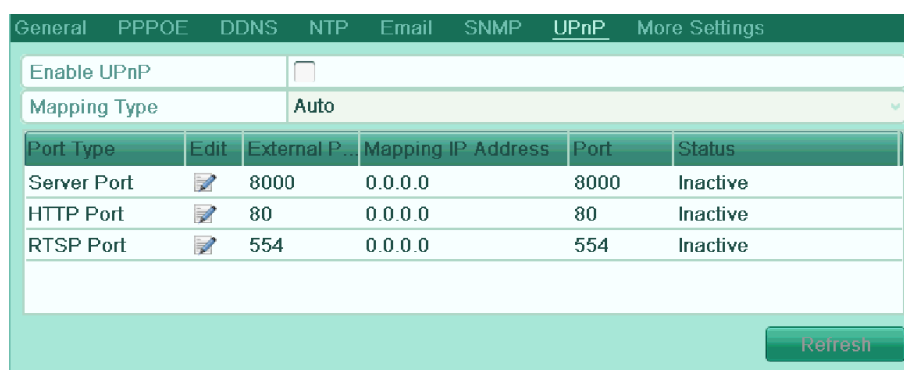

The screenshot shows the 'UPnP' settings tab in a web interface. At the top, there are tabs for General, PPPOE, DDNS, NTP, Email, SNMP, UPnP, and More Settings. The UPnP section includes a checkbox for 'Enable UPnP' which is currently unchecked, and a dropdown menu for 'Mapping Type' set to 'Auto'. Below this is a table with columns: Port Type, Edit, External P..., Mapping IP Address, Port, and Status. The table contains three rows: Server Port (8000, 0.0.0.0, 8000, Inactive), HTTP Port (80, 0.0.0.0, 80, Inactive), and RTSP Port (554, 0.0.0.0, 554, Inactive). A 'Refresh' button is located at the bottom right.


Port Type	Edit	External P...	Mapping IP Address	Port	Status
Server Port		8000	0.0.0.0	8000	Inactive
HTTP Port		80	0.0.0.0	80	Inactive
RTSP Port		554	0.0.0.0	554	Inactive

Figure 9.14 UPnP™ Settings Interface

3. Check ☒ checkbox to enable UPnP™.
4. Select the mapped type to Auto or Manual.
When you select **Auto**, the mapping ports can be automatically assigned by the router. When you select **Manual**, you should continue Step5 to edit the mapping ports.
5. Click to open the External Port Settings dialog box. Configure the external port No. for server port, HTTP port and RTSP port respectively.




- You can use the default port No., or change it according to actual requirements.
- External Port indicates the port No. for port mapping in the router.

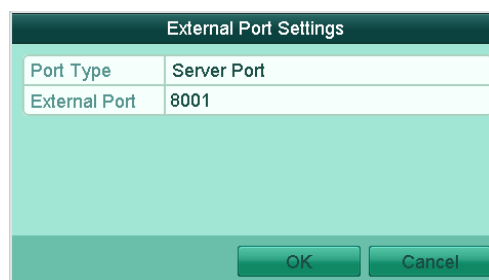

The screenshot shows the 'External Port Settings' dialog box. It has a title bar 'External Port Settings'. Inside, there are two fields: 'Port Type' with a dropdown menu showing 'Server Port', and 'External Port' with a text input field containing '8001'. At the bottom, there are 'OK' and 'Cancel' buttons.

Figure 9.15 External Port Settings Dialog Box

6. You can click **Refresh** to get the latest status of the port mapping.

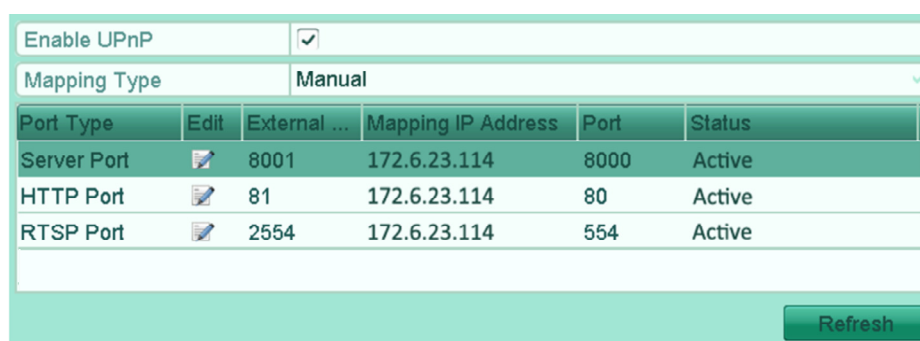

The screenshot shows the 'UPnP' settings tab after configuration. The 'Enable UPnP' checkbox is now checked. The 'Mapping Type' dropdown is set to 'Manual'. The table shows the same three port types, but their status is now 'Active'. The 'External P...' column shows the configured external ports: 8001 for Server Port, 81 for HTTP Port, and 2554 for RTSP Port. The 'Mapping IP Address' column shows '172.6.23.114' for all three. The 'Port' column shows the internal ports: 8000, 80, and 554. A 'Refresh' button is at the bottom right.

Port Type	Edit	External ...	Mapping IP Address	Port	Status
Server Port		8001	172.6.23.114	8000	Active
HTTP Port		81	172.6.23.114	80	Active
RTSP Port		2554	172.6.23.114	554	Active

Figure 9.16 UPnP™ Settings Finished

7. Click the **Apply** button to save the settings.

9.2.5 Configuring Remote Alarm Host

Purpose:

With a remote alarm host configured, the device will send the alarm event or exception message to the host when an alarm is triggered. The remote alarm host must have the CMS (Client Management System) software installed.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **More Settings** tab to enter the More Settings interface.

General	PPPOE	DDNS	NTP	Email	SNMP	UPnP	More Settings
Alarm Host IP							
Alarm Host Port		0					
Server Port		8000					
HTTP Port		80					
Multicast IP							
RTSP Port		554					

Figure 9.17 More Settings Interface

3. Enter **Alarm Host IP** and **Alarm Host Port** in the text fields.
The **Alarm Host IP** refers to the IP address of the remote PC on which the CMS (Client Management System) software (e.g., iVMS-4200) is installed, and the **Alarm Host Port** must be the same as the alarm monitoring port configured in the software (default port is 7200).

General	PPPOE	DDNS	NTP	Email	SNMP	UPnP	More Settings
Alarm Host IP		172.6.21.58					
Alarm Host Port		7200					
Server Port		8000					
HTTP Port		80					
Multicast IP							
RTSP Port		554					

Figure 9.18 Configure Alarm Host

4. Click the **Apply** button to save and exit the interface.

9.2.6 Configuring Multicast

Purpose:

The multicast can be configured to realize live view for more than the maximum number of cameras through network.

A multicast address spans the Class-D IP range of 224.0.0.0 to 239.255.255.255. It is recommended to use the IP address ranging from 239.252.0.0 to 239.255.255.255.

Steps:

1. Enter the Network Settings interface.

Menu > Configuration > Network

2. Select the **More Settings** tab to enter the More Settings interface.
3. Set **Multicast IP**. When adding a device to the CMS (Client Management System) software, the multicast address must be the same as the device's multicast IP.

General	PPPOE	DDNS	NTP	Email	SNMP	UPnP	More Settings
Alarm Host IP	172.6.21.58						
Alarm Host Port	7200						
Server Port	8000						
HTTP Port	80						
Multicast IP	239.252.2.50						
RTSP Port	554						

Figure 9.19 Configure Multicast

4. Click the **Apply** button to save and exit the interface.

9.2.7 Configuring RTSP

Purpose:

The RTSP (Real Time Streaming Protocol) is a network control protocol designed for use in entertainment and communications systems to control streaming media servers.

Steps:

1. Enter the Network Settings menu by clicking Menu > Configuration > Network.
2. Select the **More Settings** tab to enter the More Settings men.

General	PPPOE	DDNS	NTP	Email	SNMP	UPnP	More Settings
Alarm Host IP	172.6.21.58						
Alarm Host Port	7200						
Server Port	8000						
HTTP Port	80						
Multicast IP	239.252.2.50						
RTSP Port	554						

Figure 9.20 RTSP Settings Interface

3. Enter the RTSP port in the text field of **RTSP Service Port**. The default RTSP port is 554, and you can change it according to different requirements.
4. Click the **Apply** button to save and exit the menu.

9.2.8 Configuring Server and HTTP Ports

Purpose:

You can change the server and HTTP ports in the Network Settings menu. The default server port is 8000 and the default HTTP port is 80.

Steps:

1. Enter the Network Settings interface.

Menu > Configuration > Network

2. Select the **More Settings** tab to enter the More Settings interface.
3. Enter new **Server Port** and **HTTP Port**.

General	PPPOE	DDNS	NTP	Email	SNMP	UPnP	More Settings
Alarm Host IP		172.6.21.58					
Alarm Host Port		7200					
Server Port		8000					
HTTP Port		80					
Multicast IP		239.252.2.50					
RTSP Port		554					

Figure 9.21 Host/Others Settings Menu

4. Enter the Server Port and HTTP Port in the text fields. The default Server Port is 8000 and the HTTP Port is 80, and you can change them according to different requirements.
5. Click the **Apply** button to save and exit the interface.



The Server Port should be set to the range of 2000-65535 and it is used for remote client software access. The HTTP port is used for remote IE access.

9.2.9 Configuring Email

Purpose:

The system can be configured to send an Email notification to all designated users if an alarm event is detected, a motion detection event is detected, etc.

Before configuring the Email settings, the device must be connected to a local area network (LAN) that maintains an SMTP mail server. The network must also be connected to either an intranet or the Internet depending on the location of the e-mail accounts to which you want to send notification.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Set the IPv4 Address, IPv4 Subnet Mask, IPv4 Gateway and the Preferred DNS Server in the Network Settings menu.

General	PPPOE	DDNS	NTP	Email	UPnP	More Settings
NIC Type		10M/100M Self-adaptive				
Enable DHCP		☐				
IPv4 Address		172 .6 .21 .71				
IPv4 Subnet Mask		255 .255 .255 .0				
IPv4 Default Gateway		172 .6 .21 .1				
IPv6 Address 1		fe80::264:64ff:fe19:7524/64				
IPv6 Address 2						
IPv6 Default Gateway						
MAC Address		00:64:64:19:75:24				
MTU(Bytes)		1500				
Preferred DNS Server						
Alternate DNS Server						

Figure 9.22 Network Settings Interface

3. Click the **Apply** button to save the settings.
4. Select the **Email** tab to enter the Email Settings interface.

General	PPPOE	DDNS	NTP	<u>Email</u>	SNMP	UPnP	More Settings
Enable Server Authentica...	☐						
User Name							
Password							
SMTP Server							
SMTP Port	25						
Enable SSL	☐						
Sender							
Sender's Address							
Select Receivers	Receiver 1						
Receiver							
Receiver's Address							
Enable Attached Picture	☐						
Interval	2s						

Figure 9.23 Email Settings Interface

5. Configure the following Email settings:

Enable Server Authentication (optional): Check the checkbox to enable the server authentication feature.

User Name: The user account of sender's Email for SMTP server authentication.

Password: The password of sender's Email for SMTP server authentication.

SMTP Server: The SMTP Server IP address or host name (e.g., smtp.263xmail.com).

SMTP Port: The SMTP port. The default TCP/IP port used for SMTP is 25.

Enable SSL (optional): Click the checkbox to enable SSL if required by the SMTP server.

Sender: The name of sender.

Sender's Address: The Email address of sender.

Select Receivers: Select the receiver. Up to 3 receivers can be configured.

Receiver: The name of user to be notified.

Receiver's Address: The Email address of user to be notified.

Enable Attached Pictures: Check the checkbox of **Enable Attached Picture** if you want to send email with attached alarm images.

Interval: The interval refers to the time between two actions of sending attached pictures.

Enable Server Authentication	☐
User Name	
Password	
SMTP Server	126.smtp.com
SMTP Port	25
Enable SSL	☒
Sender	test01
Sender's Address	test01@126.com
Select Receivers	Receiver 1
Receiver	test02
Receiver's Address	test02@163.com
Enable Attached Picture	☒
Interval	2s

Figure 9.24 Configure Email Settings

6. Click the **Apply** button to save the Email settings.
7. You can click the **Test** button to test whether your Email settings work. The corresponding Attention message box will pop up.

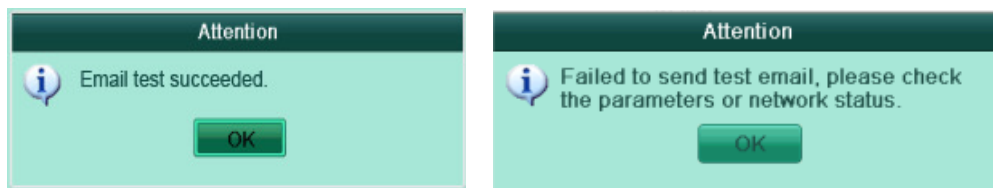


Figure 9.25 Email Testing Attention

9.3 Checking Network Traffic

Purpose:

You can check the network traffic to obtain real-time information of device such as linking status, MTU, sending/receiving rate, etc.

Steps:

1. Enter the Network Traffic interface.

Menu > Maintenance > Net Detect



Figure 9.26 Network Traffic Interface

2. You can view the sending rate and receiving rate information on the interface. The traffic data is refreshed every 1 second.

9.4 Network Detection

Purpose:

You can obtain network connecting status of device through the network detection function, including network delay, packet loss, etc.

9.4.1 Testing Network Delay and Packet Loss

Steps:

1. Enter the Network Traffic interface.
Menu > Maintenance > Net Detect
2. Click the **Network Detection** tab to enter the Network Detection menu.

Figure 9.27 Network Detection Interface

3. Enter the destination address in the text field of **Destination Address**.
4. Click the **Test** button to start testing network delay and packet loss. The testing result pops up on the window. If the testing is failed, the error message box will pop up as well.

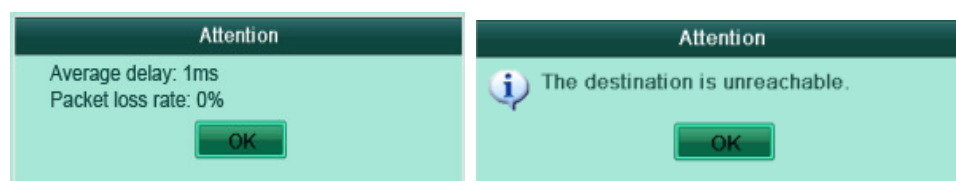


Figure 9.28 Testing Result of Network Delay and Packet Loss

9.4.2 Exporting Network Packet

Purpose:

By connecting the device to network, the captured network data packet can be exported to USB-flash disk and other local backup devices.

Steps:

1. Enter the Network Traffic interface.
Menu > Maintenance > Net Detect

2. Click the **Network Detection** tab to enter the Network Detection interface.
3. Select the backup device from the dropdown list of Device Name, as shown in Figure 9.28.



Click the **Refresh** button if the connected local backup device cannot be displayed. When it fails to detect the backup device, please check whether it is compatible with the device. You can format the backup device if the format is incorrect.

The screenshot shows the 'Network Detection' tab in a web interface. It has two main sections: 'Network Delay, Packet Loss Test' and 'Network Packet Export'. In the first section, 'Select NIC' is set to 'LAN1' and 'Destination Address' is '172.6.23.102'. In the second section, 'Device Name' is set to 'USB1-1'. Below these, there is a table with columns for NIC, IP, and Speed, showing 'LAN1', '172.6.23.42', and '4Kbps'. Buttons for 'Test', 'Refresh', and 'Export' are visible.

Network Delay, Packet Loss Test		
Select NIC	LAN1	
Destination Address	172.6.23.102	

Network Packet Export		
Device Name	USB1-1	

NIC	IP	Speed
LAN1	172.6.23.42	4Kbps

Figure 9.29 Export Network Packet

4. Click the **Export** button to start exporting.
5. After the exporting is complete, click **OK** to finish the packet export.

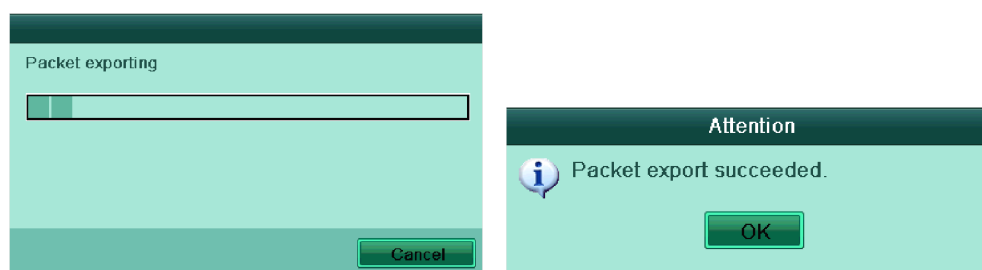


Figure 9.30 Packet Export Attention



Up to 1M data can be exported each time.

9.4.3 Checking Network Status

Purpose:

You can also check the network status and quick set the network parameters in this interface.

Steps:

Click **Status** on the right bottom of the page.

Traffic Network Detection Network Stat.

Network Delay, Packet Loss Test

Select NIC LAN1

Destination Address

Test

Network Packet Export

Device Name USB1-1

Refresh

Export

LAN1 172.6.21.71 11Kbps

Status Network Back

Figure 9.31 Checking Network Status

If the network is normal, the following message box pops out.

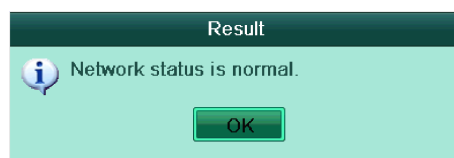


Figure 9.32 Network Status Checking Result

If the message box pops out with other information instead of this one, you can click **Network** button to show the quick setting interface of the network parameters.

Type	Bandwidth
Remote Live View	2,048Kbps
Remote Playback	0bps
Net Send Idle	238Mbps

Refresh

Figure 9.33 Network Parameters Configuration


9.4.4 Checking Network Statistics

Purpose:

You can check the network statistics to obtain the real-time information of the device.

Steps:

1. Enter the Network Statistics interface.
Menu > Maintenance> Net Detect
2. Click the **Network Stat.** tab to enter the Network Statistics menu.

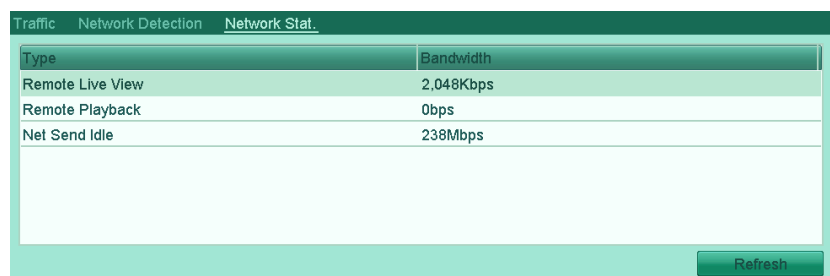

Traffic Network Detection <u>Network Stat.</u>	
Type	Bandwidth
Remote Live View	2,048Kbps
Remote Playback	0bps
Net Send Idle	238Mbps
Refresh	

Figure 9.34 Network Stat. Interface

3. View the bandwidth of Remote Live View, bandwidth of Remote Playback, bandwidth of Net Total Idle information.
4. Click **Refresh** button to get the latest bandwidth statistics.

C H A P T E R 10

HDD Management

10.1 Initializing HDDs


Purpose:

A newly installed hard disk drive (HDD) must be initialized before it can be used with your device.

Steps:

1. Enter the HDD Information interface.

Menu > HDD>General

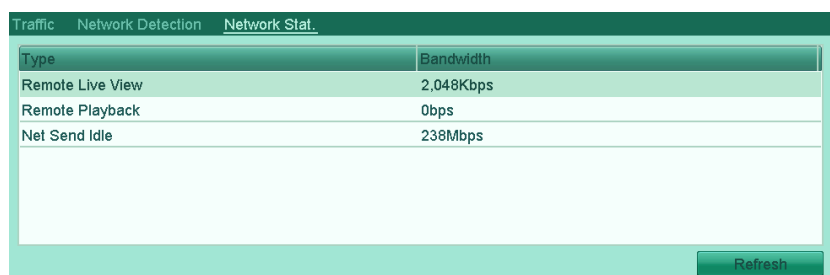

Type	Bandwidth
Remote Live View	2,048Kbps
Remote Playback	0bps
Net Send Idle	238Mbps

Refresh

Figure 10.1 HDD Information Interface

2. Select the HDD to be initialized.
3. Click the **Init** button.

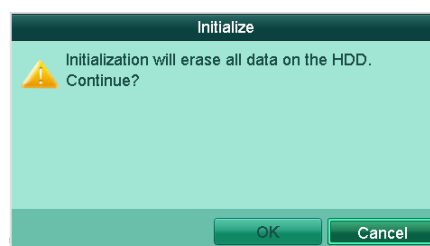


Figure 10.2 Confirm Initialization

4. Select the **OK** button to start initialization.
5. After the HDD has been initialized, the status of the HDD will change from *Uninitialized* to *Normal*.



Label	Capacity	Status	Property	Type	Free Space	Delete
1	931.51GB	Normal	R/W	Local	931GB	—

Figure 10.3 HDD Status Changes to Normal



Initializing the HDD will erase all data on it.

10.2 Configuring Quota Mode

Purpose

Each camera can be configured with allocated quota for the storage of recorded files.

Steps

1. Enter the Storage Mode interface.
Menu > HDD > Advanced
2. Set the **Mode** to **Quota**.



The device must be rebooted to activate the settings.

Storage Mode	
Mode	Quota
Camera	Analog 1
Used Record Capacity	0MB
HDD Capacity (GB)	931
Max. Record Capacity (GB)	0
Free Quota Space 931 GB	

Figure 10.4 Storage Mode Settings Interface

3. Enter the storage capacity in the text field of **Max. Record Capacity (GB)**.

Storage Mode	
Mode	Quota
Camera	Analog 1
Used Record Capacity	0MB
HDD Capacity (GB)	931
Max. Record Capacity (GB)	920
Free Quota Space 11 GB	

Figure 10.5 Configure Record Quota

4. You can copy the quota settings of the current camera to other cameras if required. Click the **Copy** button to enter the Copy Camera menu, as shown below.

Copy to	
☒ Analog	☐ A1 ☒ A2 ☒ A3 ☒ A4 ☒ A5 ☒ A6 ☒ A7 ☒ A8

Figure 10.6 Copy Settings to Other Camera(s)

5. Select the camera (s) to be configured with the same quota settings. You can also click the checkbox of **Analog** to select all cameras.
6. Click the **OK** button to finish the Copy settings and back to the Storage Mode interface.
7. Click the **Apply** button to apply the settings.



If the quota capacity is set to 0, then all cameras will use the total capacity of HDD for recording.

10.3 Checking HDD Status

Purpose:

You may check the status of the installed HDD on device so as to take immediate check and maintenance in case of HDD failure.

Checking HDD Status in HDD Information Interface

Steps:

1. Enter the HDD Information interface.
Menu > HDD>General
2. Check the status of each HDD which is displayed on the list.

☐ Label	Capacity	Status	Property	Type	Free Space	Delete
☐ 1	931.51GB	Normal	R/W	Local	931GB	—

Figure 10.7 View HDD Status (1)



If the status of HDD is *Normal* or *Sleeping*, it works normally. If the status is *Uninitialized* or *Abnormal*, please initialize the HDD before use. And if the HDD initialization is failed, please replace it with a new one.

Checking HDD Status in HDD Information Interface

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **HDD** tab to view the status of HDD displayed on the list.

Device Info						Camera	Record	Network	HDD
Label	Status	Capacity	Free Space	Property	Type				
1	Normal	931.51GB	931GB	R/W	Local				

Figure 10.8 View HDD Status (2)

10.4 Checking S.M.A.R.T. Information

Purpose:

The S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) is a monitoring system for HDD to detect and report on various indicators of reliability in the hopes of anticipating failures.

Steps:

1. Enter the S.M.A.R.T. Settings interface.
Menu > HDD > HDD Detect > S.M.A.R.T. Settings
2. Select the HDD to view its S.M.A.R.T. information list.



If you want to use the HDD even when the S.M.A.R.T. checking is failed, you can check the checkbox before the **Continue to use this disk when self-evaluation is failed** item.

3. Three self-tests of S.M.A.R.T are provided, including Short Test, Expanded Test and Conveyance Test.

You can select a self-test type and click to start self-test.

ID	Attribute Name	Status	Flags	Threshold	Value	Worst	Raw Value
0x1	Raw Read Error Rate	OK	2f	51	200	200	418
0x3	Spin Up Time	OK	27	21	150	107	5458
0x4	Start/Stop Count	OK	32	0	100	100	737
0x5	Reallocated Sector Count	OK	33	140	200	200	0
0x7	Seek Error Rate	OK	2e	0	200	200	0
0x9	Power-on Hours Count	OK	32	0	92	92	6429
0xa	Spin Up Retry Count	OK	32	0	100	100	0

Figure 10.9 S.M.A.R.T. Settings Interface

10.5 Detecting Bad Sector

Purpose:

The bad sectors of a HDD may cause the system to slow down when reading or writing data. You can detect the bad sectors of the HDD and thus to take immediate measures to repair it.

Steps:

1. Enter the Bad Sector Detection interface.

Menu>HDD>HDD Detect>Bad Sector Detection

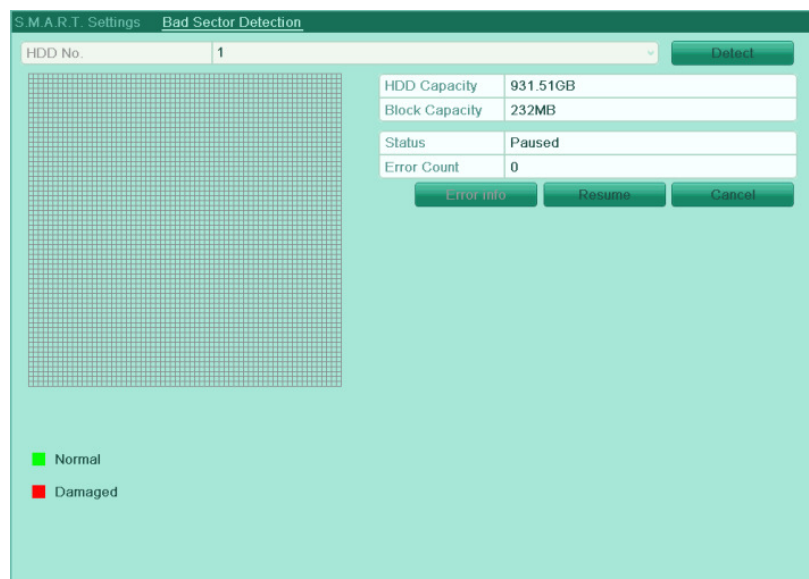


Figure 10.10 Bad Sector Detection

2. Click **Detect** to start detecting.

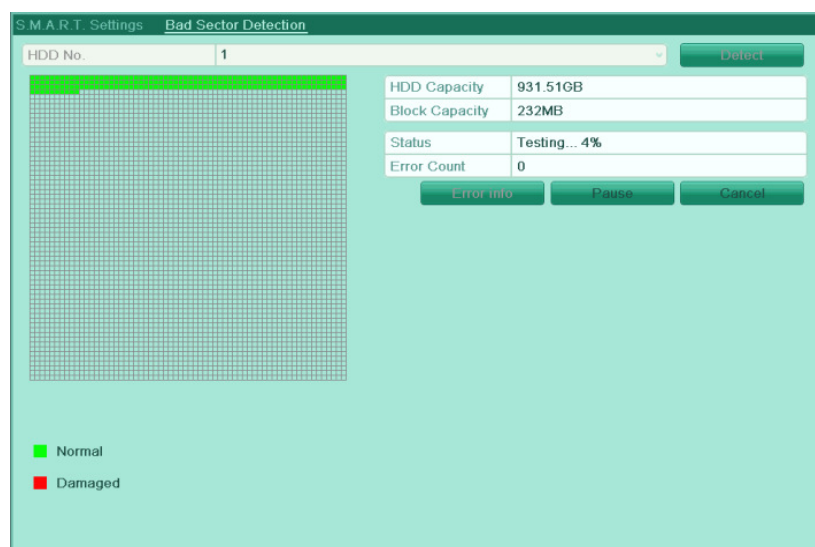


Figure 10.11 Bad Sector Detecting

3. You can click **Pause** to pause the detection and click **Resume** to resume the detection.
4. If there is any error information about the HDD, you can click **Error info** to view the information.

10.6 Configuring HDD Error Alarms

Purpose:

You can configure the HDD error alarms when the HDD status is *Uninitialized* or *Abnormal*.

Steps:

1. Enter the Exception interface.
Menu > Configuration > Exceptions
2. Select the Exception Type to **HDD Error** from the dropdown list.
3. Click the checkbox(s) below to select the HDD error alarm type (s).



The alarm type can be selected to: Audio Warning, Notify Surveillance Center, and Send Email. Please refer to *Chapter 8.5 Setting Alarm Response Actions*.

Exception	
Exception Type	HDD Error
Audible Warning	☒
Notify Surveillance Center	☒
Send Email	☒

Figure 10.12 Configure HDD Error Alarm

-
4. Click the **Apply** button to save the settings.

C H A P T E R 11

Camera Settings

11.1 Configuring OSD Settings

Purpose:

You can configure the OSD (On-screen Display) settings for the camera, including date /time, camera name, etc.

Steps:

1. Enter the OSD Configuration interface.
Menu > Camera > OSD
2. Select the camera to configure OSD settings.
3. Edit the Camera Name in the text field.
4. Configure the Display Name, Display Date and Display Week by clicking the checkbox.
5. Select the Date Format, Time Format and Display Mode.

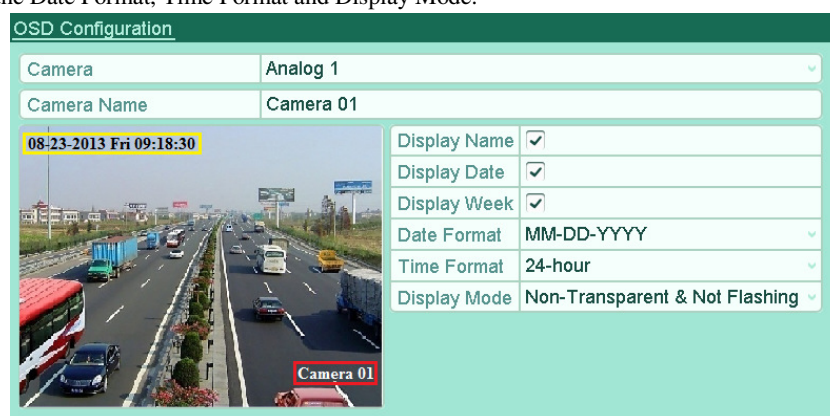


Figure 11.1 OSD Configuration Interface

6. You can use the mouse to click and drag the text frame on the preview window to adjust the OSD position.
7. Copy Camera Settings
 - 1) If you want to copy the OSD settings of the current camera to other cameras, click the **Copy** button to enter the Copy Camera interface.



Figure 11.2 Copy Settings to Other Cameras

- 2) Select the camera (s) to be configured with the same OSD settings. You can also click the checkbox of Analog to select all cameras.
- 3) Click the **OK** button to finish the Copy settings and back to the OSD Configuration interface.
8. Click the **Apply** button to apply the settings.



You can also click the **Restore** to restore the current OSD settings to the default parameters.

11.2 Configuring Privacy Mask

Purpose:

You are allowed to configure the four-sided privacy mask zones that cannot be viewed by the operator.

Steps:

1. Enter the Privacy Mask Settings interface.
Menu > Camera > Privacy Mask
2. Select the camera to set privacy mask.
3. Click the checkbox of **Enable Privacy Mask** to enable this feature.



Figure 11.3 Privacy Mask Settings Interface

4. Use the mouse to draw a zone on the window. The zones will be marked with different frame colors.



Up to 4 privacy mask zones can be configured, and the size of each area can be adjusted.

5. The configured privacy mask zones on the window can be cleared by clicking the corresponding Clear Zone1-4 icons on the right side of the window, or click **Clear All** to clear all zones.

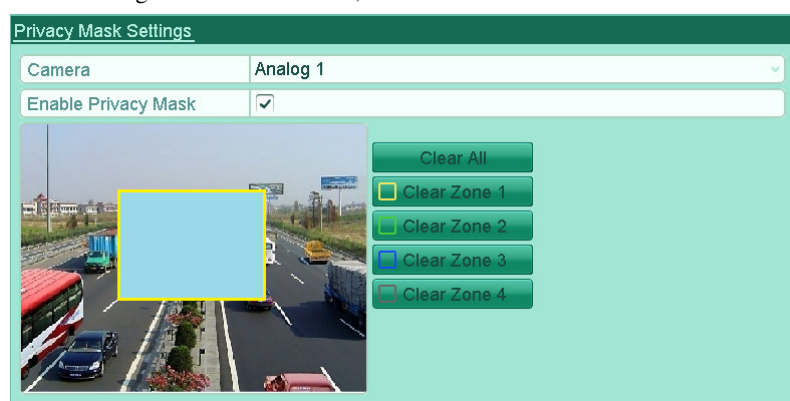


Figure 11.4 Set Privacy Mask Area

6. You can click the **Copy** button to copy the privacy mask settings of the current camera to other cameras. Please refer to step 7 of *Chapter 11.1 Configuring OSD Settings*.
7. Click the **Apply** button to save the settings.

11.3 Configuring Video Parameters

Steps:

1. Enter the Image Settings interface.
Menu > Camera > Image
2. Select the camera to set image parameters.
3. Set the period of a day for configuring independent image parameters so as to satisfy different light conditions, e.g., daylight and night time. Two periods can be configured. When you have configured Period 1, the Period 2 is remained as the *Other Time*.



Figure 11.5 Image Settings Interface

4. Select the mode from the drop-down menu according to different light conditions.
Four modes are selectable:
 - **Standard:** in general lighting conditions (default).
 - **Indoor:** the image is relatively smoother.
 - **Dim Light:** the image is smoother than the other three modes.
 - **Outdoor:** the image is relatively clearer and sharper. The degree of contrast and saturation is high.
5. Adjust the image parameters including the brightness, contrast, saturation, hue, sharpness and denoising level by moving the sliding bar or increasing/decreasing the value.



When you select different mode, corresponding default parameters are available. You can also adjust the value of the brightness, contrast, saturation and hue to 0~ 255, the sharpness to 0~ 15 and the denoising level to 0~ 5.

6. You can click the **Copy** button to copy the image settings of the current camera to other cameras. Please refer to step 7 of *Chapter 11.1 Configuring OSD Settings*.
7. On the Image Settings interface, click the **Apply** button to save the settings.



You can click the **Restore** button to restore the current image settings to default parameters.

CHAPTER 12

Device Management and Maintenance

12.1 Viewing System Information

12.1.1 Viewing Device Information

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **Device Info** tab to enter the Device Information menu to view the device name, model, serial No. ,
firmware version and encoding version.

Device Info	Camera	Record	Network	HDD
Device Name	Embedded Net DVR			
Model	DS-7108HWI-SL			
Serial No.	0820130313AAWR875623631WCVU			
Firmware Version	V2.2.9, Build 130813			
Encoding Version	V5.0, Build 130730			

Figure 12.1 Device Information Interface

12.1.2 Viewing Camera Information

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **Camera** tab to enter the Camera Information menu to view the status of each camera.

Device Info	Camera	Record	Network	HDD	
Camera	Camera Name	Status	Motion Detection	Video Tamperin.	Video Loss
A1	Camera 01	Enabled	Used	Not used	Not used
A2	Camera 02	Enabled	Used	Not used	Not used
A3	Camera 03	Enabled	Used	Not used	Not used
A4	Camera 04	Enabled	Used	Not used	Not used
A5	Camera 05	Enabled	Used	Not used	Not used
A6	Camera 06	Enabled	Used	Not used	Not used
A7	Camera 07	Enabled	Used	Not used	Not used
A8	Camera 08	Enabled	Used	Not used	Not used

Figure 12.2 Camera Information Interface

12.1.3 Viewing Record Information

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **Record** tab to enter the Record Information menu to view the recording status and encoding
parameters of each camera.

Device Info Camera Record Network HDD							
Camera	Recordin	Stream T	Frame Rate	Bitrate(Kbps)	Resolution	Record Ty	Encoding
A1	Not used	Video & ...	Full Frame	253/1792	960*480(WD1)	Event	
A2	Not used	Video	Full Frame	78/1792	960*480(WD1)	Normal	
A3	Not used	Video	Full Frame	78/1792	960*480(WD1)	Normal	
A4	Not used	Video	Full Frame	77/1792	960*480(WD1)	Normal	
A5	Not used	Video	Full Frame	77/1792	960*480(WD1)	Normal	
A6	Not used	Video	Full Frame	78/1792	960*480(WD1)	Normal	
A7	Not used	Video	Full Frame	77/1792	960*480(WD1)	Normal	
A8	Not used	Video	Full Frame	77/1792	960*480(WD1)	Normal	

Figure 12.3 Record Information Interface

12.1.4 Viewing Alarm Information



This function is not available for DPA-0448M/16128M model (customizable with alarm interface) only.

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **Alarm** tab to enter the Alarm Information interface to view the alarm information.

Device Info Camera Record Alarm Network HDD				
No.	Alarm Name	Alarm Type	Alarm Status	Triggered Camera
A<-1		N.O	Not used	
A<-2		N.O	Not used	
A<-3		N.O	Not used	
A<-4		N.O	Not used	
A<-5		N.O	Not used	
A<-6		N.O	Not used	
A<-7		N.O	Not used	
A<-8		N.O	Not used	
A->1		Not supported	Used	
A->2		Not supported	Used	
A->3		Not supported	Used	
A->4		Not supported	Used	

Figure 12.4 Alarm Information Interface

12.1.5 Viewing Network Information

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **Network** tab to enter the Network Information menu to view the network information.

Device Info		Camera	Record	Network	HDD
NIC		LAN1			
IPv4 Address		172.6.23.72			
IPv4 Subnet Mask		255.255.255.0			
IPv4 Default Gateway		172.6.23.1			
IPv6 Address 1		fe80::8ee7:48ff:fe28:bb4/64			
IPv6 Address 2					
IPv6 Default Gateway					
Preferred DNS Server		8.8.8.8			
Alternate DNS Server		0.0.0.0			
Enable DHCP		Disabled			
Enable PPPOE		Disabled			
PPPOE Address					
PPPOE Subnet Mask					
PPPOE Default Gateway					

Figure 12.5 Network Information Interface

12.1.6Viewing HDD Information

Steps:

- 1. Enter the System Information interface.
Menu > Maintenance > System Info
- 2. Click the **HDD** tab to enter the HDD Information menu to view the HDD status, free space, property, etc.

Device Info		Camera	Record	Network	HDD
Label	Status	Capacity	Free Space	Property	Type
1	Normal	931.51GB	931GB	R/W	Local
Total Capacity		931.51GB			
Free Space		931GB			

Figure 12.6 HDD Information Interface

12.2 Searching & Exporting Log Files

Purpose:

The operation, alarm, exception and information of the device can be stored in log files, which can be viewed and exported at any time.

Steps:

1. Enter the Log Search interface.

Menu > Maintenance > Log Information

Log Search		Log Export	
Start Time	2013-08-23	00:00:00	
End Time	2013-08-23	23:59:59	
Major Type	All		
Minor Type	All		

No.	Major Type	Time	Minor Type	Paramet...	Play	Details
-----	------------	------	------------	------------	------	---------

Total: 0 P: 1/1

Export Search Back

Figure 12.7 Log Search Interface

2. Set the log search conditions to refine your search, including the Start Time, End Time, Major Type and Minor Type.
3. Click the **Search** button to start searching log files.
4. The matched log files will be displayed on the list shown below.



Up to 2000 log files can be displayed each time.

Log Search Log Export						
Start Time	08-24-2013		00:00:00			
End Time	08-24-2013		23:59:59			
Major Type	All					
Minor Type	All					
No.	Major Type	Time	Minor Type	Paramet...	Play	Details
1	Information	08-24-2013 14:57:27	Start Recording	N/A		
2	Information	08-24-2013 14:57:27	Start Recording	N/A		
3	Information	08-24-2013 14:57:27	Start Recording	N/A		
4	Information	08-24-2013 14:57:27	Start Recording	N/A		
5	Information	08-24-2013 14:57:27	Start Recording	N/A		
6	Information	08-24-2013 14:57:27	Start Recording	N/A		
7	Information	08-24-2013 14:57:27	Start Recording	N/A		
8	Information	08-24-2013 14:57:27	HDD S.M.A.R.T.	N/A		
9	Information	08-24-2013 14:57:27	Start Recording	N/A		
10	Operation	08-24-2013 14:57:46	Local Operation:...	N/A		
11	Operation	08-24-2013 14:57:48	Local Operation:...	N/A		
Total: 11 P: 1/1						

Figure 12.8 Log Search Results

5. You can click the  button of each log or double click it to view its detailed information. And you can also click the  button to view the related video files if available.

Log Information	
Time	08-24-2013 15:33:04
Type	Operation-Local Operation: Playback By Time
Local User	admin
Host IP Address	N/A
Parameter Type	N/A
Camera No.	N/A
Description:	
Playback mode: By log	
Previous Next OK	

Figure 12.9 Log Details

6. If you want to export the log files, click the **Export** button to enter the Export menu.

You can also export all the log files stored in the HDD.

- (1) Enter the Log Export interface.

Menu > Maintenance > Log Information>Log Export

Log Search Log Export					
Label	Capacity	Status	Property	Type	Free Space
1	931.51GB	Normal	R/W	Local	931GB

Figure 12.10 Log Export Interface

- (2) Check ☒ checkbox to select the HDD and click **Export** to enter the export interface.

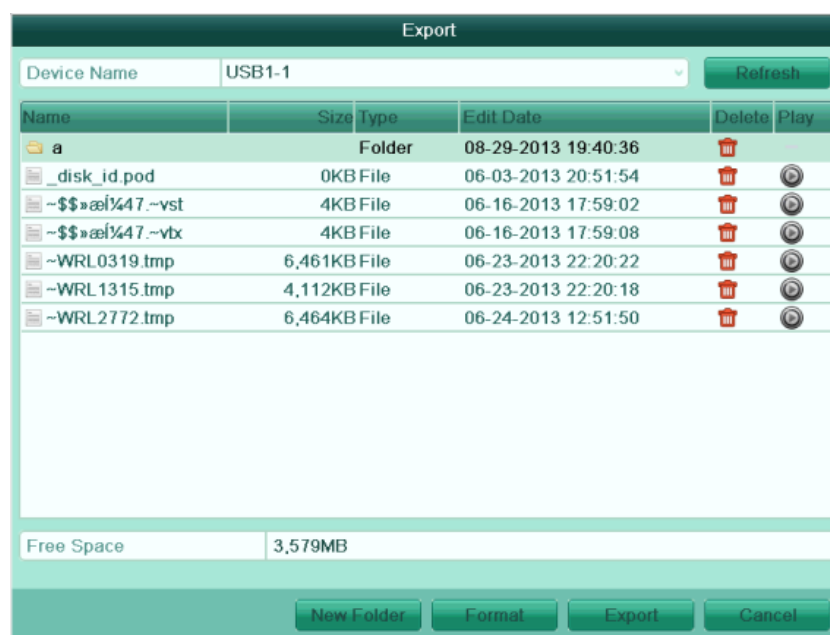


Figure 12.11 Export Log Files

7. Select the backup device from the dropdown list of **Device Name**.
8. Click the **Export** to export the log files to the selected backup device.

You can click the **New Folder** button to create new folder in the backup device, or click the **Format** button to format the backup device before log export.



- Please connect the backup device to device before operating log export.
- The log files exported to the backup device are named by exporting time, e.g.,
20110514124841logBack.txt.

12.3 Importing/Exporting Configuration Files

Purpose:

The configuration files of the device can be exported to local device for backup; and the configuration files of one device can be imported to multiple device devices if they are to be configured with the same parameters.

Steps:

1. Enter the Import/Export Configuration File interface.
Menu > Maintenance > Import/Export

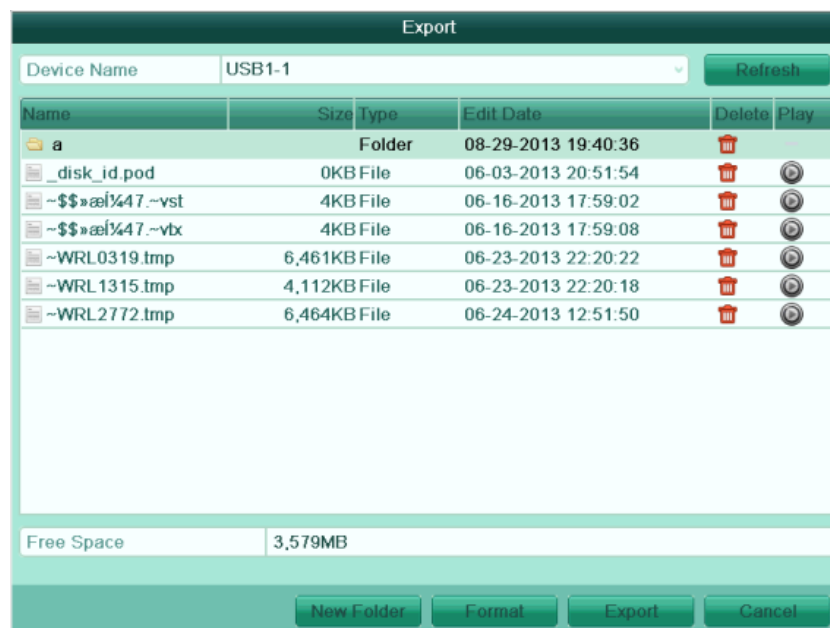


Figure 12.12 Import/Export Config File

2. Click the **Export** button to export configuration files to the selected local backup device.
3. To import a configuration file, select the file from the selected backup device and click the **Import** button.
After the import process is completed, you must reboot the device.



After having finished the import of configuration files, the device will reboot automatically.

12.4 Upgrading System

Purpose:

The firmware on your device can be upgraded by local backup device or remote FTP server.

12.4.1 Upgrading by Local Backup Device

Steps:

1. Connect your device with a local backup device where the update firmware file is located.
2. Enter the Upgrade interface.
Menu > Maintenance > Upgrade
3. Click the **Local Upgrade** tab to enter the local upgrade menu.

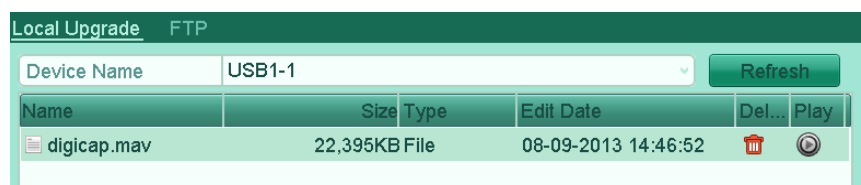


Figure 12.13 Local Upgrade Interface

4. Select the update file from the backup device.
5. Click the **Upgrade** button to start upgrading.
6. After the upgrading is complete, reboot the device to activate the new firmware.

12.4.2 Upgrading by FTP

Before you start:

Ensure the network connection of the PC (running FTP server) and the device is valid and correct. Run the FTP server on the PC and copy the firmware into the corresponding directory of your PC.



Refer to the user manual of the FTP server to set the FTP server on your PC and put the firmware file into the directory as required.

Steps:

1. Enter the Upgrade interface.
Menu > Maintenance > Upgrade
2. Click the **FTP** tab to enter the local upgrade interface.




Figure 12.14 FTP Upgrade Interface

3. Enter the FTP Server Address in the text field.
4. Click the **Upgrade** button to start upgrading.
5. After the upgrading is complete, reboot the device to activate the new firmware.

12.5 Restoring Default Settings

Steps:

1. Enter the Default interface.

Menu > Maintenance > Default

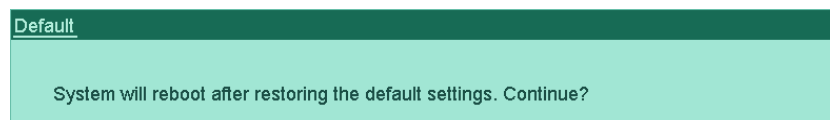


Figure 12.15 Restore Factory Default

2. Click the **OK** button to restore the default settings.



Except the network parameters (including IP address, subnet mask, gateway, MTU and server port), all other parameters of the device will be restored to factory default settings.

C H A P T E R 1 3

Others

13.1 Configuring General Settings

Purpose:

You can configure the BNC output standard, VGA output resolution, mouse pointer speed, etc.

Steps:

1. Enter the General Settings interface.

Menu > Configuration > General

2. Select the **General** tab.

General	DST Settings	More Settings
Language	English	
CVBS Output Standard	PAL	
Resolution	1024*768/60HZ	
Time Zone	{GMT+08:00} Beijing, Urumqi, Singapore	
Date Format	MM-DD-YYYY	
System Date	08-24-2013	
System Time	15:59:51	
Mouse Pointer Speed	<input type="range"/>	
Enable Wizard	☒	
Enable ID Authentication	☐	


Figure 13.1 General Settings Interface

3. Configure the following settings:
 - **Language:** The default language used is *English*.
 - **CVBS Output Standard:** Select the CVBS output standard to NTSC or PAL, which must be the same with the video input standard.
 - **Resolution:** Select the HDMI/VGA output resolution, which must be the same with the resolution of the monitor screen.
 - **Time Zone:** Select the time zone.
 - **Date Format:** Set the date format.
 - **System Date:** Select the system date.
 - **System Time:** Set the system time.
 - **Mouse Pointer Speed:** Set the speed of mouse pointer; 4 levels are configurable.
 - **Enable Wizard:** Enable/disable the Wizard when the device starts up.
 - **Enable ID Authentication:** Enable/disable the use of the login password.
4. Click the **Apply** button to save the settings.

13.2 Configuring DST Settings

Steps:

1. Enter the General Settings interface.
Menu >Configuration>General
2. Choose **DST Settings** tab.

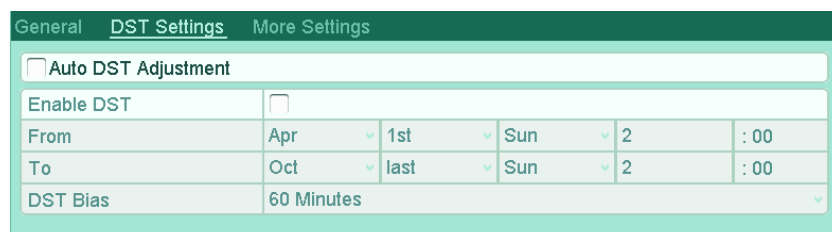

General <u>DST Settings</u> More Settings						
☐ Auto DST Adjustment						
Enable DST	☐					
From	Apr	1st	Sun	2	: 00	
To	Oct	last	Sun	2	: 00	
DST Bias	60 Minutes					

Figure 13.2 DST Settings Interface

You can check the checkbox before the **Auto DST Adjustment** item.

Or you can manually check the Enable DST checkbox, and then set the date of the DST period.

13.3 Configuring More Settings

Steps:

1. Enter the General Settings interface.
Menu > Configuration > General
2. Click the **More Settings** tab to enter the More Settings interface.

General	DST Settings	More Settings
Device Name	Embedded Net DVR	
Device No.	255	
CVBS Output Brightness	<input type="range"/>	
Auto Logout	Never	
Menu Output Mode	Auto	

Figure 13.3 More Settings Interface

3. Configure the following settings:
 - **Device Name:** Edit the name of device.
 - **Device No.:** Edit the serial number of device. The Device No. can be set in the range of 1~255, and the default No. is 255.
 - **CVBS Output Brightness:** Adjust the video output brightness.
 - **Operation Timeout:** Set timeout time for menu inactivity. E.g., when the timeout time is set to 5 *Minutes*, the system will exit from the current operation menu to live view screen after 5 minutes of menu inactivity.
 - **Menu Output Mode:** Select the menu output mode to Auto, HDMI/VGA or Main CVBS.



- When you select **Auto**, the device can automatically detect the HDMI/VGA output as the main output and the CVBS output as the auxiliary output when it starts up.
 - After you have changed the output mode, you should restart the device to activate the new settings.
 - **Main CVBS Scaling:** Enable/disable video output scaling for main CVBS video output.
4. Click the **Apply** button to save the settings.

13.4 Managing User Accounts

Purpose:


There is a default account in the device: *Administrator*. The *Administrator* user name is *admin* and the password is *12345*. The *Administrator* has the permission to add and delete user and configure user parameters.

13.4.1 Adding a User

Steps:

1. Enter the User Management interface.


Menu > Configuration > User

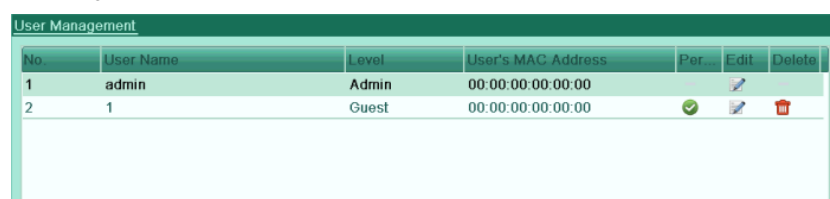

No	User Name	Level	User's MAC Address	Per...	Edit	Delete
1	admin	Admin	00:00:00:00:00:00			
2	1	Guest	00:00:00:00:00:00	✓		

Figure 13.4 User Management Interface

2. Click the **Add** button to enter the Add User interface.

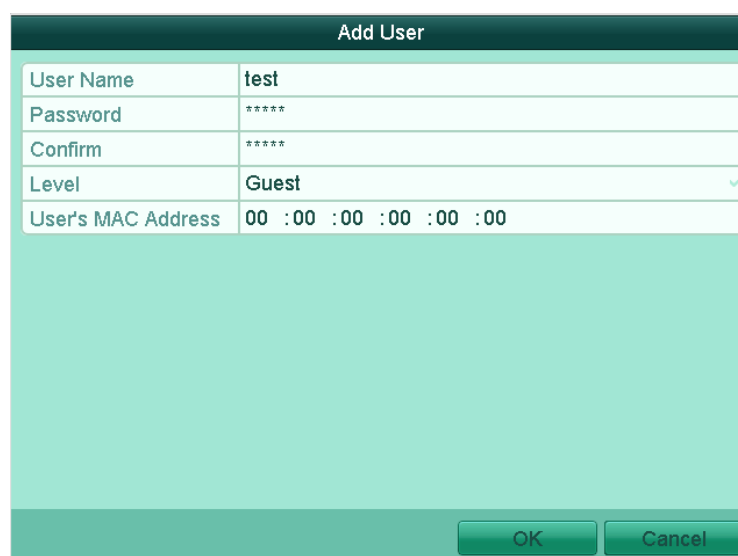

Add User	
User Name	test
Password	*****
Confirm	*****
Level	Guest
User's MAC Address	00 : 00 : 00 : 00 : 00 : 00

OK Cancel

Figure 13.5 Add User Menu

3. Enter the information for new user, including **User Name**, **Password**, **Level** and **User's MAC Address**.
Level: Set the user level to Operator or Guest. Different user levels have different operating permission.
 - **Operator:** The *Operator* user level has permission of Local Log Search in Local Configuration, Remote Log Search and Two-way Audio in Remote Configuration and all operating permission in Camera Configuration.
 - **Guest:** The *Guest* user has permission of Local Log Search in Local Configuration, Remote Log Search in Remote Configuration and only has the local/remote playback in the Camera Configuration.

User's MAC Address: The MAC address of the remote PC which logs onto the device. If it is configured and enabled, it only allows the remote user with this MAC address to access the device.

4. Click the **OK** button to save the settings and go back to the User Management interface. The added new user will be displayed on the list.

No.	User Name	Level	User's MAC Address	Pe...	Edit	Del...
1	admin	Admin	00:00:00:00:00:00			
2	test1	Guest	00:00:00:00:00:00	✓		
3	test2	Operator	00:00:00:00:00:00	✓		

Figure 13.6 Added User Listed in User Management Interface

5. Select the user from the list and then click the  button to enter the Permission settings interface.

Permission

Local Configuration Remote Configuration Camera Configuration

☒ Local Log Search

☐ Local Parameters Settings

☐ Local Advanced Operation

☐ Local Shutdown / Reboot

Apply OK Cancel

Figure 13.7 User Permission Settings Interface

6. Set the operating permission of Local Configuration, Remote Configuration and Camera Configuration for the user.

Local Configuration

- Local Log Search: Searching and viewing logs and system information of device.
- Local Parameters Settings: Configuring parameters, restoring factory default parameters and importing/exporting configuration files.
- Local Advanced Operation: Operating HDD management (initializing HDD, setting HDD property), upgrading system firmware.
- Local Shutdown /Reboot: Shutting down or rebooting the device.

Remote Configuration

- Remote Log Search: Remotely viewing logs that are saved on the device.
- Remote Parameters Settings: Remotely configuring parameters, restoring factory default parameters and importing/exporting configuration files.
- Two-Way Audio: Realizing two-way radio between the remote client and the device.
- Remote Alarm Control: Remotely arming (notify alarm and exception message to the remote client).

- Remote Advanced Operation: Remotely operating HDD management (initializing HDD), upgrading system firmware.
- Remote Shutdown/Reboot: Remotely shutting down or rebooting the device.

Camera Configuration

- Remote Live View: Remotely viewing live video of the selected camera (s).
- Local Manual Operation: Locally starting/stopping manual recording of the selected camera (s).
- Remote Manual Operation: Remotely starting/stopping manual recording of the selected camera (s).
- Local Playback: Locally playing back recorded files of the selected camera (s).
- Remote Playback: Remotely playing back recorded files of the selected camera (s).
- Local Video Export: Locally exporting recorded files of the selected camera (s).



You should select the camera (s) on the Camera Configuration interface for the operation permission configured.

7. Click the **OK** button to save the settings and exit interface.



Only the *admin* user account has the permission of restoring factory default parameters.

13.4.2 Deleting a User

Steps:

1. Enter the User Management interface.
Menu > Configuration > User
2. Select the user to be deleted from the list.

User Management						
No.	User Name	Level	User's MAC Address	Pe...	Edit	Del...
1	admin	Admin	00:00:00:00:00:00	—		—
2	test1	Guest	00:00:00:00:00:00			
3	test2	Operator	00:00:00:00:00:00			

Figure 13.8 Delete a User

3. Click the icon to delete the selected user.

13.4.3 Editing a User

Steps:

1. Enter the User Management interface.
Menu > Configuration > User
2. Select the user to be edited from the list.

User Management						
No.	User Name	Level	User's MAC Address	Pe...	Edit	Del...
1	admin	Admin	00:00:00:00:00:00	—		—
2	test1	Guest	00:00:00:00:00:00			
3	test2	Operator	00:00:00:00:00:00			

Figure 13.9 Edit a User

3. Click the icon to enter the Edit User interface.

Edit User	
User Name	test2
Change Password	☐
Password	
Confirm	
Level	Operator
User's MAC Address	00 : 00 : 00 : 00 : 00 : 00
OK Cancel	

Figure 13.10 Edit User Interface

4. Edit the user information, including user name, password, level and MAC address.
 5. Click the **OK** button to save the settings and exit the menu.

13.4.4 Changing Password of Admin

Purpose:

The password of the *admin* user account can be changed in the User Management menu.

Steps:


1. Enter the User Management interface.

Menu > Configuration > User

User Management						
No.	User Name	Level	User's MAC Address	Pe...	Edit	Del...
1	admin	Admin	00:00:00:00:00:00	—		—
2	test1	Guest	00:00:00:00:00:00			
3	test2	Operator	00:00:00:00:00:00			

Figure 13.11 Change Password

2. Select the *admin* user and click  to change the password.

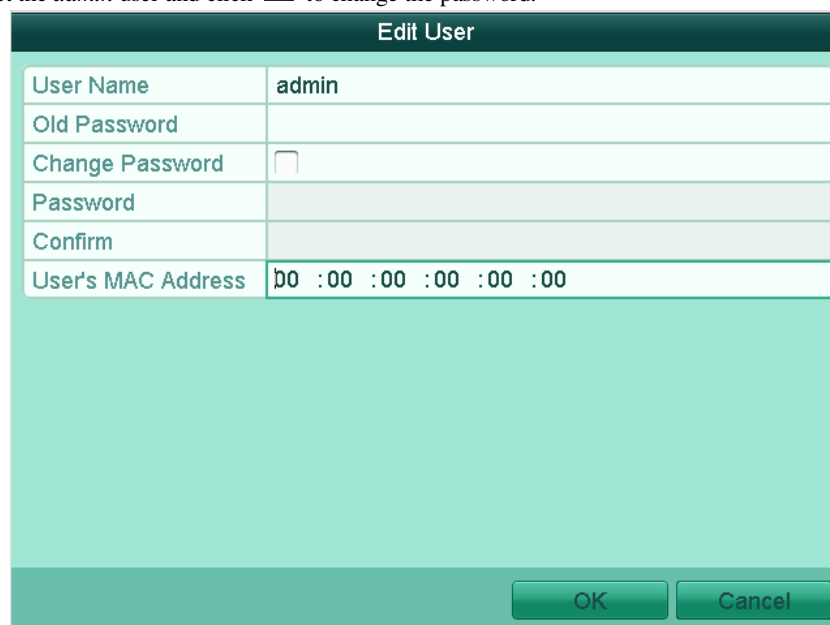

Edit User	
User Name	admin
Old Password	
Change Password	☒
Password	
Confirm	
User's MAC Address	b0 :00 :00 :00 :00 :00

OK Cancel

Figure 13.12 Change Password

3. Enter the old password, check ☒ checkbox, enter new password and confirm password on the menu.
4. Click **OK** to save the settings and exit the menu.

13.5 Logging out/Shutting down/Rebooting Device

Steps:

1. Enter the Shutdown interface.

Menu > Shutdown

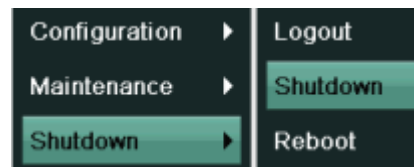


Figure 13.13 Shutdown Menu

2. Click the **Logout** button to log out, or
Click the **Shutdown** button to shut down the device, or
Click the **Reboot** button to reboot the device.



After you have logged out the system, menu operation on the screen is invalid. It is required a user name and password to login the system.

C H A P T E R 1 4

Appendix

Glossary

- **Dual Stream:** Dual stream is a technology used to record high resolution video locally while transmitting a lower resolution stream over the network. The two streams are generated by the device, with the main stream having a maximum resolution of 4CIF and the sub-stream having a maximum resolution of CIF.
- **DVR:** Acronym for Digital Video Recorder. A DVR is device that is able to accept video signals from analog cameras, compress the signal and store it on its hard drives.
- **HDD:** Acronym for Hard Disk Drive. A storage medium which stores digitally encoded data on platters with magnetic surfaces.
- **DHCP:** Dynamic Host Configuration Protocol (DHCP) is a network application protocol used by devices (DHCP clients) to obtain configuration information for operation in an Internet Protocol network.
- **HTTP:** Acronym for Hypertext Transfer Protocol. A protocol to transfer hypertext request and information between servers and browsers over a network
- **PPPoE:** PPPoE, Point-to-Point Protocol over Ethernet, is a network protocol for encapsulating Point-to-Point Protocol (PPP) frames inside Ethernet frames. It is used mainly with ADSL services where individual users connect to the ADSL transceiver (modem) over Ethernet and in plain Metro Ethernet networks.
- **DDNS:** Dynamic DNS is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.
- **Hybrid DVR:** A hybrid DVR is a combination of a DVR and NVR.
- **NTP:** Acronym for Network Time Protocol. A protocol designed to synchronize the clocks of computers over a network.
- **NTSC:** Acronym for National Television System Committee. NTSC is an analog television standard used in such countries as the United States and Japan. Each frame of an NTSC signal contains 525 scan lines at 60Hz.
- **NVR:** Acronym for Network Video Recorder. An NVR can be a PC-based or embedded system used for centralized management and storage for IP cameras, IP Domes and other DVRs.
- **PAL:** Acronym for Phase Alternating Line. PAL is also another video standard used in broadcast televisions systems in large parts of the world. PAL signal contains 625 scan lines at 50Hz.
- **USB:** Acronym for Universal Serial Bus. USB is a plug-and-play serial bus standard to interface devices to a host computer.

FAQ

- **Why does my device make a beeping sound after booting?**

The possible reasons for the warning beep on the device are as follows:

- a) There is no HDD installed in the device.
- b) The HDD is not initialized.
- c) HDD error

To cancel the beeping sound and use the device without HDD, enter the Exception Settings interface. For detailed information, see *Chapter 8.4 Handling Exception*.

- **Why is there no video recorded after setting the motion detection?**

If there are no recorded video after setting the motion detection, please check:

- a) The recording schedule is set up correctly by following the steps listed in *Chapter 5.2 Configuring Record Schedule*.
- b) The motion detection area is configured correctly (See *Chapter 5.3 Configuring Motion Detection Record*).
- c) The channels are being triggered for motion detection (See *Chapter 5.3 Configuring Motion Detection Record*)).

- **Why doesn't the device detect my USB export device for exporting recorded files?**

There's a chance that the device and your USB device is not compatible. Please refer to our company's website to view a list of compatible devices.

- **My device is in Live View mode and the menu does not show up. It does not respond to the mouse operation.**

Your device may be in auxiliary mode. Please refer to *Chapter 3.2.3 Main/Aux Output Switching* for the operation of main/aux output switching.